


CRUISE CONTROL MAIN SWITCH COMPONENTS

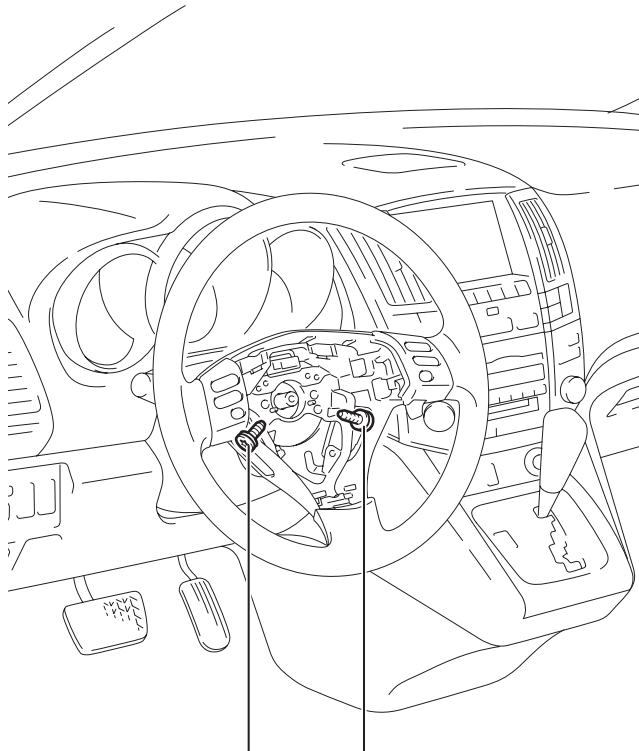

 
8.8 (90, 78 in.*lbf)

STEERING WHEEL NO.2 COVER LOWER




STEERING WHEEL NO.3 COVER LOWER

2.4 (25, 21 in.*lbf)



CRUISE CONTROL MAIN SWITCH

HORN BUTTON ASSEMBLY


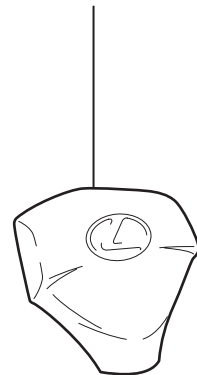


CC


N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
 Wait for 90 seconds after disconnecting the cable to prevent the airbag working. (See page [RS-387](#))
2. **REMOVE STEERING WHEEL NO.3 COVER LOWER**
 (See page [RS-387](#))
3. **REMOVE STEERING WHEEL NO.2 COVER LOWER**
 (See page [RS-387](#))
4. **REMOVE HORN BUTTON ASSEMBLY** (See page [RS-388](#))
5. **REMOVE CRUISE CONTROL MAIN SWITCH**
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws.

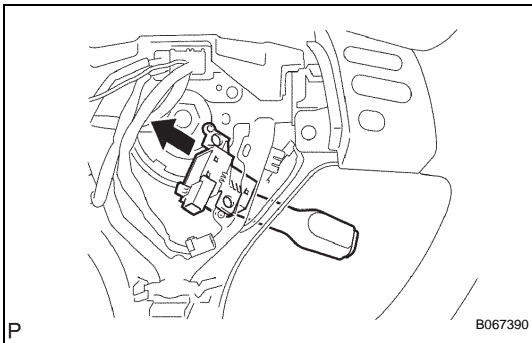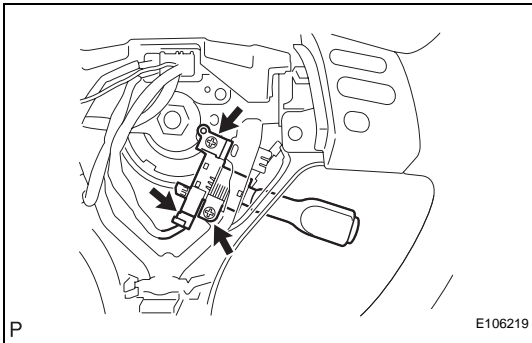

- (c) Pull the cruise control main switch in the arrow direction to remove it.

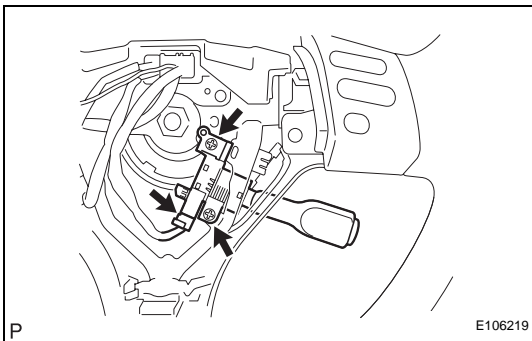

INSTALLATION

1. **INSTALL CRUISE CONTROL MAIN SWITCH**
 - (a) Install the cruise control main switch with the 2 screws.
Torque: 2.4 N*m (25 kgf*cm, 21 in.*lbf)
 - (b) Connect the connector.
2. **INSTALL HORN BUTTON ASSEMBLY** (See page [RS-388](#))
3. **INSTALL STEERING WHEEL NO.3 COVER LOWER**
 (See page [RS-389](#))
4. **INSTALL STEERING WHEEL NO.2 COVER LOWER**
 (See page [RS-389](#))
5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
6. **INSPECT SRS WARNING LIGHT**
 (See page [RS-25](#))