

# DIFFERENTIAL OIL

## ADJUSTMENT

### 1. INSPECT AND ADJUST DIFFERENTIAL OIL

- (a) Stop the vehicle on a level place.
- (b) Remove the differential filler plug and gasket.
- (c) Check that the oil surface is within 5 mm (0.20 in.) of the lowest position of the inner surface of the differential filler plug opening.

#### NOTICE:

- Excessively large or small amounts of oil may cause trouble.
- After replacing oil, drive the vehicle and check the oil level.

#### HINT:

If necessary, fill the rear differential carrier with hypoid gear oil.

- (d) Check for oil leakage when the oil level is low.
- (e) Install the differential filler plug and a new gasket.

**Torque: 49 N\*m (500 kgf\*cm, 36 ft.\*lbf)**

