

# POWER DOOR LOCK CONTROL SYSTEM


## PRECAUTION

### NOTICE:

When disconnecting the cable from the negative (-) battery terminal, initialize the following system after the cable is reconnected.

| System   | See procedure                                 |
|--|---|
| Lighting system (Adaptive Front-Lighting System) | <a href="#">LI-17</a>                         |
| Sliding roof control system                      | <a href="#">RF-4</a><br><a href="#">RF-22</a> |
| Power window control system                      | <a href="#">WS-12</a>                         |
| Power back door system                           | <a href="#">DL-8</a>                          |

# PARTS LOCATION

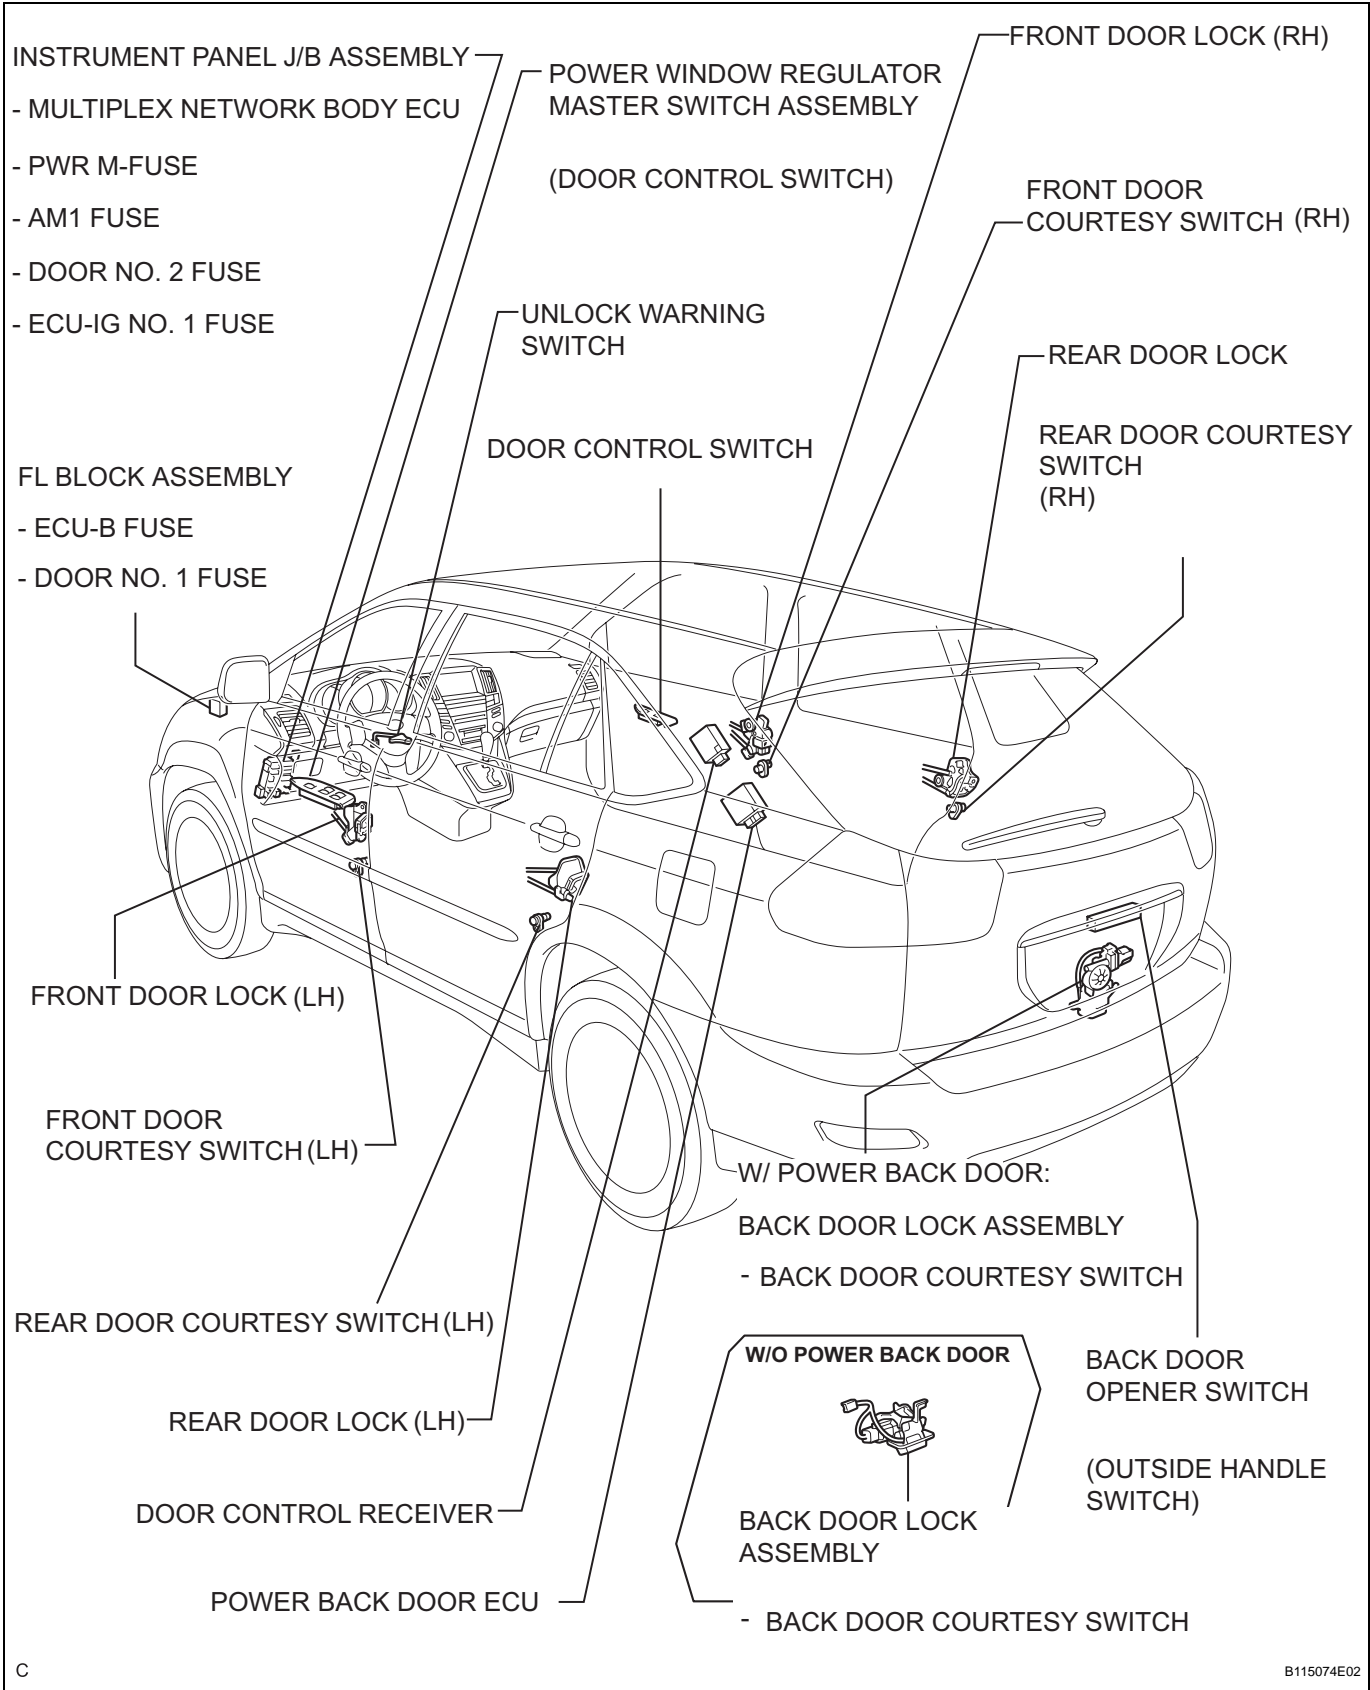

DL