

---

## OPERATION CHECK

### 1. REMOVE CHECK FUNCTION

- (a) Check that the key reminder warning buzzer sounds.
  - (1) With the driver side door closed, insert the key into the ignition key cylinder and then turn the key to LOCK or ACC.
  - (2) Check that the buzzer sounds intermittently if the driver side door is opened.
- (b) Check that the key reminder warning buzzer stops.
  - (1) Check that the buzzer stops sounding if any of the following operations is performed while the buzzer is sounding:
    - Close the driver side door (front door courtesy light switch is off).
    - Turn the ignition switch ON.
    - Pull out the key from the ignition key cylinder.

**PROBLEM SYMPTOMS TABLE****KEY REMINDER WARNING SYSTEM**

Symptom	Suspected area	See page
Key reminder buzzer does not sound	1. Unlock warning switch circuit	<a href="#">DL-107</a>
	2. Front door courtesy light switch circuit (Driver side)	<a href="#">LI-130</a>
	3. Combination meter assembly (Key reminder buzzer)	<a href="#">ME-21</a>
	4. Body ECU	-