



UNLOCK WARNING SWITCH

INSPECTION

1. INSPECT UNLOCK WARNING SWITCH ASSEMBLY

- (a) Remove the unlock warning switch assembly .
- (b) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Switch Position	Specified Condition
1 - 2	Free	10 k Ω or higher
1 - 2	Pushed	Below 1 Ω