

CUSTOMIZE PARAMETERS

1. CUSTOMIZING FUNCTION WITH INTELLIGENT TESTER (REFERENCE)

HINT:

The following items can be customized.

NOTICE:

- After confirming whether the items requested by the customer are applicable or not for customization, perform customize operations.
- Be sure to record the current settings before customizing.
- When troubleshooting, make sure that the item in question is not set to "OFF" as a result of customization.

BODY

Display (Item)	Default	Contents	Setting
AUTO LOCK DELAY	30s	Function that selects AUTO LOCK time 30 sec. or 60 sec.	30s/60s
AUTO LOCK (Auto Lock)	OFF	Function that locks doors when vehicle reaches a vehicle speed of 20 km/h (13 mph)	ON/OFF
UNLK/KEY TWICE (Unlock w/ 2 times D key operation)	ON	<ul style="list-style-type: none"> • Function that unlocks only driver side door when driver side door key cylinder is turned to unlock once and unlocks all the doors when it is turned to unlock twice • In OFF setting, turning it once unlocks all doors 	ON/OFF
ALL UNLK/OPN-CL (All unlock w/ D door open-close)	OFF	Function that unlocks all other doors when opening driver side door within 10 seconds after turning the ignition switch off from ON	ON/OFF
UNLOCK/PARK (Unlock w/ IG ON, shift P, speed 0 (0 mph))	OFF	Function that unlocks doors when lever is shifted to P position from any position other than P while the ignition switch is ON	ON/OFF
AUTO LOCK/SHIFT (Auto Lock/shift not P)	ON	Function that locks doors when lever is shifted from P position to any position other than P	ON/OFF

INITIALIZATION

1. BACK DOOR LOCK

- (a) When the battery is reconnected:
If the back door is locked and therefore cannot be opened, it is necessary to unlock the back door using the door control switch or transmitter switch.
- (b) When the back door lock is replaced:
The power back door ECU cannot receive a switch signal from the lock. This may cause the power back door system to enter fail-safe mode and DTC B2215 to set, as well as to make the system disabled. When the lock is replaced, be sure to perform the following: first properly connect the lock, second clear the DTC from memory using the intelligent tester and finally recheck that no DTC is output.