

DRIVE SHAFT SYSTEM

PRECAUTION

NOTICE:

When disconnecting the negative(-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See procedure
Lighting System (Adaptive Front-lighting System)	LI-17
Power Window Control System	WS-12
Power Back Door System	ED-33
Sliding Roof System	RF-4

1. NOTICE OF REMOVING AND INSTALLING FRONT DRIVE SHAFT ASSEMBLY RH

- (a) When removing and installing the front drive shaft assembly RH in a 4WD vehicle, be sure to first drain all the transaxle oil and transfer oil. If removal and installation is carried out without draining these oils, the transfer oil will flow into the transaxle side. Extensive will be required if the two oils mix.

PROBLEM SYMPTOMS TABLE

Use the table below to help find the cause of the problem.
Check each part. If necessary, replace these parts.

DRIVE SHAFT SYSTEM

Symptom	Suspected area	See page
Front wheel shimmy	Front drive shaft (Worn)	DS-10
Rear wheel shimmy	Rear drive shaft (Worn) (4WD)	DS-23