

INSTALLATION

1. INSTALL CHARCOAL CANISTER ASSEMBLY

Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)

2. INSTALL FRONT FLOOR HEAT INSULATOR NO.3

Torque: 4.9 N*m (50 kgf*cm, 43 in.*lbf)

3. INSTALL EXHAUST PIPE ASSEMBLY CENTER

(a) Compression spring inspection

- (1) Using vernier calipers, measure the free length of the compression spring.

Minimum length:

Center x Front No. 3:

41.5 mm (1.634 in.)

Center x Tail:

40.5 mm (1.594 in.)

If the free length is less than minimum, replace the compression spring.



- (b) Install 2 new gaskets to the exhaust pipe front No. 3 and the exhaust pipe center as shown in the illustration.

- (c) Install the exhaust pipe center to the 4 exhaust pipe supports.

- (d) Tighten the 4 bolts and 4 compression springs.

Torque: 48 N*m (490 kgf*cm, 35 ft.*lbf)

4. CHECK FOR EXHAUST GAS LEAKS

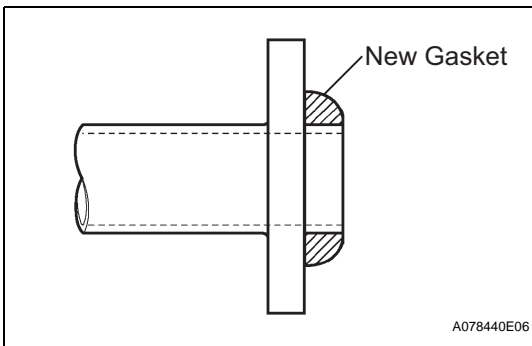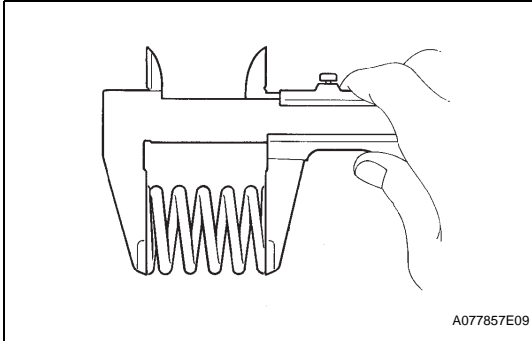

EC