



VENTILATION VALVE

INSPECTION

1. INSPECT VENTILATION VALVE SUB-ASSEMBLY

- (a) Install a clean hose to the ventilation valve.
- (b) Inspect the ventilation valve operation.
 - (1) Blow air into the cylinder head side, and check that air passes through easily.

CAUTION:

Do not suck air through the valve.

Petroleum substances inside the valve are harmful.

- (2) Blow air into the intake manifold side, and check that air passes through with difficulty. If operation is not as specified, replace the ventilation valve.
- (c) Remove the clean hose from the ventilation valve.

