



AIR FUEL RATIO SENSOR

INSPECTION

1. INSPECT AIR FUEL RATIO SENSOR

- (a) Using an ohmmeter, measure the resistance between terminals.

Resistance

Symbols (Terminal No.)	Resistance
HT (1) - +B (2)	1.8 to 3.4 Ω at 20°C (68°F)
HT (1) - AF- (4)	No continuity

If the resistance is not as specified, replace the sensor.