

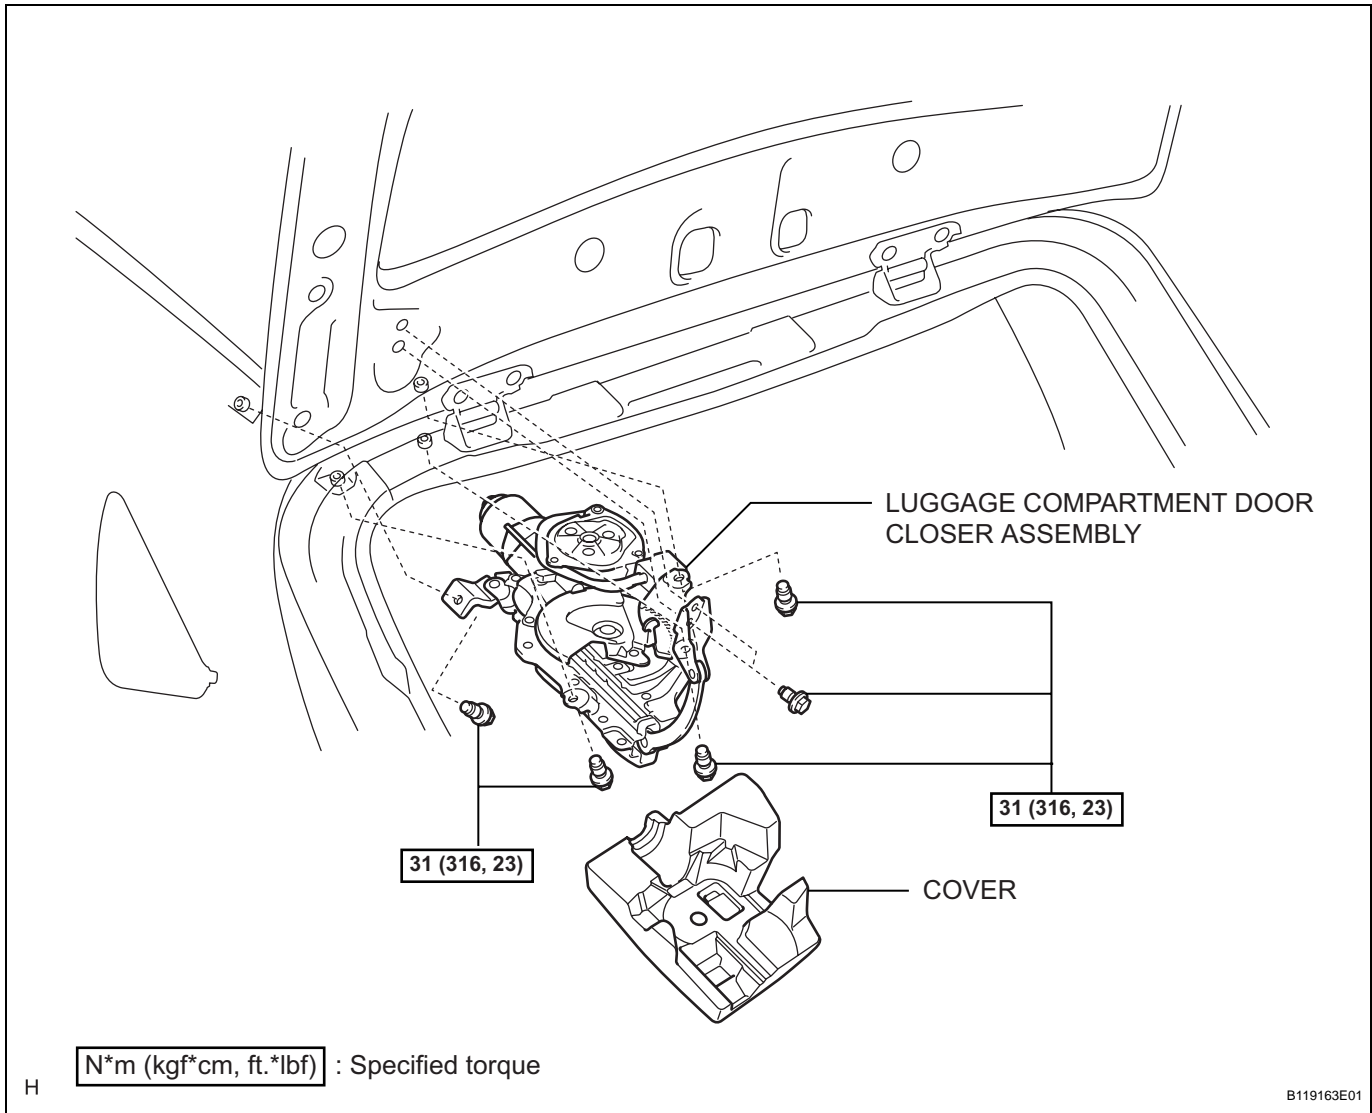


LUGGAGE COMPARTMENT DOOR CLOSER ASSEMBLY COMPONENTS

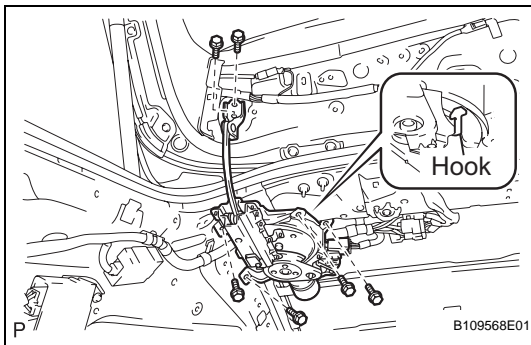

REMOVAL

1. REMOVE ROOF HEADLINING ASSEMBLY
(See page IR-6)
2. REMOVE LUGGAGE COMPARTMENT DOOR CLOSER ASSEMBLY
 - (a) Remove the 2 magic fasteners and the cover.

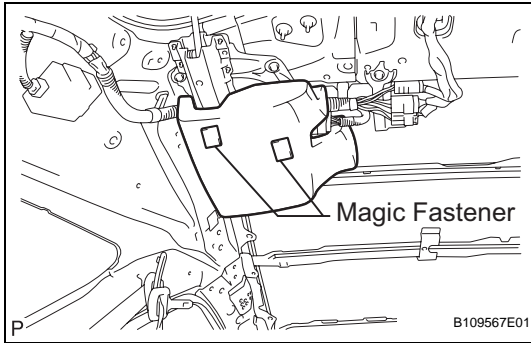

- (b) Disconnect the connector.
- (c) Remove the 6 bolts.
NOTICE:
Do not drop the power back door unit assembly.
- (d) Disengage the hook and remove the power back door unit assembly.