



## ADJUSTMENT

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**  
(See page RS-1)
2. **INSPECT BACK DOOR**
  - (a) Check that the clearance is within the standard range.

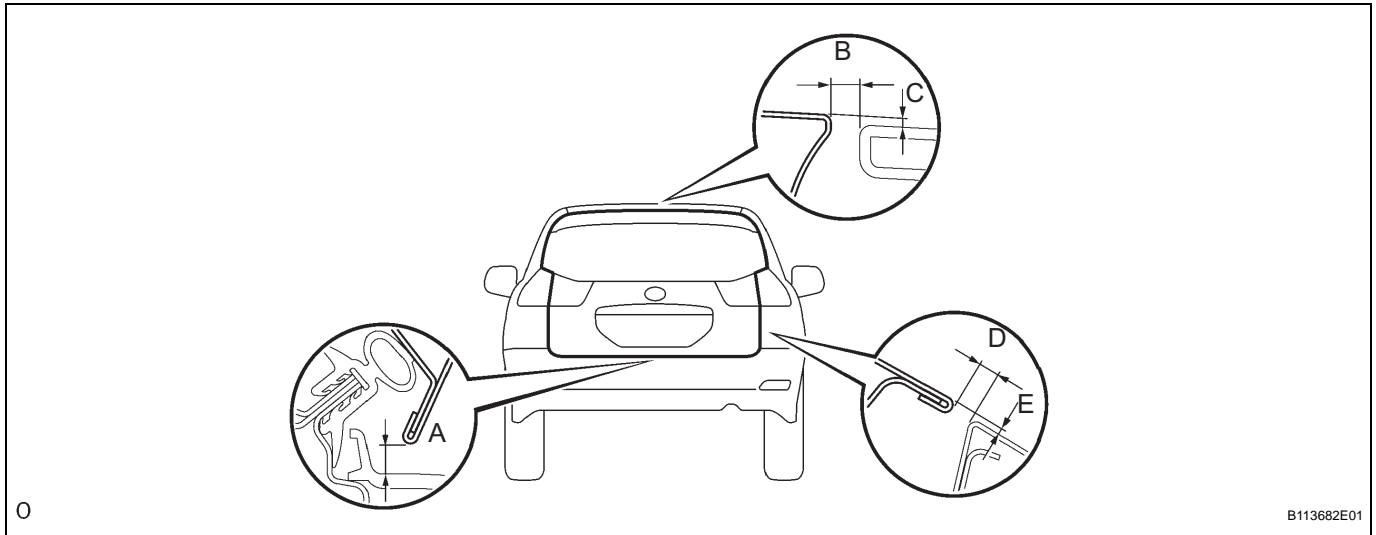


### Standard range:

A	6.5 +- 2.0 mm (0.256 +- 0.078 in.)
B	8.1 +- 2.0 mm (0.319 +- 0.078 in.)
C	10.0 +- 2.0 mm (0.394 +- 0.078 in.)
D	5.5 +- 1.5 mm (0.217 +- 0.059 in.)
E	0 +- 1.5 mm (0 +- 0.059 in.)

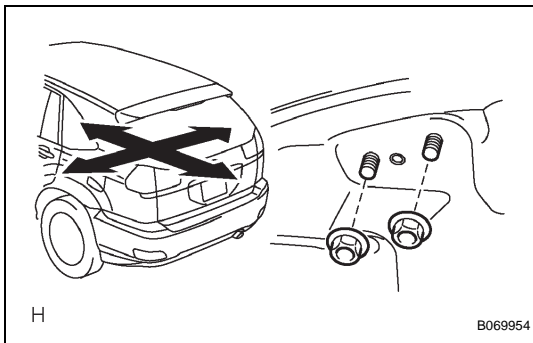


### 3. ADJUST BACK DOOR

- (a) Loosen the body side hinge nuts and adjust the door right, left, forward, and rearward.  
**Torque: 11.5 N\*m (117 kgf\*cm, 8.0 ft.\*lbf)**

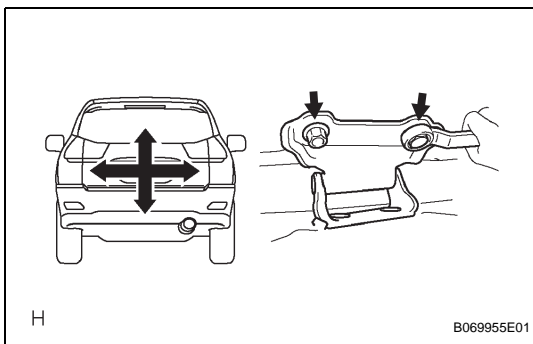

- (b) Horizontally and vertically adjust the back door by loosening the back door side hinge bolts.  
**Torque: 8.0 N\*m (82 kgf\*cm, 71 in.\*lbf)**

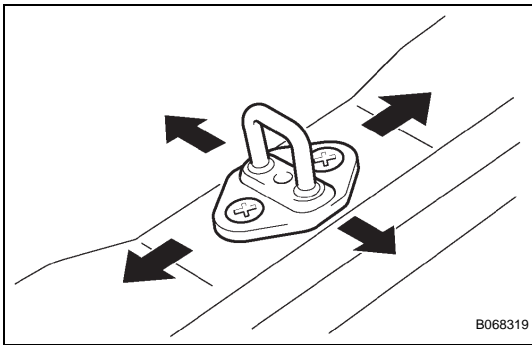

- (c) When adjusting the back door rear side to side and the back door lock striker assembly, loosen the bolts until the striker can move. Lightly tap striker with a brass bar for adjustment.

**Torque: 23 N\*m (235 kgf\*cm, 17 ft.\*lbf)**

- 4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
- 5. PERFORM INITIALIZATION**  
(See page [ED-1](#))