



## POWER BACK DOOR WARNING BUZZER

### INSPECTION

1. **INSPECT POWER BACK DOOR WARNING BUZZER**
  - (a) Measure the resistance according to the value(s) in the table below.

#### Standard resistance

Tester Connection	Specified Condition
1 - 2	Approx. 1 k $\Omega$

#### NOTICE:

Directly applying battery voltage to the buzzer does not cause the buzzer to sound.