


FUEL LID OPENER MOTOR ASSEMBLY


COMPONENTS

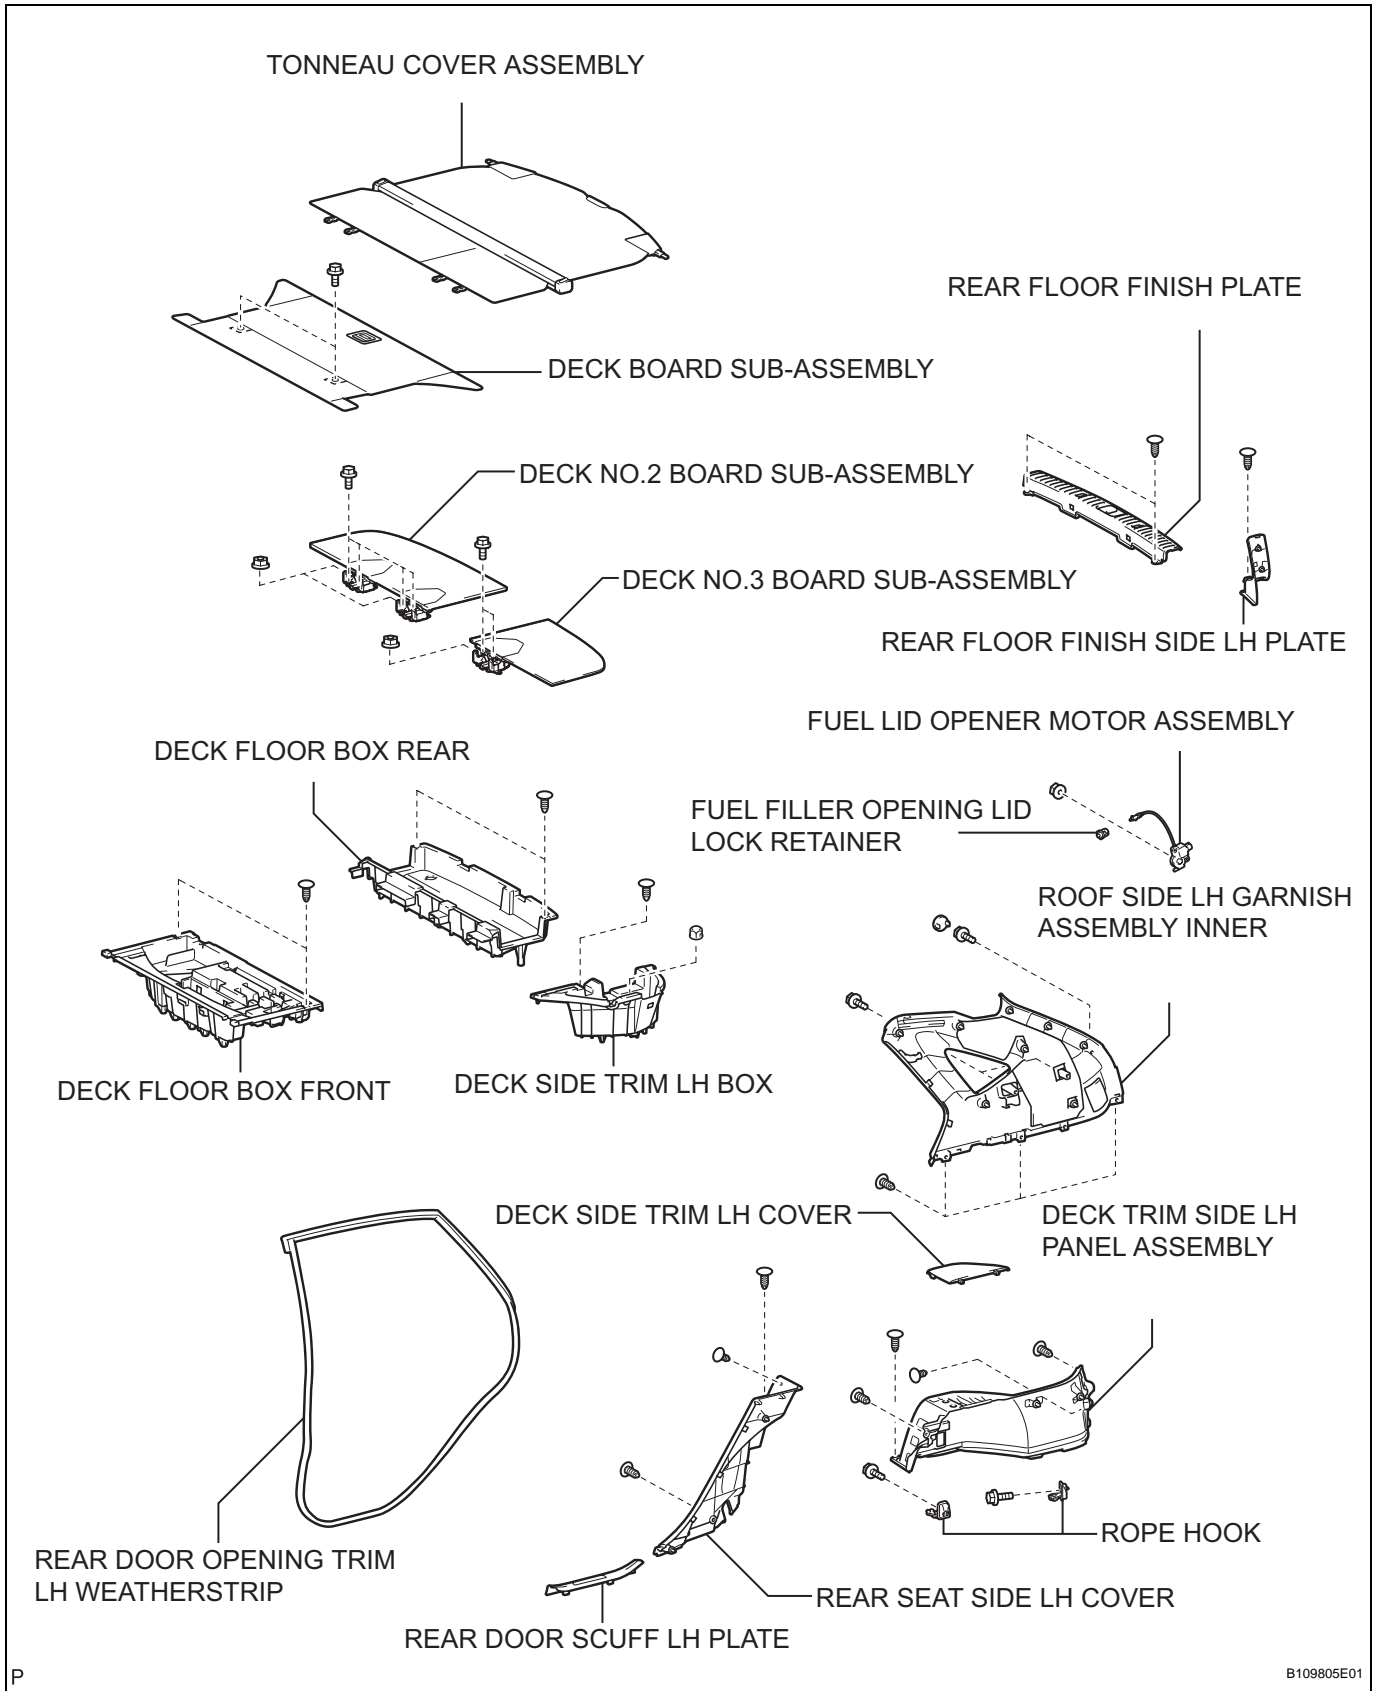


ED

REMOVAL

1. REMOVE TONNEAU COVER ASSEMBLY
2. REMOVE DECK BOARD SUB-ASSEMBLY (See page [IR-7](#))
3. REMOVE DECK FLOOR BOX FRONT (See page [IR-8](#))
4. REMOVE DECK FLOOR BOX REAR (See page [IR-8](#))
5. REMOVE DECK NO.2 BOARD SUB-ASSEMBLY (See page [IR-8](#))
6. REMOVE DECK NO.3 BOARD SUB-ASSEMBLY (See page [IR-8](#))
7. REMOVE DECK SIDE TRIM LH COVER (See page [IR-8](#))
8. REMOVE REAR FLOOR FINISH PLATE (See page [IR-8](#))
9. REMOVE DECK SIDE TRIM LH BOX (See page [IR-8](#))
10. REMOVE REAR DOOR SCUFF LH PLATE (See page [IR-6](#))
11. REMOVE REAR DOOR OPENING TRIM LH WEATHERSTRIP
12. REMOVE REAR SEAT SIDE LH COVER (See page [IR-9](#))
13. REMOVE REAR FLOOR FINISH SIDE LH PLATE (See page [IR-8](#))
14. REMOVE ROPE HOOK (See page [IR-9](#))
15. REMOVE DECK TRIM SIDE LH PANEL ASSEMBLY (See page [IR-9](#))
16. REMOVE ROOF SIDE LH GARNISH ASSEMBLY INNER (See page [IR-10](#))
17. REMOVE FUEL LID OPENER MOTOR ASSEMBLY
 - (a) Disconnect the connector.
 - (b) Release the lock as shown in the illustration.
 - (c) Remove the nut and fuel filler opening lid lock sub-assembly.
18. REMOVE FUEL FILLER OPENING LID LOCK RETAINER

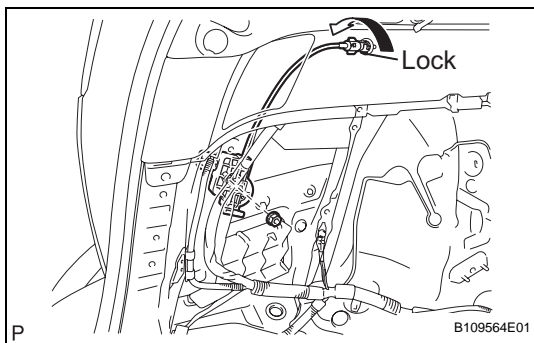

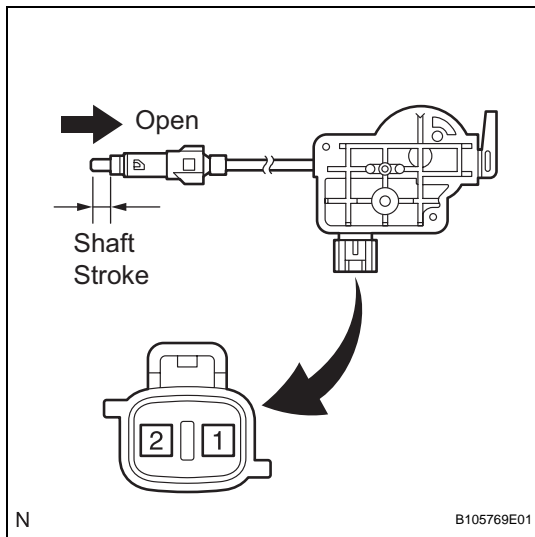

INSPECTION

1. INSPECT FUEL LID W/MOTOR LOCK ASSY (FUEL LID OPENER MOTOR)

1. Apply battery voltage to the motor and check operation of the motor.

OK

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 2	Shaft moves to open direction
Battery negative (-) → Terminal 1	

2. Check the shaft strokes.

Shaft stroke:

10.3 mm (0.41 in.) or more