

INSTALLATION

1. **INSTALL FUEL FILLER OPENING LID LOCK RETAINER**
2. **INSTALL FUEL LID OPENER MOTOR ASSEMBLY**
 - (a) Install the lock.
 - (b) Install the fuel lid opener motor assembly with the nut.
 - (c) Connect the connector.
3. **INSTALL ROOF SIDE LH GARNISH ASSEMBLY INNER**
4. **INSTALL DECK TRIM SIDE LH PANEL ASSEMBLY**
5. **INSTALL ROPE HOOK**
6. **INSTALL REAR FLOOR FINISH SIDE LH PLATE**
7. **INSTALL REAR SEAT SIDE LH COVER**
8. **INSTALL REAR DOOR OPENING TRIM LH WEATHERSTRIP**
9. **INSTALL REAR DOOR SCUFF LH PLATE**
10. **INSTALL DECK SIDE TRIM LH BOX**
11. **INSTALL REAR FLOOR FINISH PLATE**
12. **INSTALL DECK SIDE TRIM LH COVER**
13. **INSTALL DECK NO.3 BOARD SUB-ASSEMBLY**
14. **INSTALL DECK NO.2 BOARD SUB-ASSEMBLY**
15. **INSTALL DECK FLOOR BOX REAR**
16. **INSTALL DECK FLOOR BOX FRONT**
17. **INSTALL DECK BOARD SUB-ASSEMBLY**
18. **INSTALL TONNEAU COVER ASSEMBLY**