


HOOD SUPPORT ROD

COMPONENTS

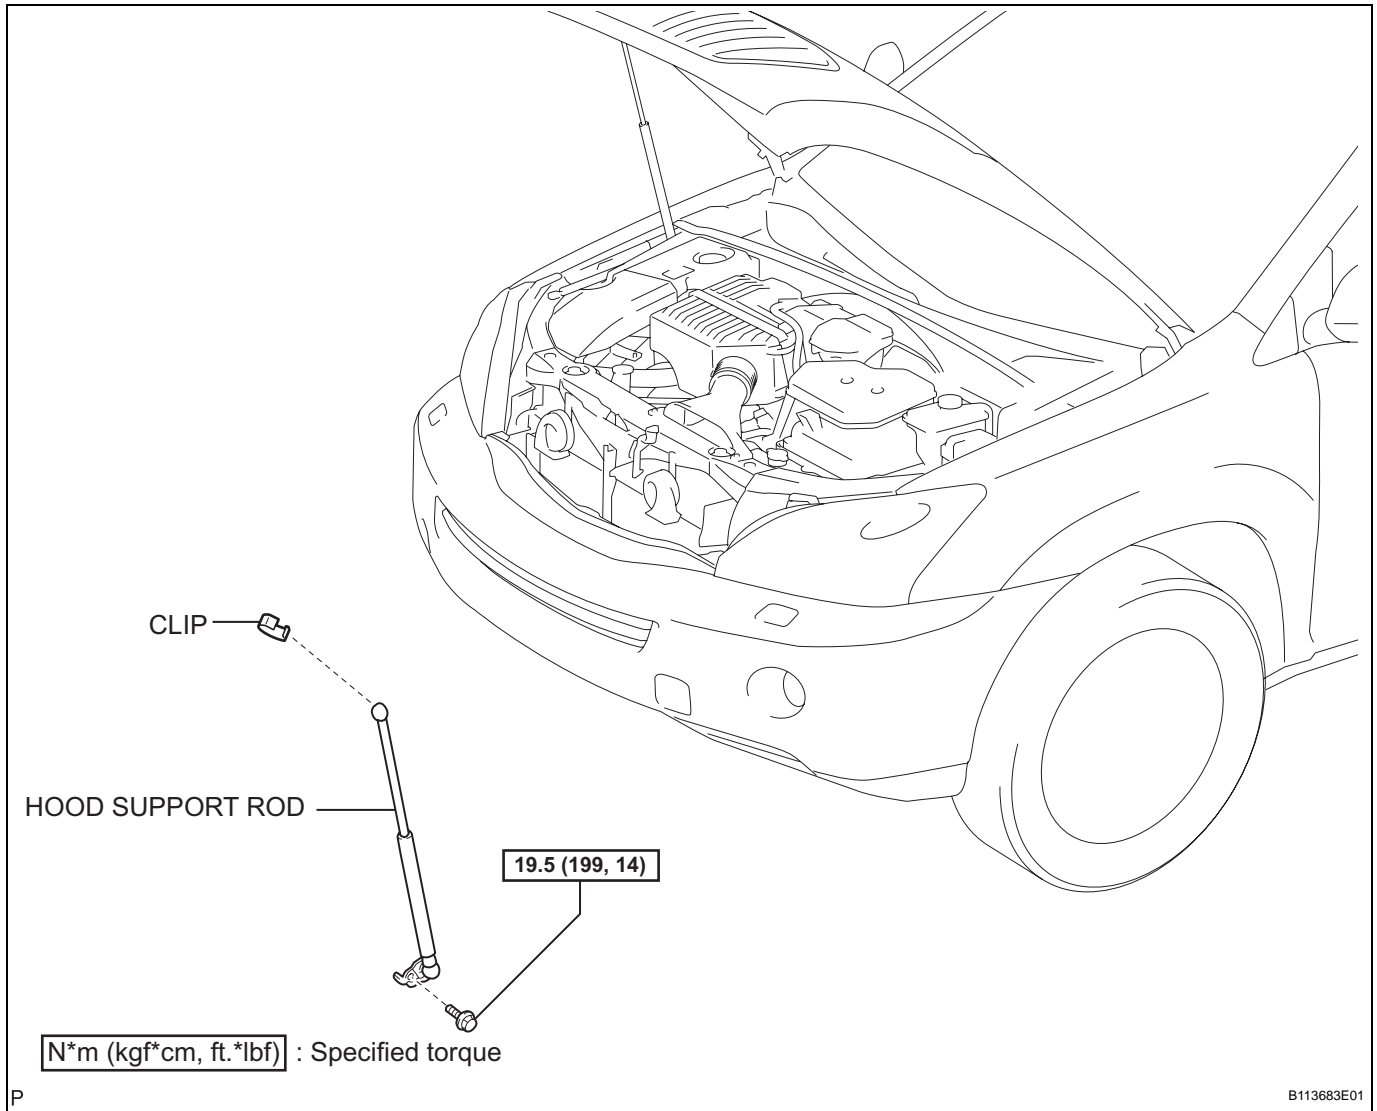

REMOVAL

1. REMOVE HOOD SUPPORT ROD

HINT:

While supporting the hood sub-assembly by hand, remove the hood support rod.

- (a) Using a screw driver, remove the clip and hood support rod from the hood sub-assembly.
- (b) Remove the bolt and the hood support rod.

