

INSTALLATION

1. INSTALL HOOD SUPPORT ROD

- (a) Install the hood support rod with the bolt.
Torque: 19.5 N*m (199 kgf*cm, 14 ft.*lbf)
- (b) Install the hood support rod and clip to the hood sub-assembly.

DISPOSAL

1. DISPOSE OF HOOD SUPPORT ROD

- (a) Horizontally fix the stay in a vise, with the piston-rod pulled out.
- (b) Wear safety glasses. Gradually cut a part between A and B shown in the illustration using a metal saw and gradually release the gas.

NOTICE:

Although the gas inside the stay is colorless, odorless and harmless, there is a possibility that metal debris could scatter. Therefore, cover it with clothes or equivalent.

