

ENGINE IMMOBILISER SYSTEM


PRECAUTION

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

| System Name | See procedure |
|--|-----------------------|
| Lighting System (Adaptive Front-Lighting System) | LI-17 |
| Power Window Control System | WS-12 |
| Power Back Door System | ED-33 |
| Sliding Roof System | RF-4 |

PARTS LOCATION

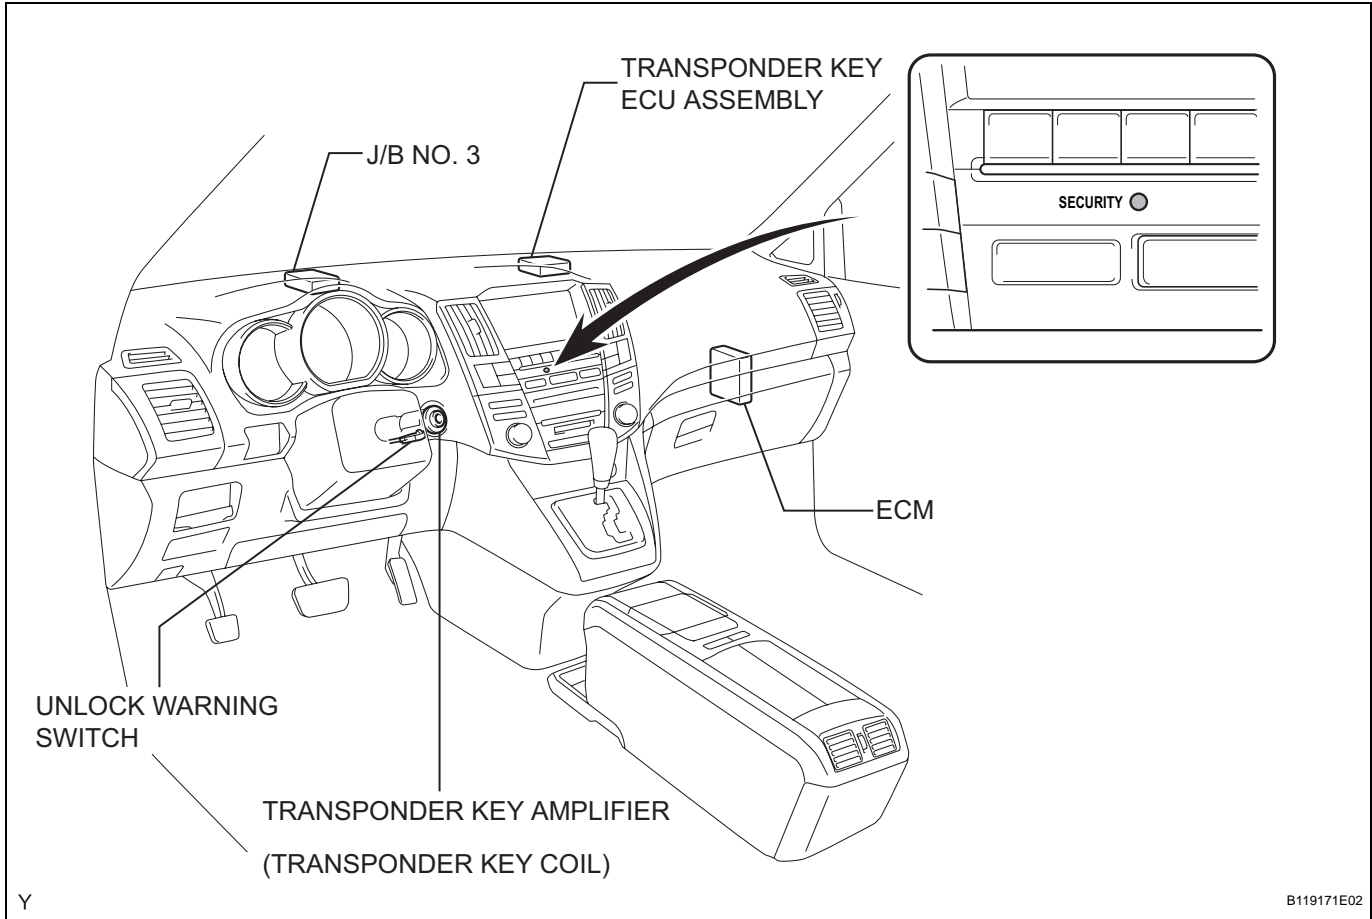

EI