
SYSTEM DESCRIPTION

The engine immobiliser system has been designed to prevent the vehicle from being stolen. This system uses a transponder key ECU that stores the key code of the authorized ignition key. If an attempt is made to start the engine using a non-authorized key, the transponder key ECU sends a signal to the ECM to prohibit fuel delivery and ignition, effectively disabling the engine.

HOW TO PROCEED WITH TROUBLESHOOTING

HINT:

- Use this procedure to troubleshoot the engine immobiliser system.
- The intelligent tester should be used in steps 4, 5 and 7.

1 VEHICLE BROUGHT TO WORKSHOP

NEXT

2 CUSTOMER PROBLEM ANALYSIS CHECK AND SYMPTOM CHECK

NEXT

3 CRANK ENGINE FOR MORE THAN 10 SECONDS

NEXT

4 CHECK FOR DTC

- Check for DTCs and note any codes that are output.
- Delete the DTC.
- Recheck for DTCs. Try to prompt the DTC (SFI system and engine immobiliser system) by simulating the original activity that the DTC suggested.
 - If the DTC does not reoccur, proceed to A.
 - If the DTC (SFI system) reoccurs, proceed to B.
 - If the DTC (engine immobiliser system) reoccurs, proceed to C.

B **Go to SFI SYSTEM**

C **Go to step 8**

A

5 READ VALUE OF INTELLIGENT TESTER ((IMMOBILISER ECU (TRANSPONDER KEY ECU ASSEMBLY) (SWITCH CONDITION))

- Connect the intelligent tester to the DLC3.
- Turn the ignition switch ON and push the intelligent tester main switch ON.
- Select the item KEY SW in the DATA LIST and read its value displayed on the intelligent tester.

Transponder key ECU

Item	Measurement Item / Display (Range)	Normal Condition	Diagnostic Note
KEY SW	Unlock warning switch signal / ON or OFF	ON: Key is in ignition key cylinder OFF: No key is in ignition key cylinder	-

NG

Go to DTC B2780

OK

6 PROBLEM SYMPTOMS TABLE

- (a) If the fault is not listed on the problem symptoms table, proceed to A.
- (b) If the fault is listed on the problem symptoms table, proceed to B.

B

Go to step 8

A

7 OVERALL ANALYSIS AND TROUBLESHOOTING

- (a) Inspection with the intelligent tester (ECU DATA MONITOR).
- (b) Inspection with the intelligent tester (ACTIVE TEST).
- (c) Terminals of ECU (See page [EI-10](#)).

NEXT

8 ADJUST, REPAIR OR REPLACE

NEXT

9 CONFIRMATION TEST

NEXT

END

EI