



ENGINE UNIT

COMPONENTS

EM

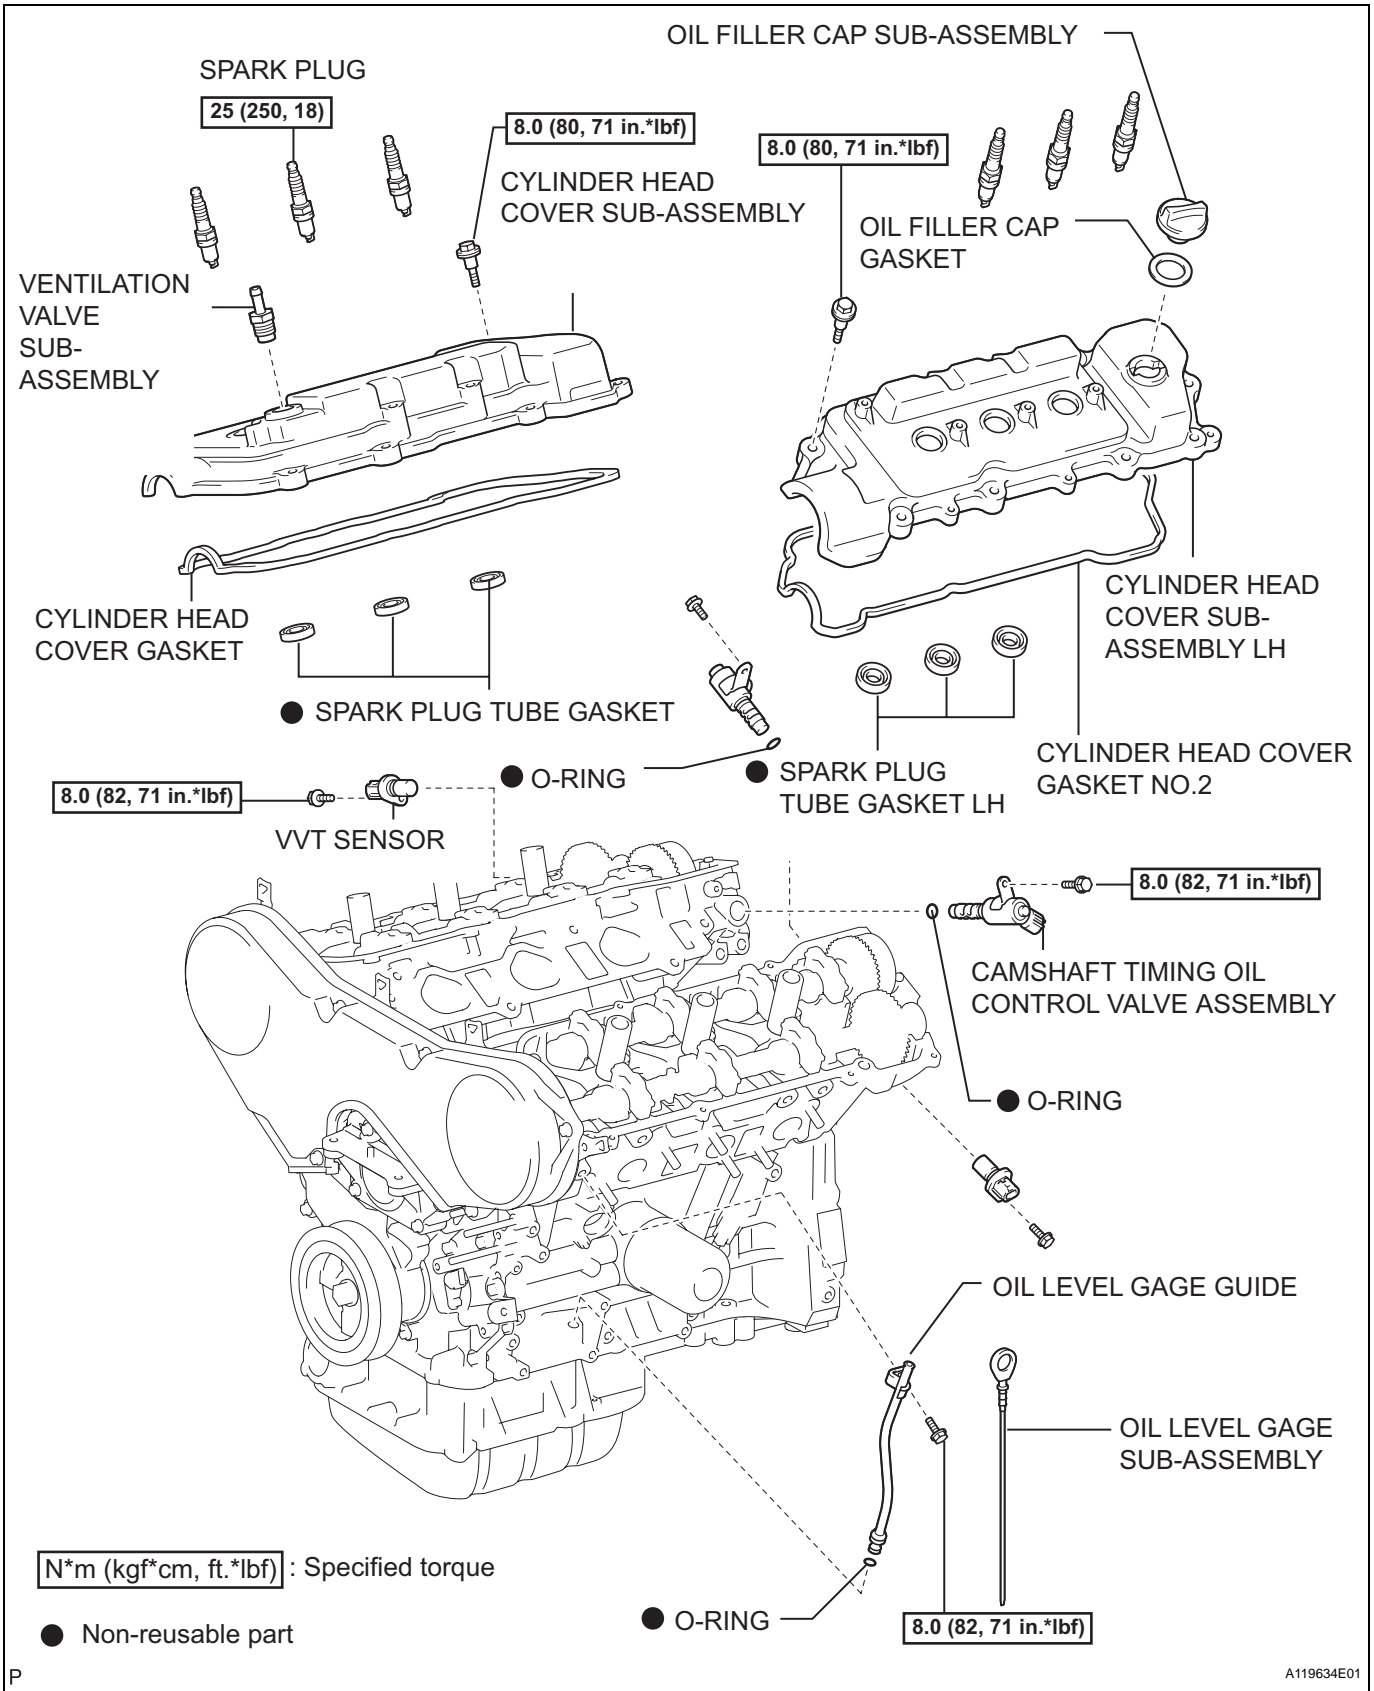


EM

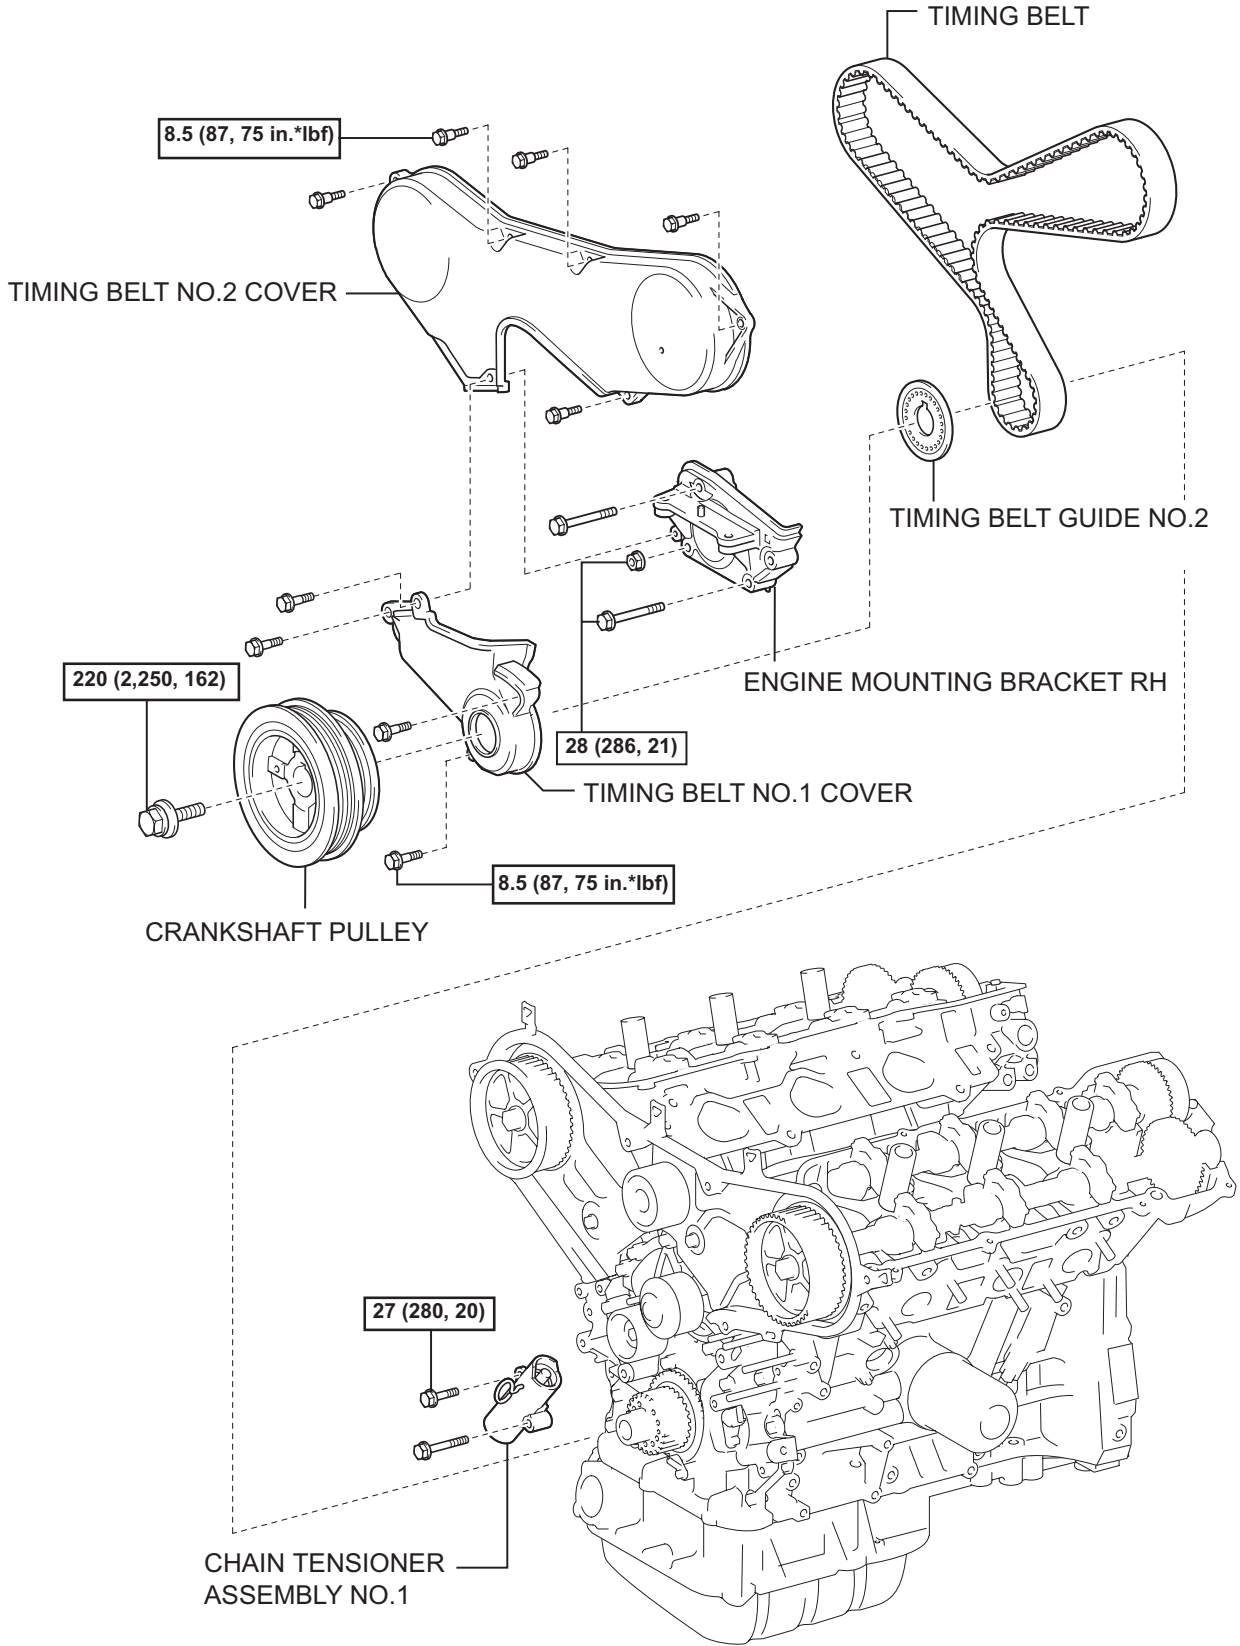


N*m (kgf*cm, ft.*lbf) : Specified torque

EM

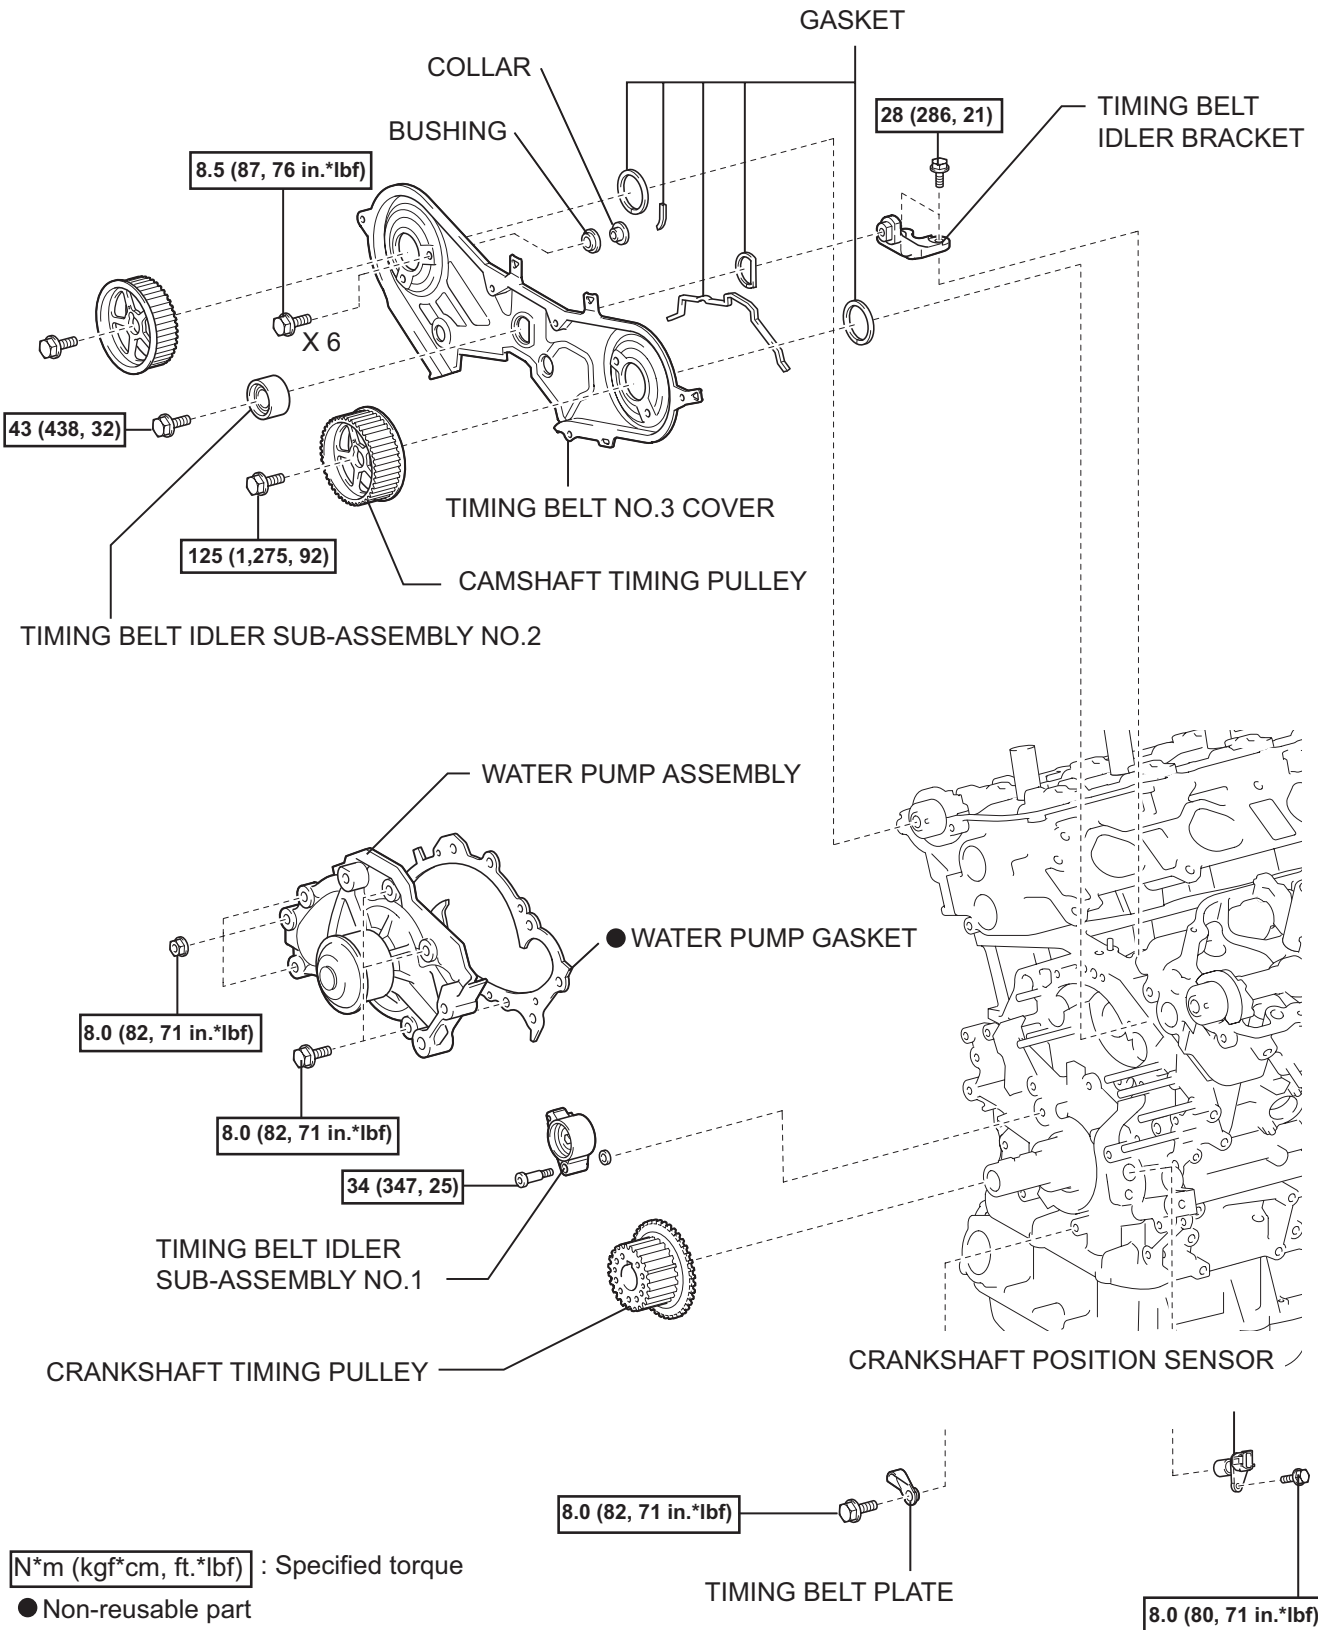

RH Bank:

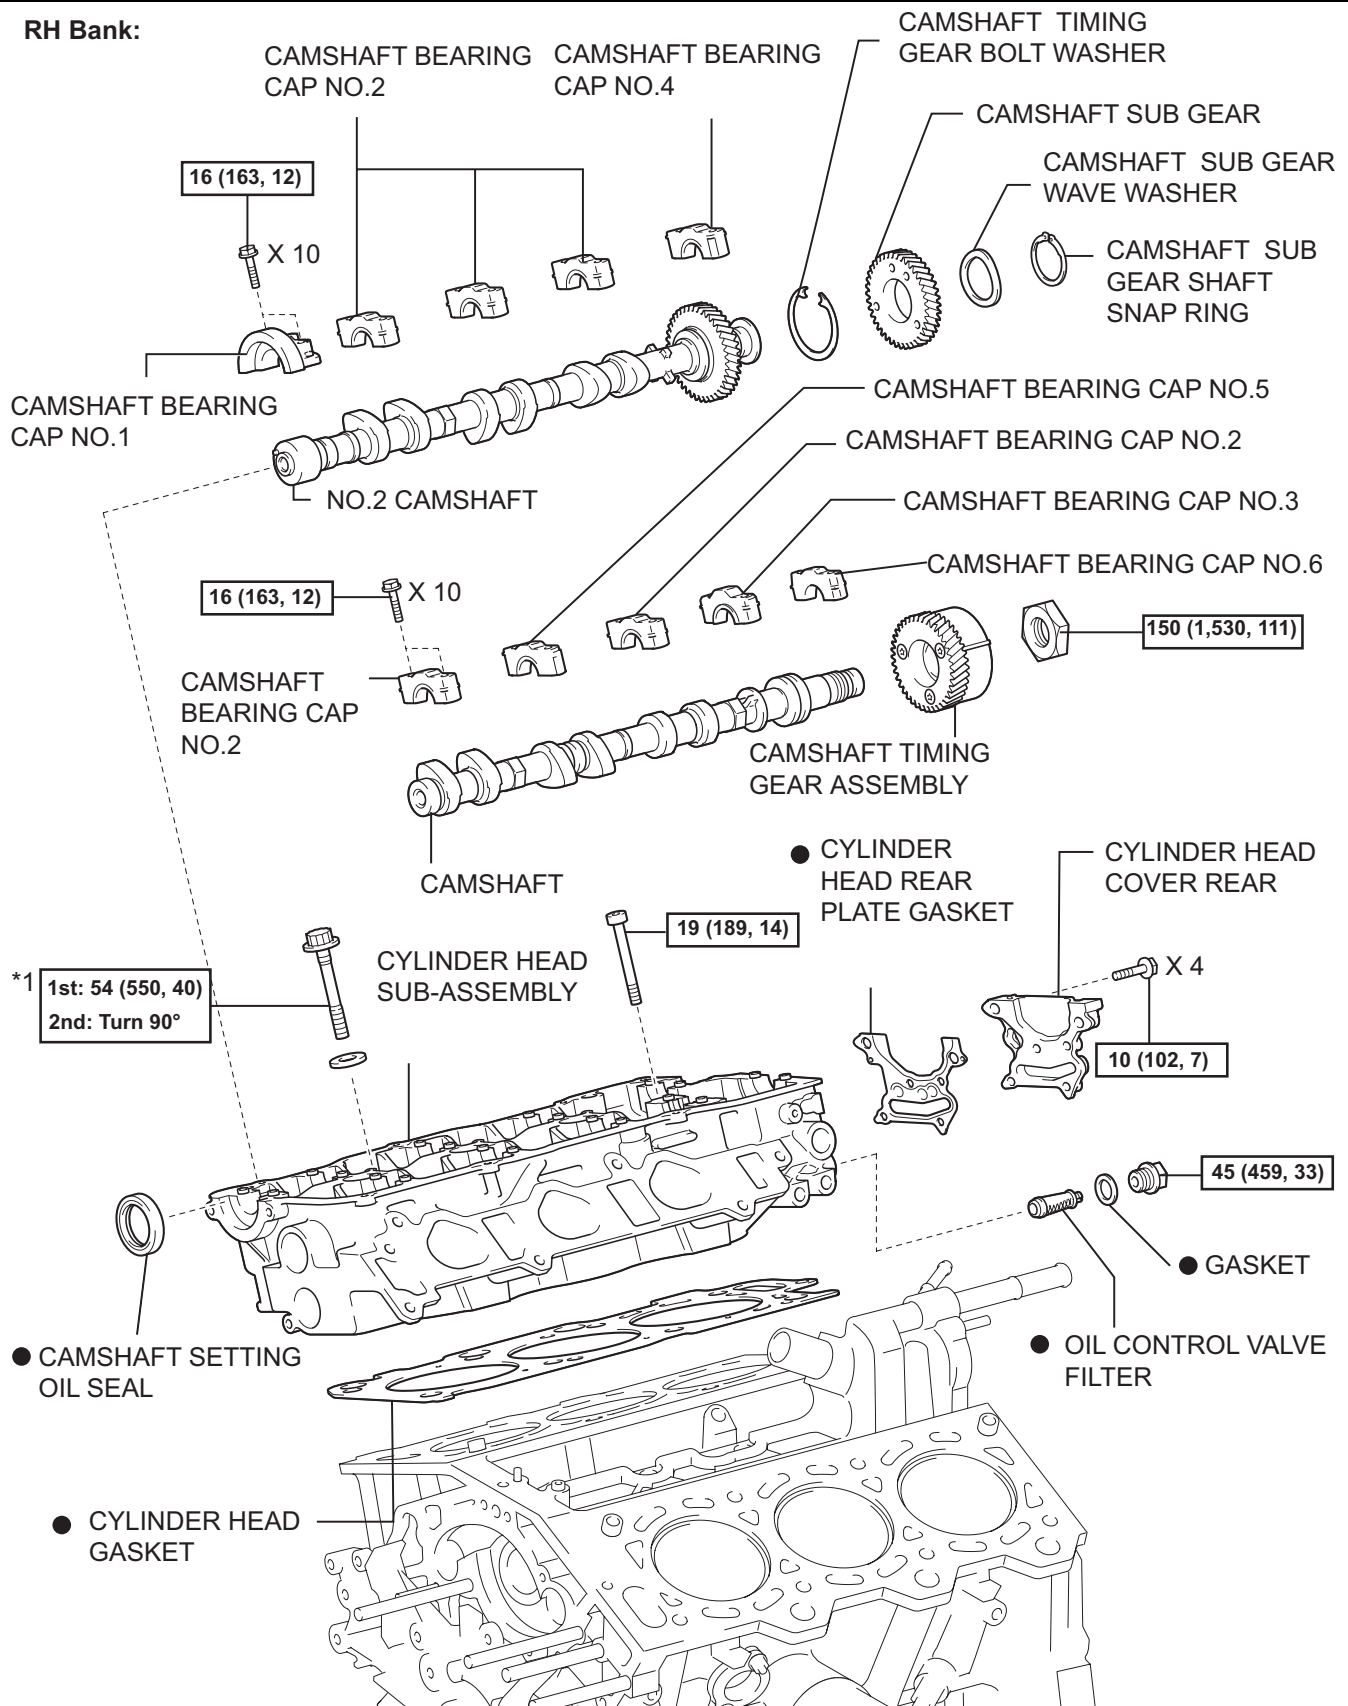


*1: See paragraph REASSEMBLY


N*m (kgf*cm, ft.*lbf) : Specified torque


● Non-reusable part

EM

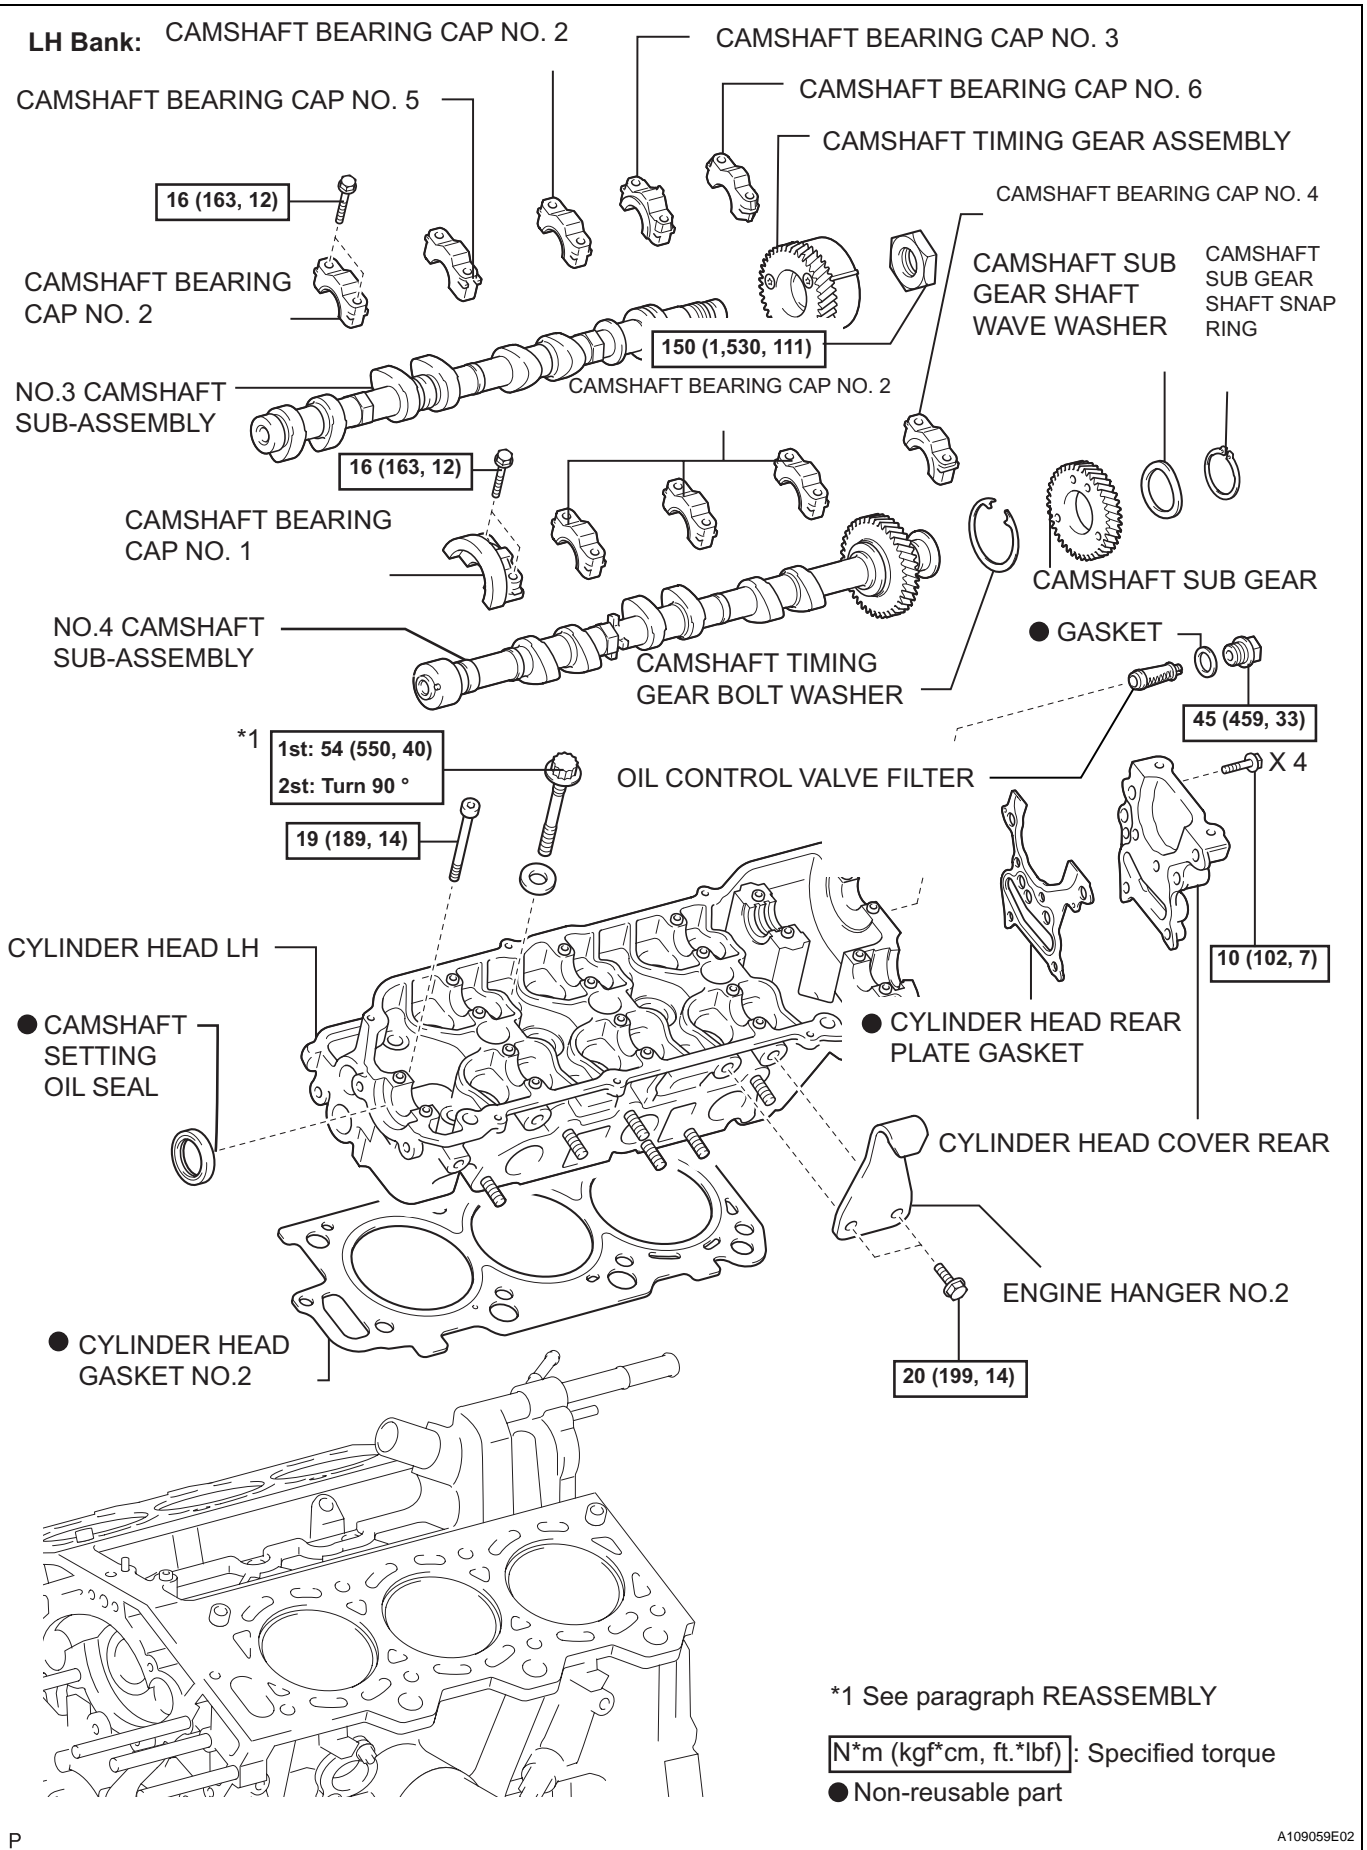

EM

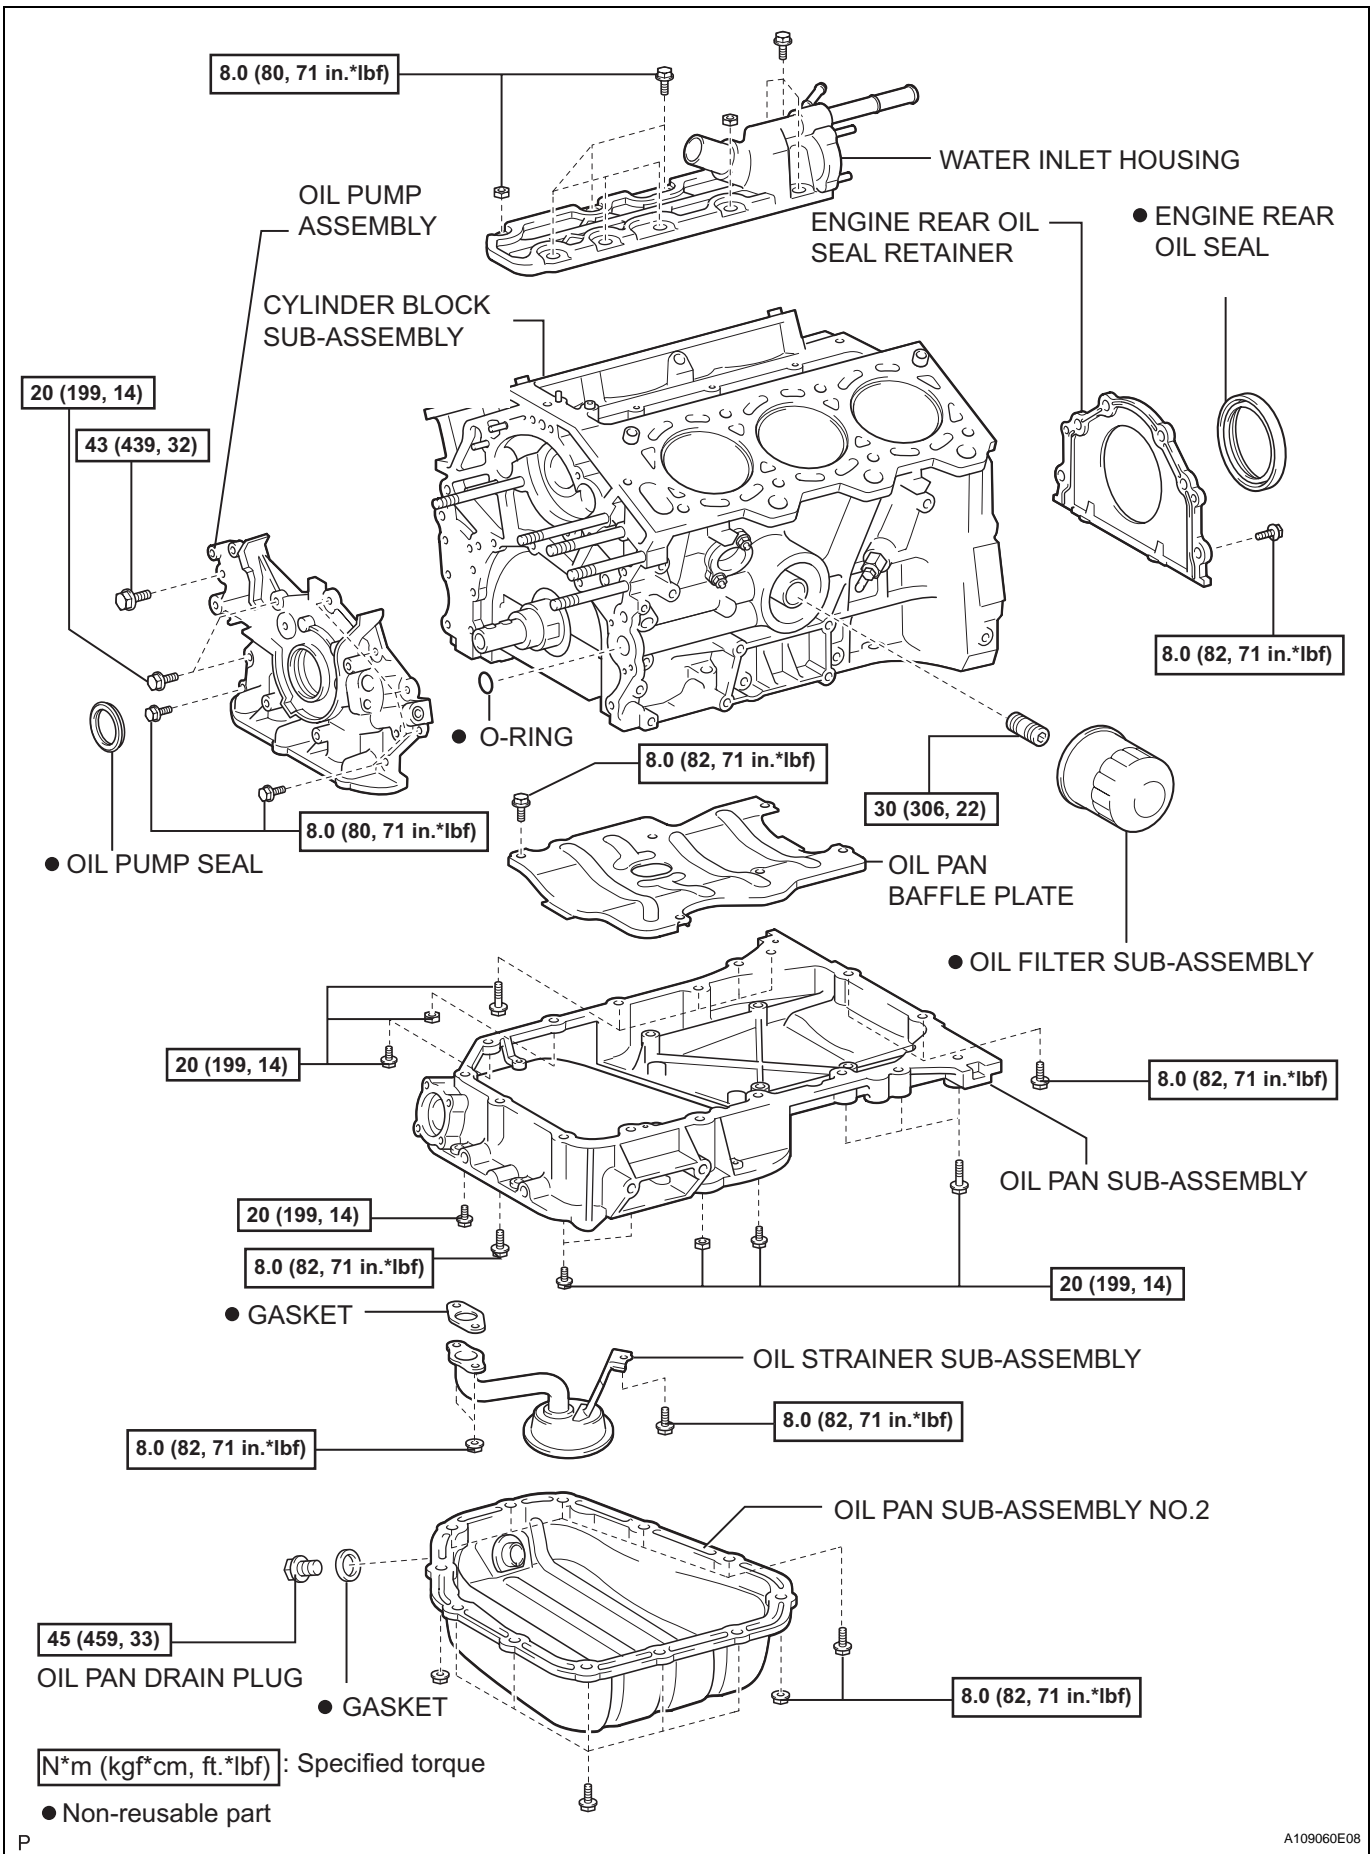

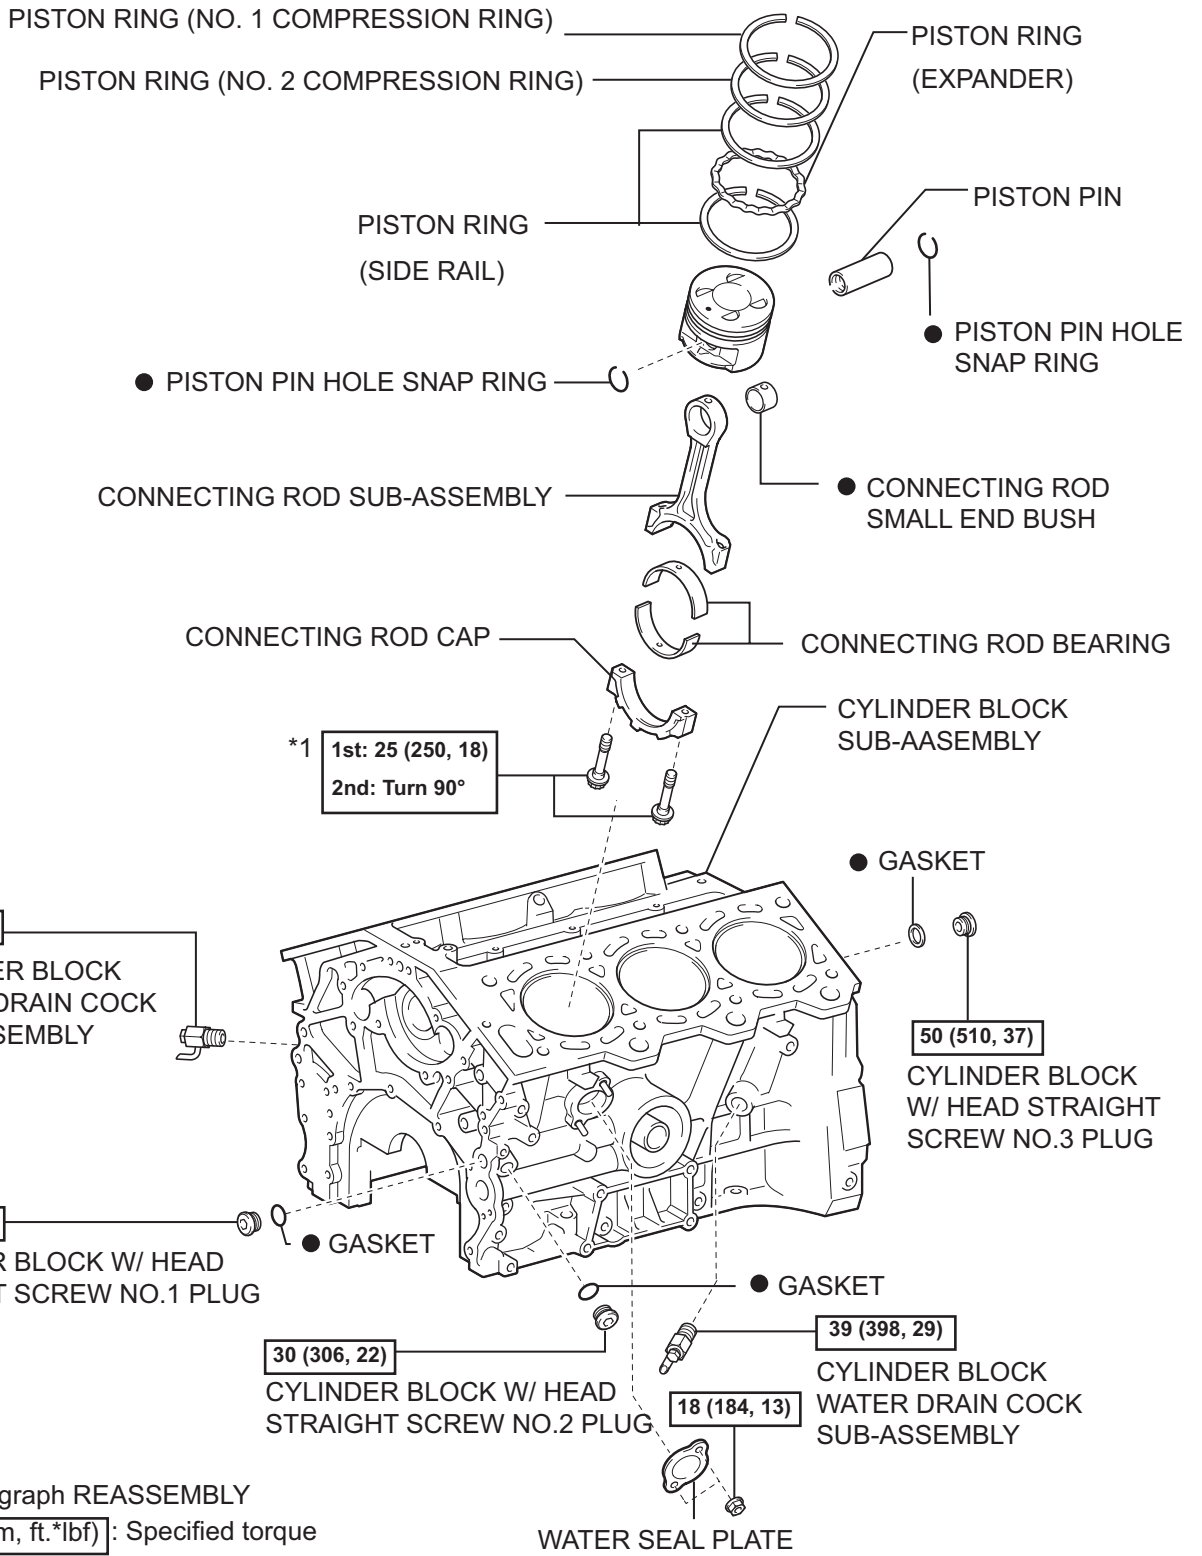


*1 See paragraph REASSEMBLY

N*m (kgf*cm, ft.*lbf): Specified torque

● Non-reusable part

EM

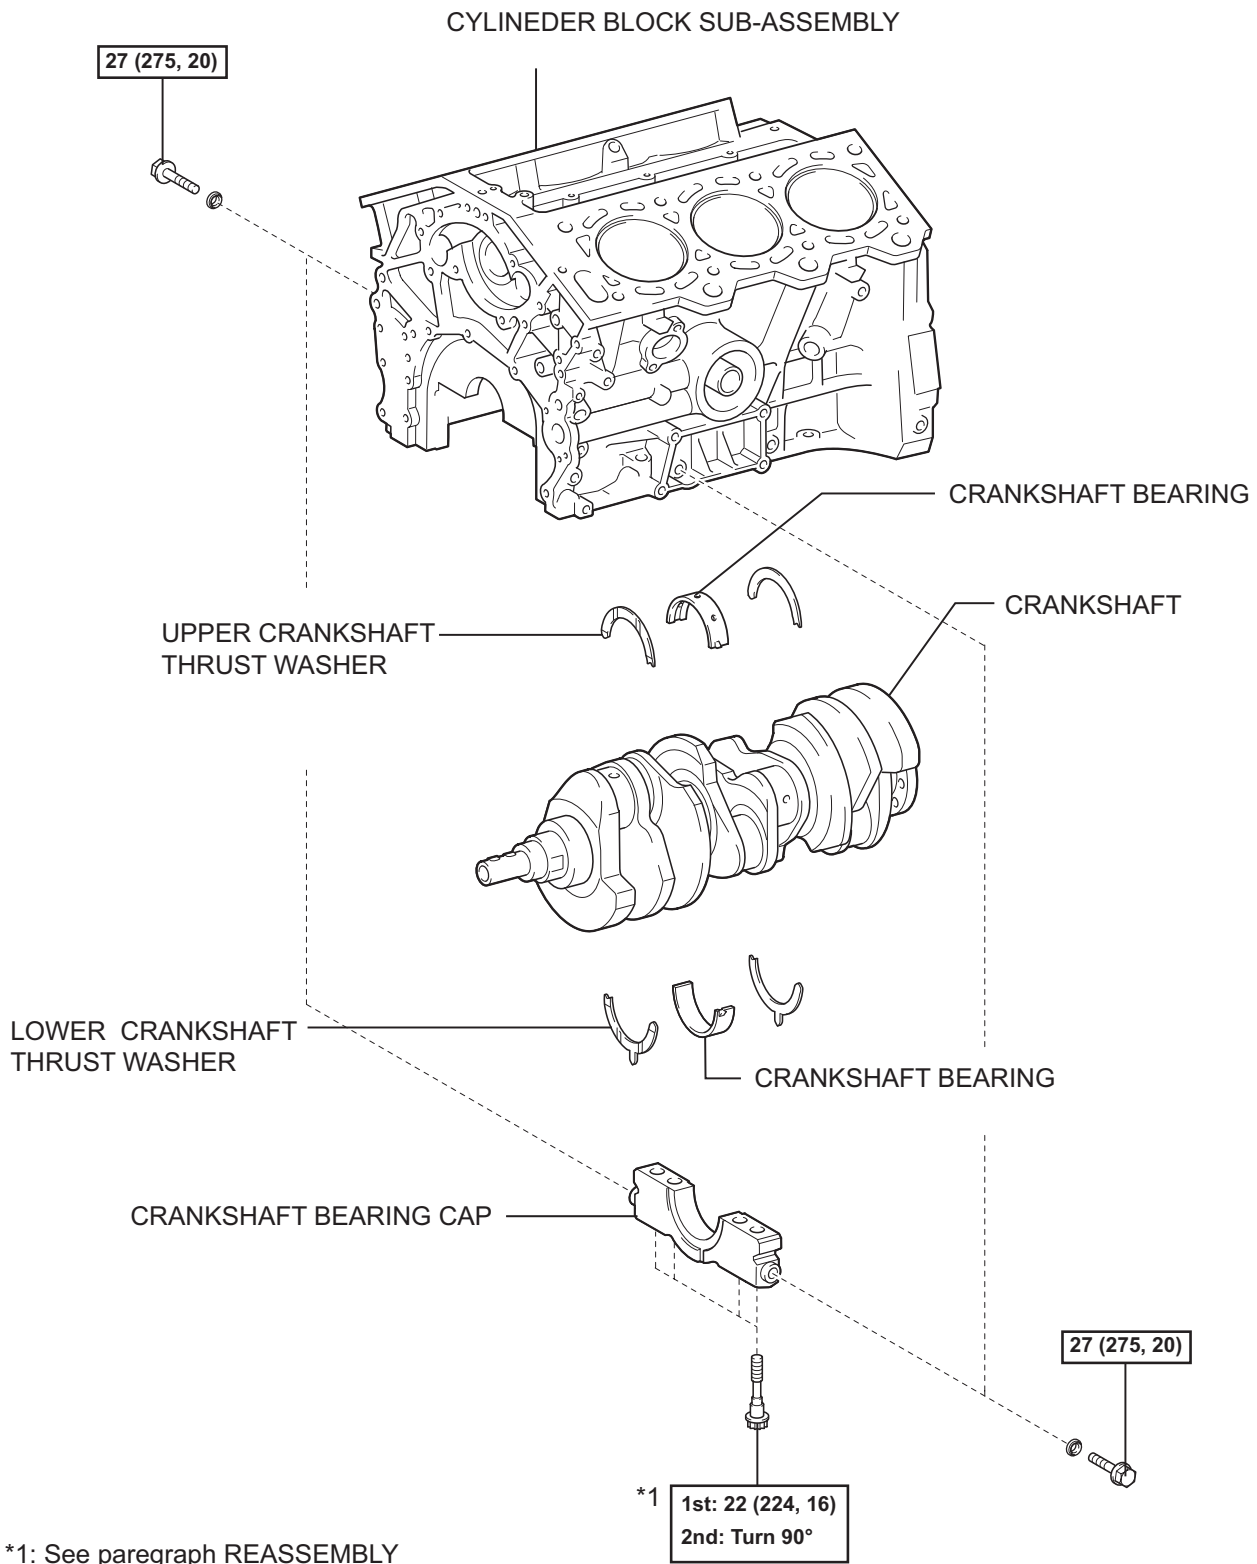

*1: See paragraph REASSEMBLY

N*m (kgf*cm, ft.*lbf) : Specified torque