


FRONT BUMPER


COMPONENTS

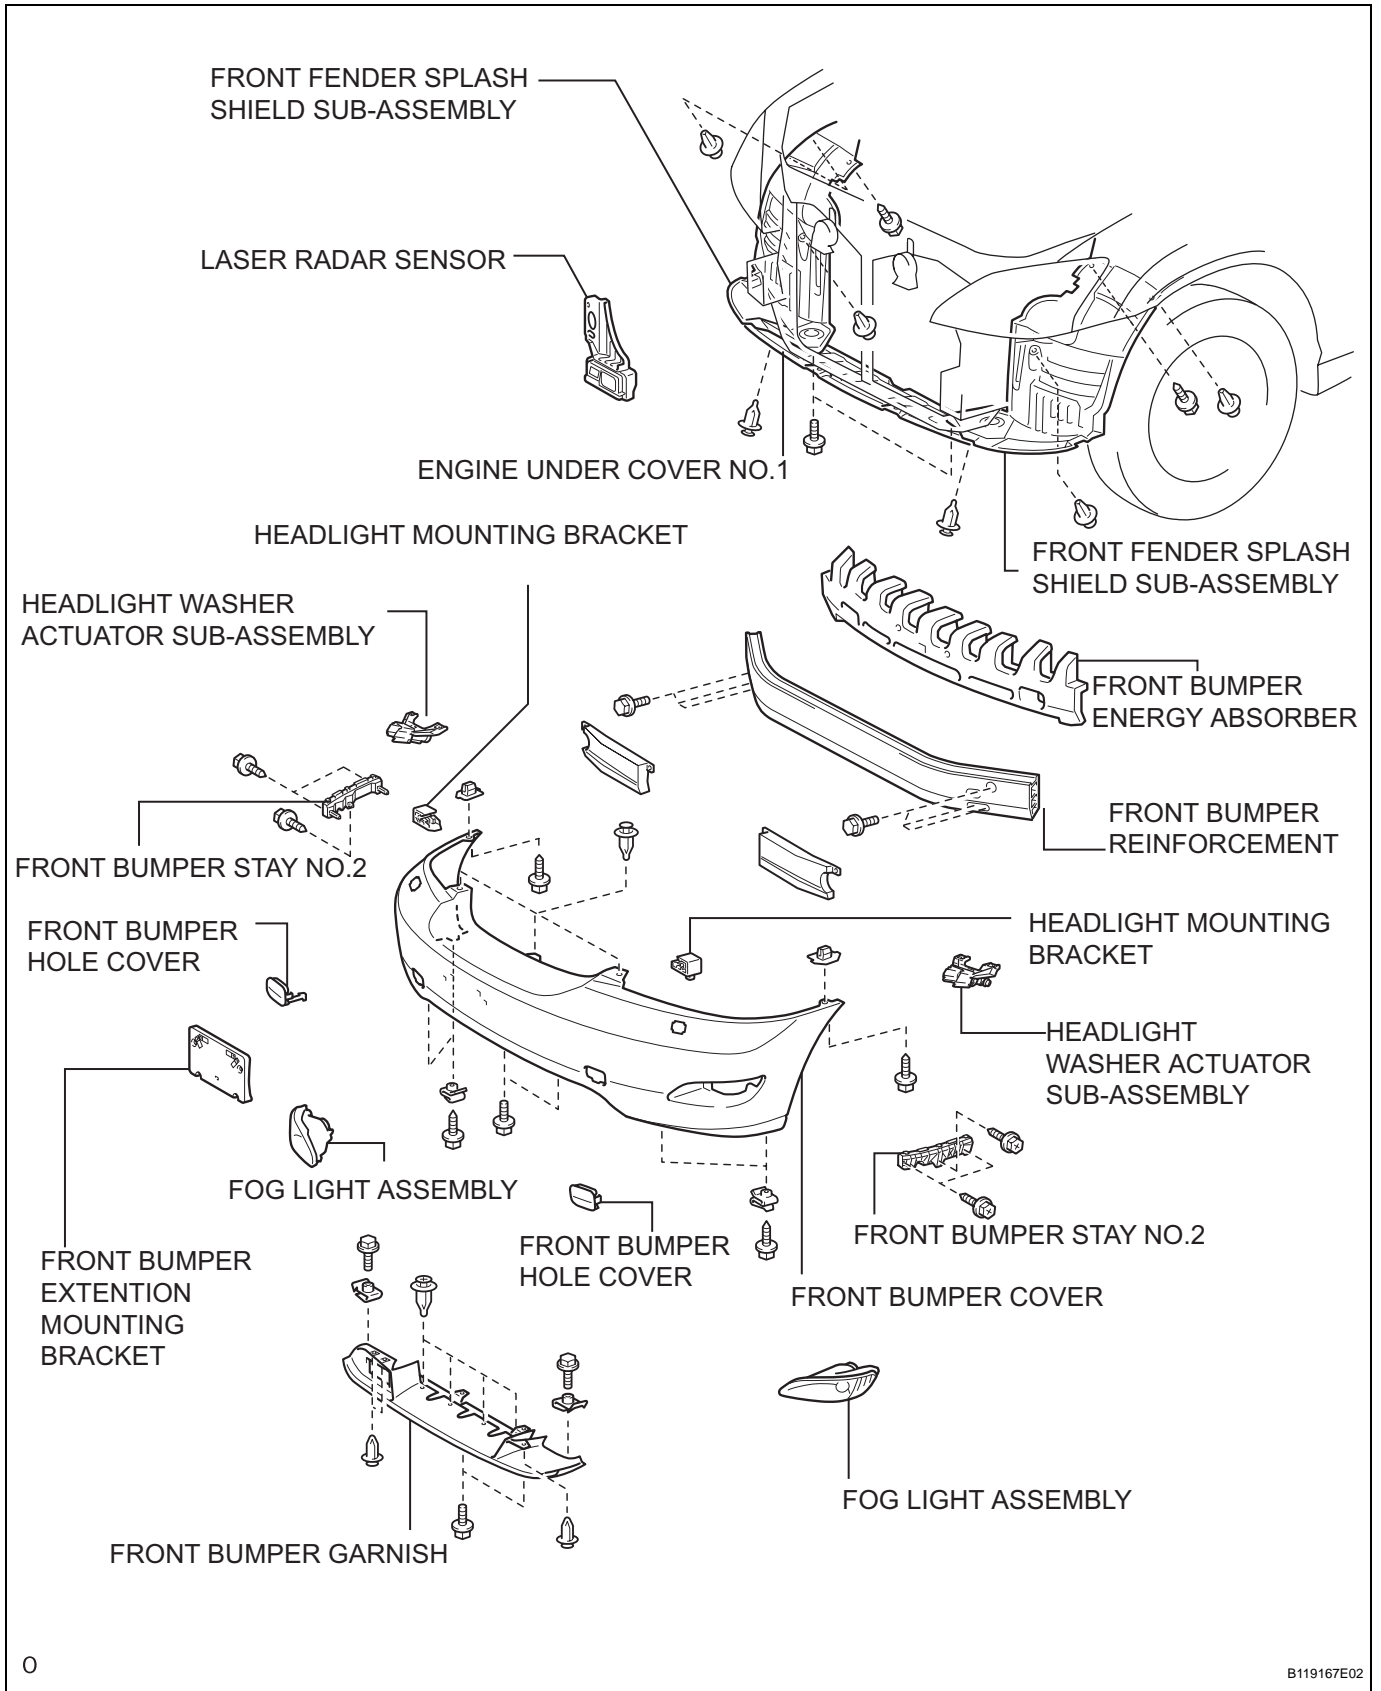

REMOVAL

1. REMOVE ENGINE UNDER COVER NO.1

- (a) Remove the 2 clips and 2 bolts.
- (b) Remove the 2 screws and under cover.

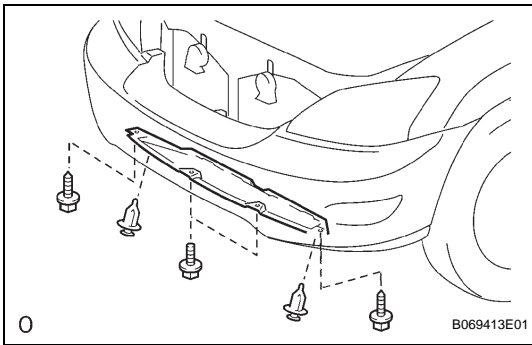


2. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY

- (a) Remove the 2 screws and 2 clips.
- (b) Partially remove the splash shield.

HINT:

Do not remove the splash shield completely but partially so that the bumper cover can be removed.

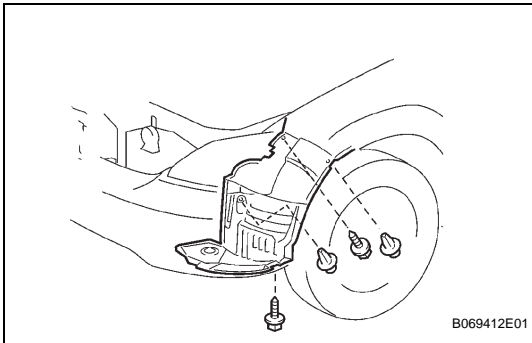

3. REMOVE FRONT BUMPER COVER

- (a) Put protective tape under the front fender.
- (b) With Headlight washer:
 - (1) Remove the washer hose clip.
 - (2) Using a screwdriver, pull out the front washer nozzle.

HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the fog light connectors.
- (d) Remove the 2 screws and 3 clips.
- (e) Using a screwdriver, disengage the 4 claws and remove the bumper cover.

HINT:

Tape the screwdriver tip before use.

