
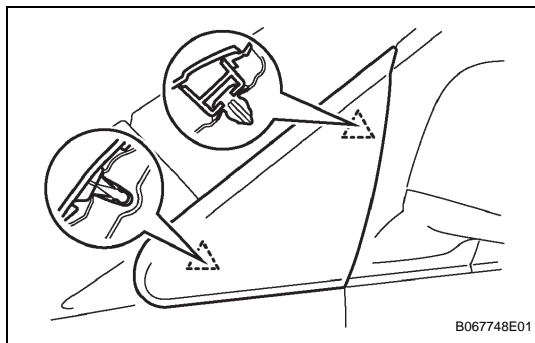


FRONT PILLAR UPPER COVER

COMPONENTS

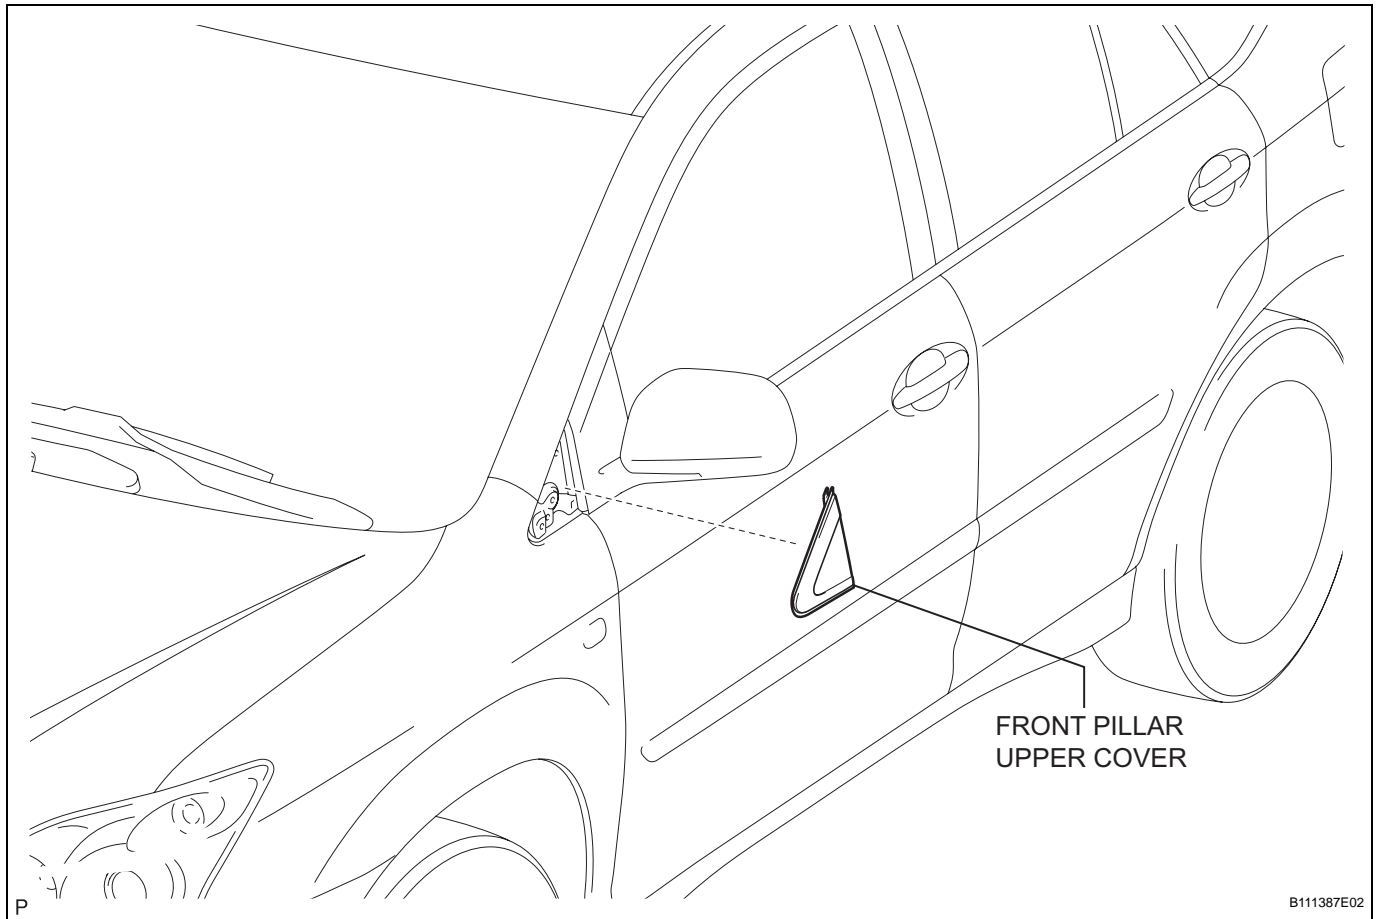

REMOVAL

- 1. REMOVE FRONT PILLAR UPPER COVER**
 - (a) Using a screwdriver, disengage the 2 clips and remove the front pillar upper cover.
HINT:
Tape the screwdriver tip before use.

INSTALLATION

1. INSTALL FRONT PILLAR UPPER COVER