
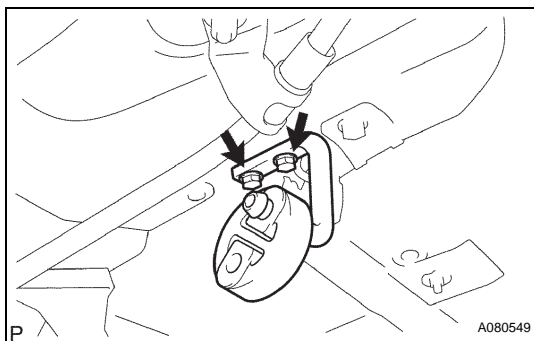



REMOVAL

1. DISCHARGE FUEL SYSTEM PRESSURE
HINT:
See page [FU-1](#).
2. REMOVE DECK BOARD SUB-ASSEMBLY (See page [FU-20](#))
3. REMOVE REAR SEAT TRACK BRACKET COVER OUTER (See page [SE-62](#))
4. REMOVE REAR SEAT TRACK BRACKET COVER OUTER (See page [SE-50](#))
5. REMOVE REAR SEAT ASSEMBLY RH (See page [SE-62](#))
6. REMOVE REAR SEAT ASSEMBLY LH (See page [SE-50](#))
7. REMOVE REAR DOOR SCUFF PLATE LH (See page [IR-6](#))
8. REMOVE DECK SIDE TRIM COVER LH (See page [IR-8](#))
9. REMOVE REAR SEAT SIDE COVER LH (See page [IR-9](#))
10. REMOVE REAR FLOOR SERVICE HOLE COVER (See page [FU-20](#))
11. REMOVE SUCTION TUBE SUB-ASSEMBLY (See page [FU-21](#))
12. DRAIN FUEL
13. REMOVE ENGINE UNDER COVER NO.2 (See page [IG-8](#))
14. REMOVE PROPELLER W/CENTER BEARING SHAFT ASSEMBLY (See page [PR-3](#))
15. REMOVE EXHAUST PIPE ASSEMBLY CENTER (See page [EC-11](#))
16. REMOVE FRONT FLOOR HEAT INSULATOR NO.3 (See page [EC-11](#))
17. REMOVE EXHAUST PIPE SUPPORT BRACKET NO.4
 - (a) 4WD type
 - (1) Remove the 2 bolts, and then remove the exhaust pipe support bracket No. 4.

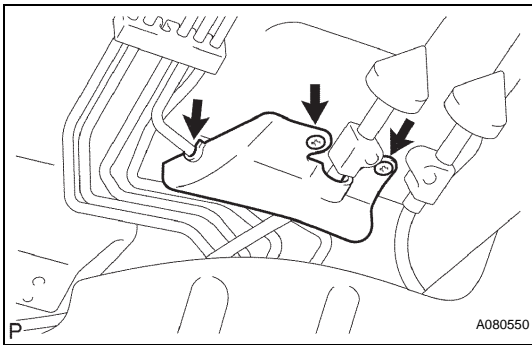


**18. REMOVE FUEL TUBE PROTECTOR NO.1**


- (a) Remove the 2 clips and unfasten the claw, and then remove the fuel tube protector No. 4.

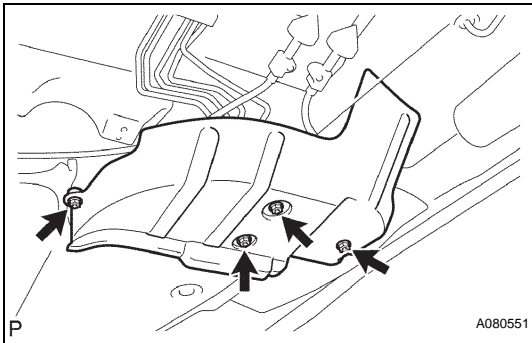**19. REMOVE FUEL TANK PROTECTOR NO.1**

- (a) Remove the 4 nuts, and then remove the fuel tank protector No. 1.

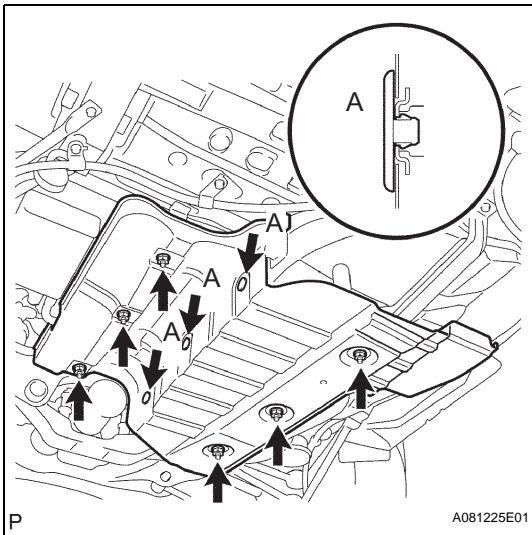**20. REMOVE FUEL TANK PROTECTOR SUB-ASSEMBLY NO.1**

- (a) Remove the 3 clips (A) and 6 nuts, and then remove the fuel tank protector No. 1.

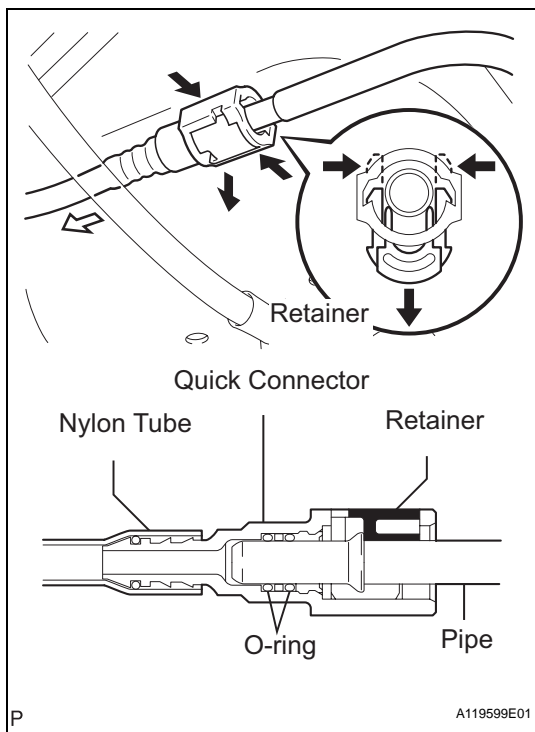


21. REMOVE FUEL TANK ASSEMBLY

(a) Disconnect the fuel pump tube.

- (1) Pinch the projection of the retainer to remove the lock claws and pull down it as show in the illustration.
- (2) Pull out the fuel pump tube.


NOTICE:

- Check if there is any dirt or mud around the connector before this operation and remove the dirt as necessary.
- Be careful of mud because the quick connector that can be contaminated.
- Do not use any tool in this operation.
- Do not bend or twist the nylon tube. Protect the connector by covering it with a vinyl or plastic bag.
- When the pipe and connector are stuck, push and pull the connector to release and pull the connector out carefully.

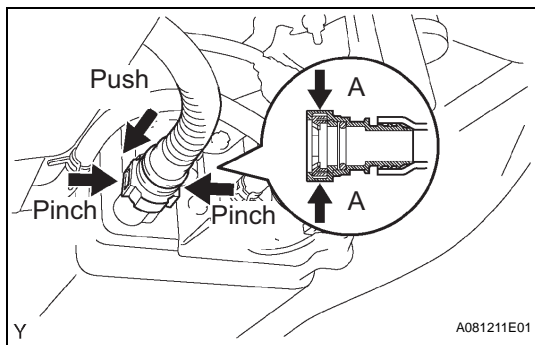

(b) Disconnect the fuel tank vent hose.

- (1) Deeply push the connector to release the locking tab.
- (2) Pinch portion A.
- (3) Pull out the connector.

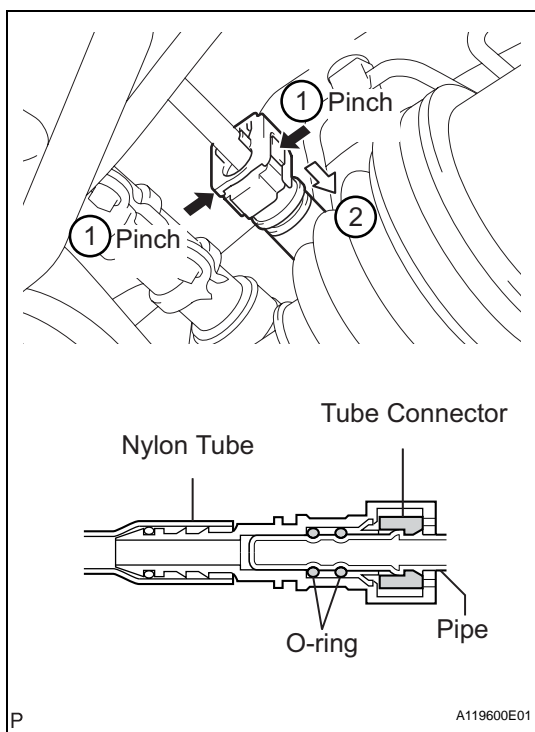


(c) Disconnect the fuel tank breather tube No. 3.



- (1) Pinch the tube connector and then pull out the fuel tank breather tube No. 3.

NOTICE:

- Check if there is any dirt or mud around the connector before this operation and remove the dirt as necessary.
- Be careful of mud because the quick connector has an O-ring which seals the pipe and connector that can be contaminated.
- Do not use any tool in this operation.
- Do not bend or twist the nylon tube. Protect the connector by covering it with a vinyl or plastic bag.
- When the pipe and connector are stuck, push and pull the connector to release and pull the connector out carefully.

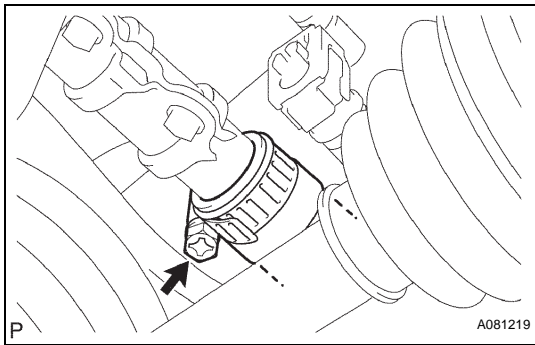


- (d) Loosen the hose clamp bolt and disconnect the fuel tank to filler pipe hose.
- (e) Disconnect the fuel tank wire connector.
- (f) Remove the connector clamp.
- (g) Set up a transmission jack under the fuel tank.
- (h) Remove the 4 bolts, and then remove the 2 fuel tank bands.
- (i) Remove the 2 nuts.
- (j) Operating the transmission jack and remove the fuel tank.

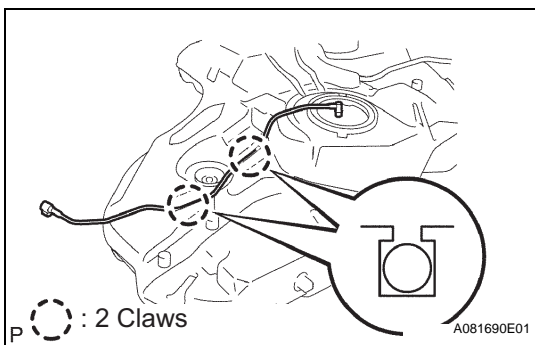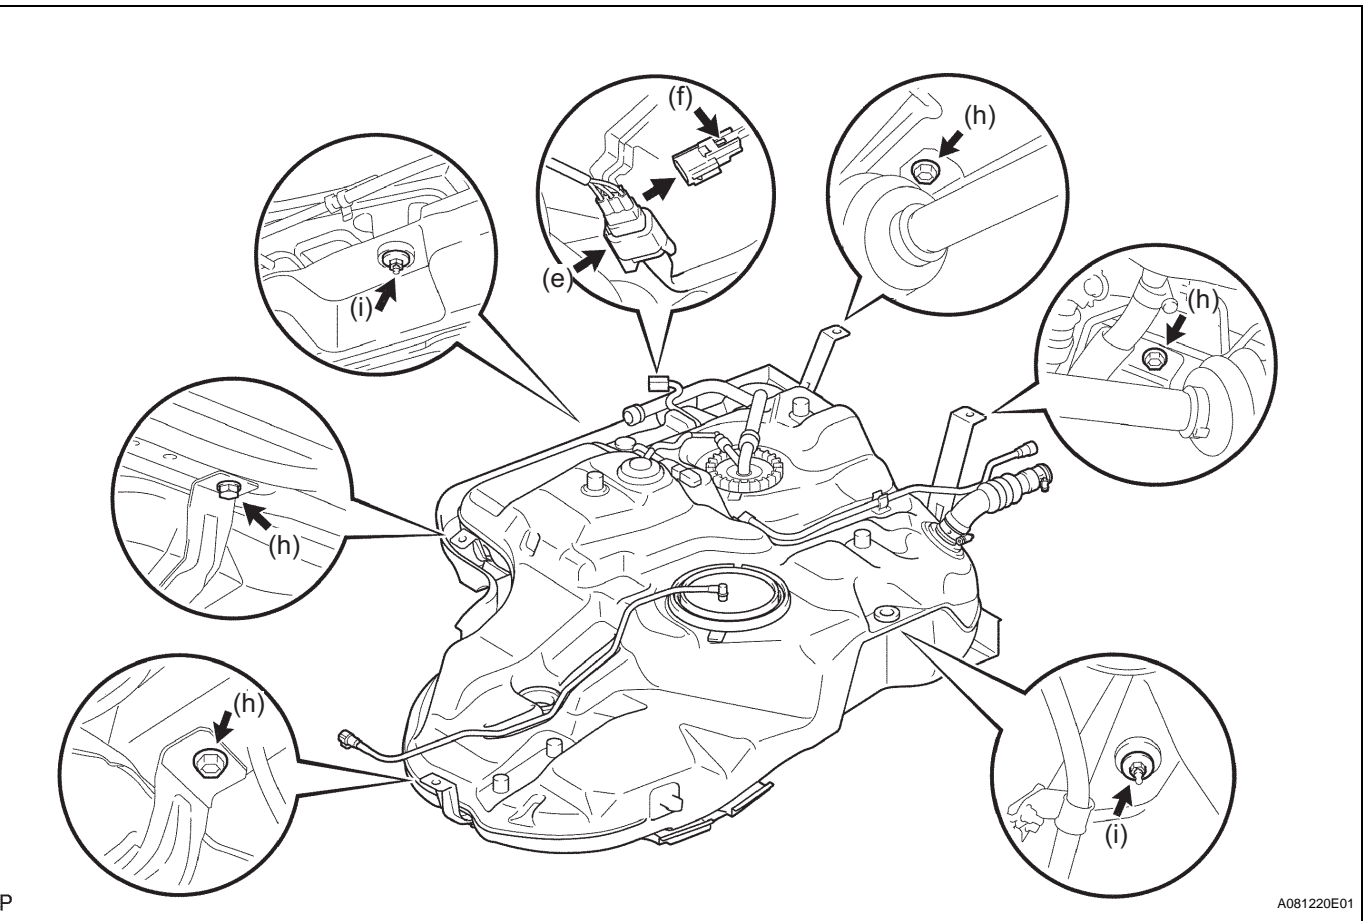


22. REMOVE FUEL PUMP TUBE SUB-ASSEMBLY

- (a) Unfasten the 2 claws, and then remove the fuel pump tube.

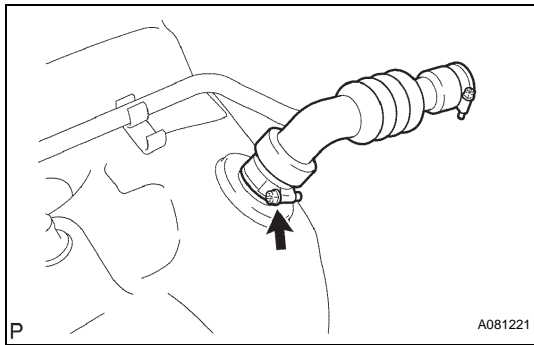


23. REMOVE FUEL TANK TO FILLER PIPE HOSE

- (a) Loosen the hose clamp bolt, and then remove the fuel tank to filler pipe hose.

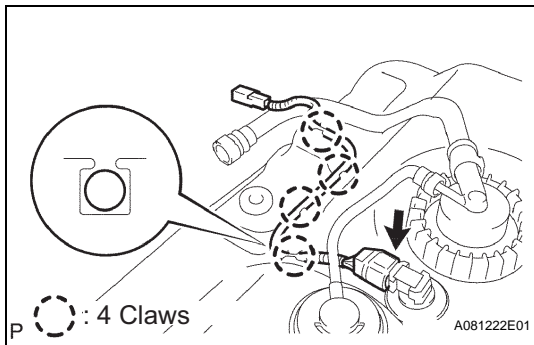


24. REMOVE FUEL TANK WIRE

- (a) Disconnect the vapor pressure sensor connector.
- (b) Unfasten the 4 claws, and then remove the fuel tank wire.

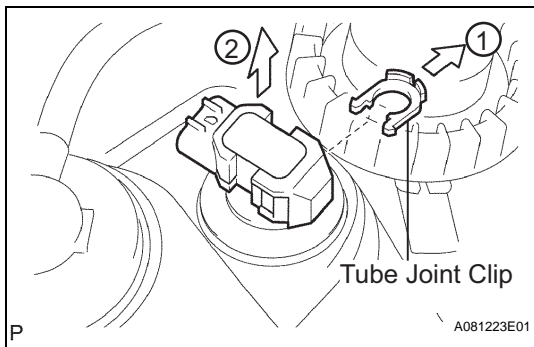


25. REMOVE VAPOR PRESSURE SENSOR ASSEMBLY

- (a) Remove the tube joint clip.
- (b) Pull out the vapor pressure sensor.

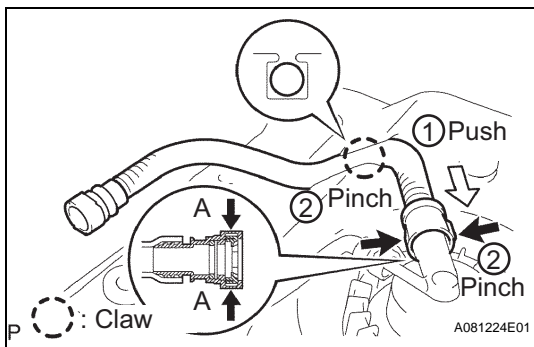

26. REMOVE FUEL TANK VENT HOSE


- (a) Deeply push the connector to release the locking tab.
- (b) Pinch portion A.
- (c) Pull out the connector.
- (d) Unfasten the claw, and then remove the fuel tank vent hose.

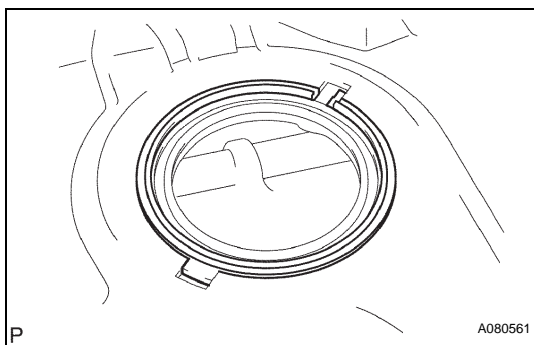


27. REMOVE TANK SUCTION TUBE SUPPORT

- (a) Remove the tank suction tube support from the fuel tank.

FU

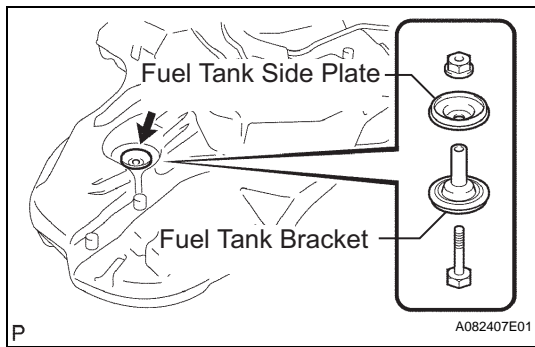**28. REMOVE FUEL TANK SIDE PLATE**

- (a) Remove the bolt and nut, and then remove the fuel tank side plate and the fuel tank bracket.

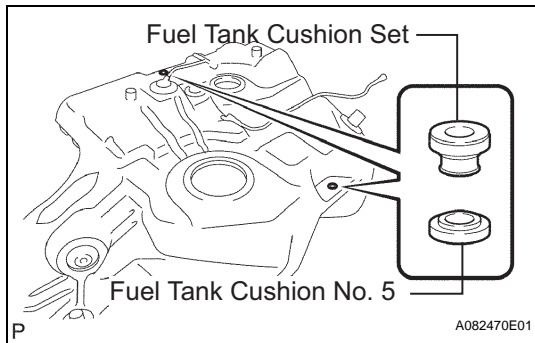**29. REMOVE FUEL TANK CUSHION SET**

- (a) Remove the fuel tank cushion set and fuel tank cushion No. 5.