

PROBLEM SYMPTOMS TABLE

HORN SYSTEM

Symptom	Suspected area	See page
Horn does not sound	1. HORN fuse	-
	2. Horn relay	HO-4
	3. Steering pad switch	-
	4. Spiral cable	HO-9
	5. Wire harness	-
Horn sounds all the time	1. Horn relay	HO-4
	2. Horn switch	-
	3. Wire harness	-
Low pitched horn operates but high pitched horn does not operate	1. High pitched horn	HO-8
	2. Wire harness	-
High pitched horn operates but low pitched horn does not operate	1. Low pitched horn	HO-6
	2. Wire harness	-