

# HORN RELAY

## INSPECTION

### 1. INSPECT FUSE (HORN)

- (a) Check the resistance of the HORN fuse.


**Standard:**

**Below 1 Ω**

### 2. INSPECT HORN RELAY

- (a) Remove the horn relay from the fusible link block.
- (b) Measure the resistance according to the value(s) in the table below.

**Standard**

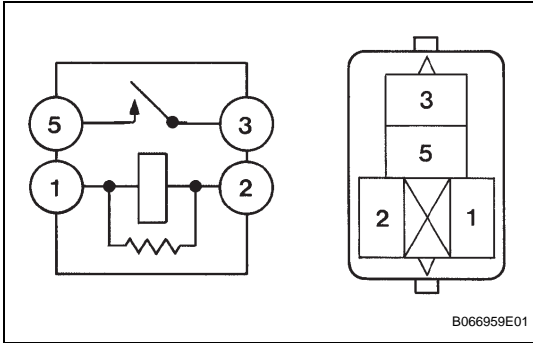

Tester Connection	Condition	Specified Condition
3 - 5	Always	10 kΩ or higher
3 - 5	When battery voltage is applied to terminals 1 and 2	Below 1 Ω