

SPIRAL CABLE

INSPECTION

1. INSPECT SPIRAL CABLE ASSEMBLY

- (a) Disconnect the spiral cable assembly.
- (b) Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Condition	Specified Condition
A-1 - C-8	Always	Below 1 Ω

