

INSTRUMENT PANEL SAFETY PAD

PRECAUTION

1. PRECAUTION FOR VEHICLE WITH SRS AIRBAG AND SEAT BELT PRETENSIONER

- (a) Some operations in this section may affect the SRS airbags. Prior to performing the corresponding operations, read the SRS airbag NOTICE (See page [RS-1](#)).


2. WHEN DISCONNECTING BATTERY NEGATIVE TERMINAL

NOTICE:


When disconnecting the cable from the negative battery terminal, initialize the following systems after the cable is reconnected.

System Name	See procedure
Lighting System (Adaptive Front-Lighting System)	LI-17
Power Window Control System	WS-12
Power Back Door System	ED-33
Sliding Roof System (for Standard)	RF-22
Sliding Roof System (for Multi-panel Moon Roof)	RF-4

COMPONENTS

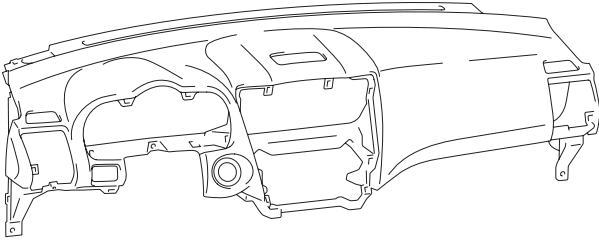


w/ Navigation System:

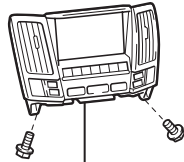


MULTI-DISPLAY

w/o Navigation System:

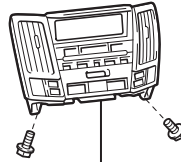

CENTER CLUSTER
INTEGRATION SWITCH

RADIO RECEIVER

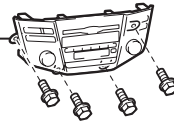

SHIFT LEVER KNOB SUB-ASSEMBLY




INSTRUMENT PANEL FINISH PANEL LOWER




CONSOLE PANEL UPPER FRONT



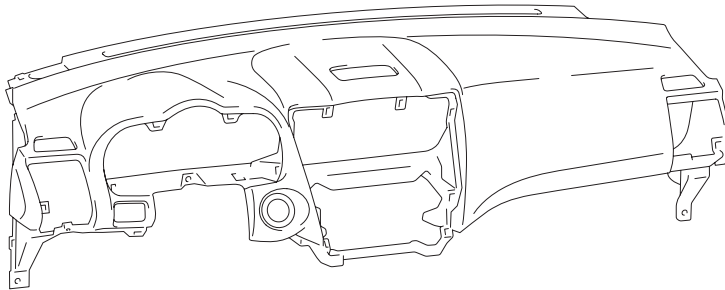


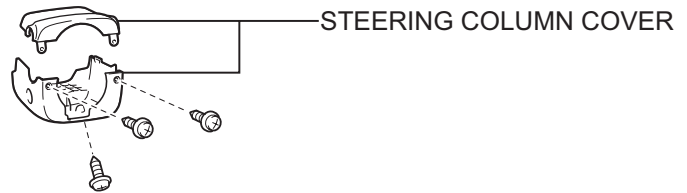
TURN SIGNAL SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY

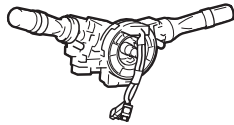

w/ Power Tilt and Power Telescopic:



TILT AND TELESCOPIC SWITCH



STEERING WHEEL NO.2 COVER LOWER

STEERING WHEEL ASSEMBLY

STEERING WHEEL NO.3 COVER LOWER


8.8 (90, 78 in.*lbf)

50 (510, 37)



N*m (kgf*cm, ft.*lbf) : Specified torque

IP

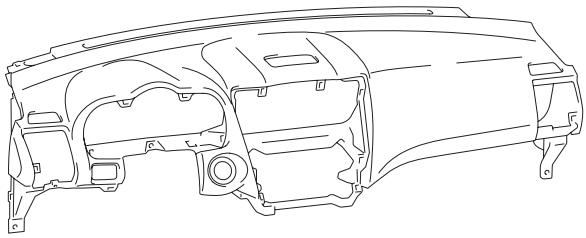

COWL SIDE TRIM SUB-ASSEMBLY RH




COWL SIDE TRIM SUB-ASSEMBLY LH





FRONT DOOR SCUFF PLATE RH




FRONT DOOR SCUFF PLATE LH

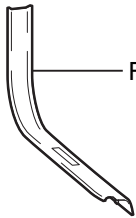

COMBINATION METER ASSEMBLY






 
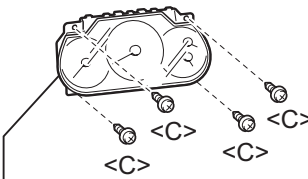


INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY





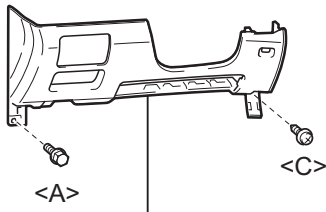


INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER

IP

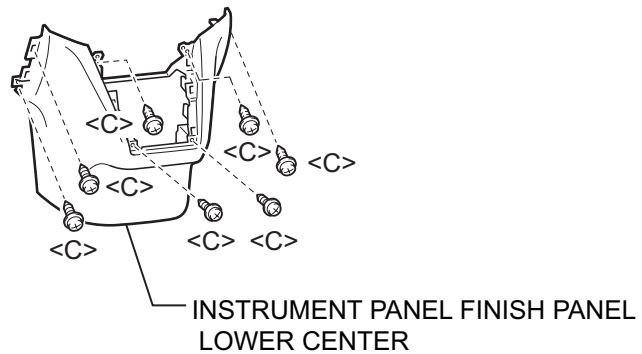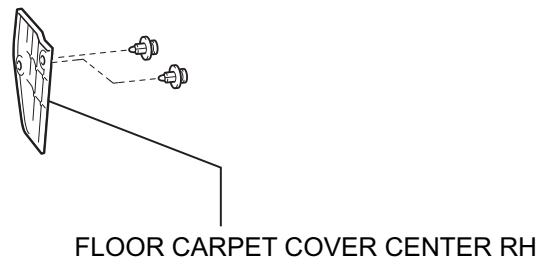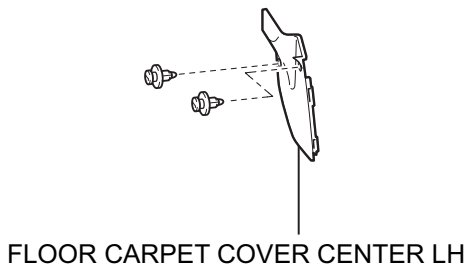
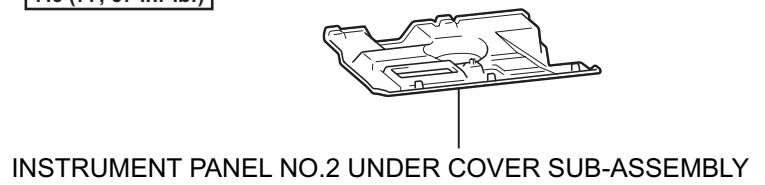
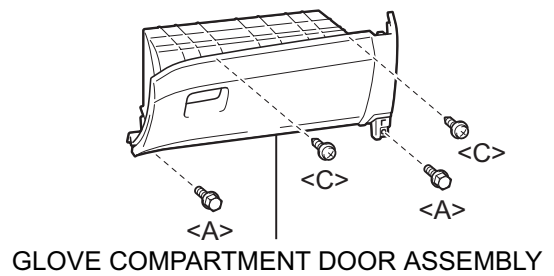
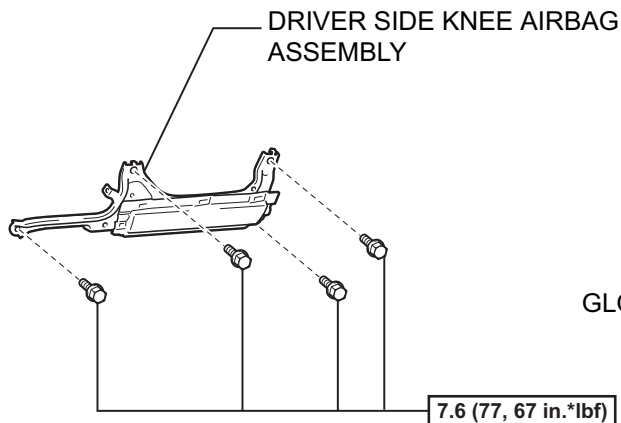
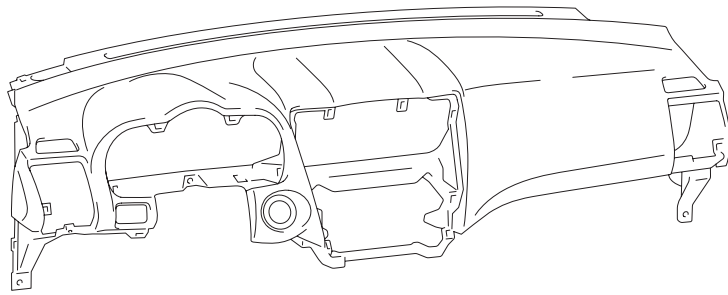



N*m (kgf*cm, ft.*lbf) : Specified torque

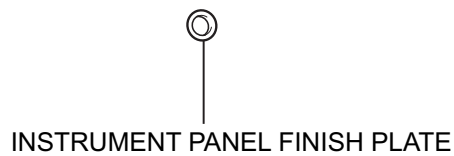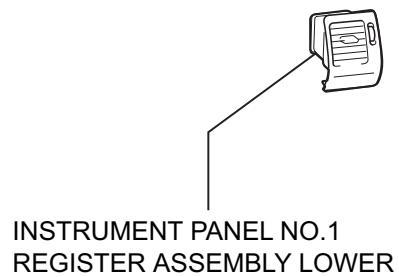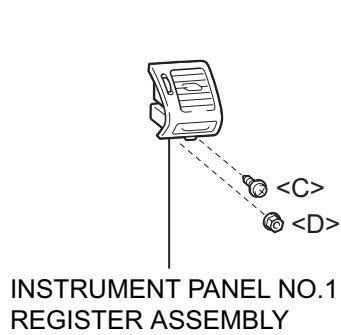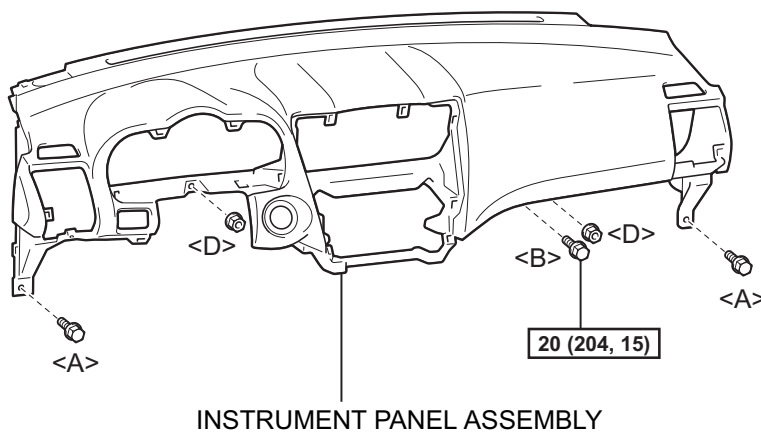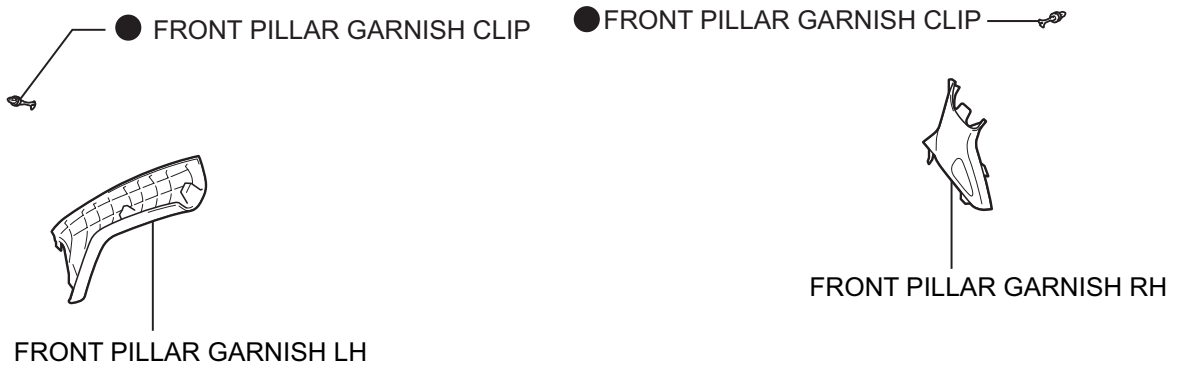

N*m (kgf*cm, ft.*lbf) : Specified torque

 ● Non-reusable part

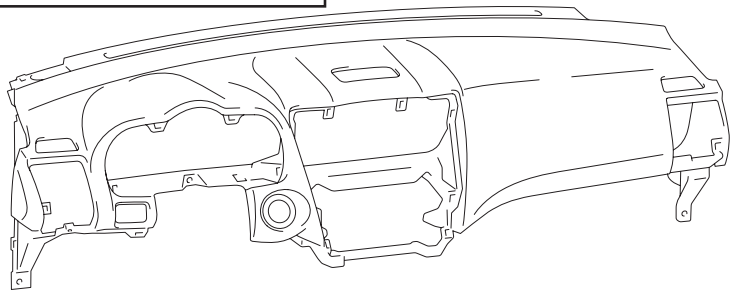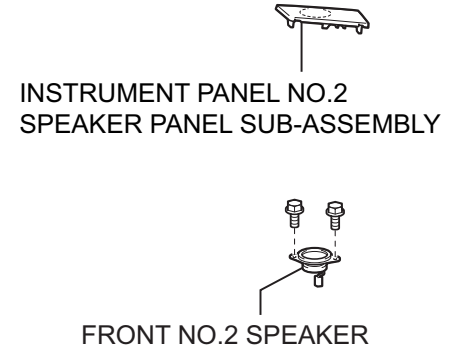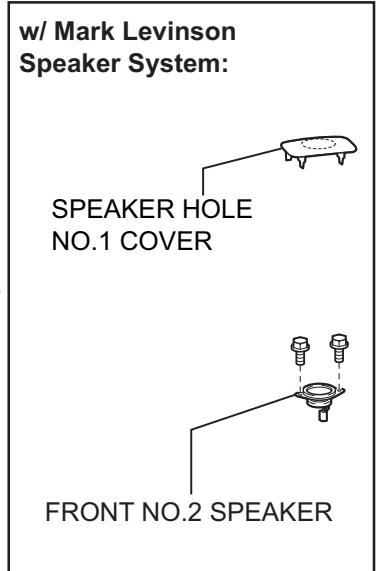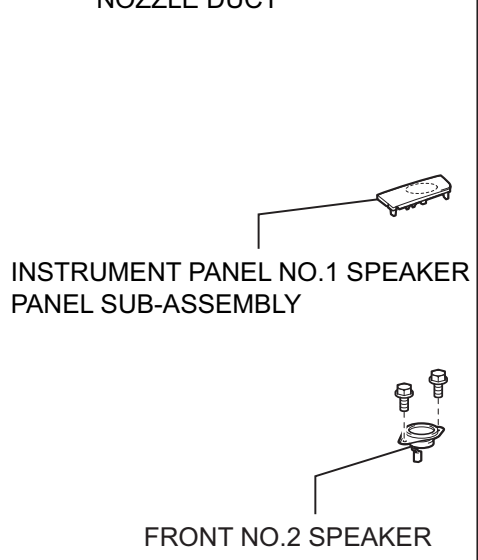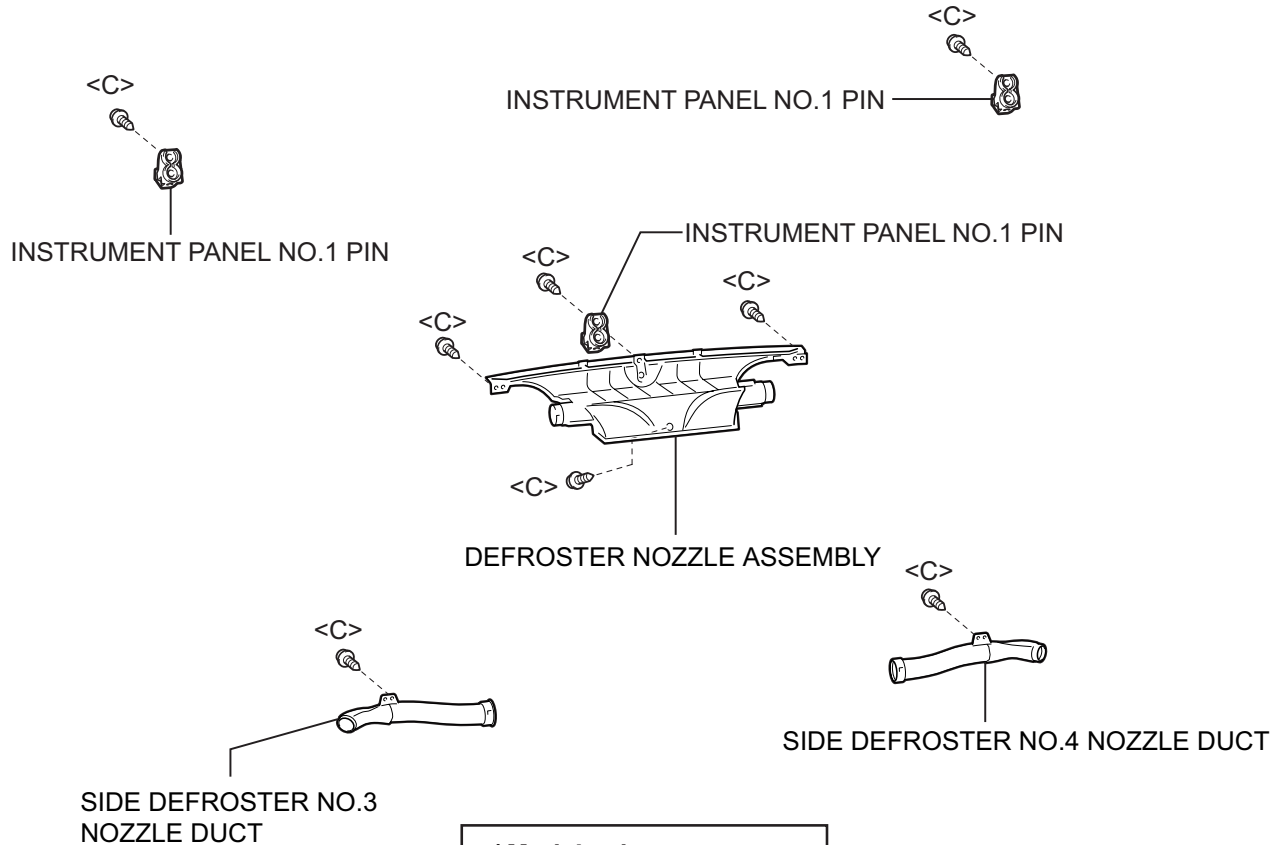




DEFROSTER NOZZLE NO.1 GARNISH




SIDE DEFROSTER NO.2 NOZZLE DUCT




SIDE DEFROSTER NO.1 NOZZLE DUCT

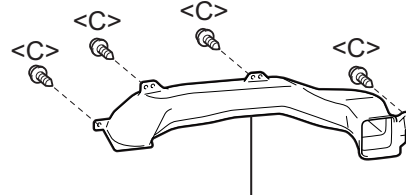


HEATER TO REGISTER NO.4 DUCT

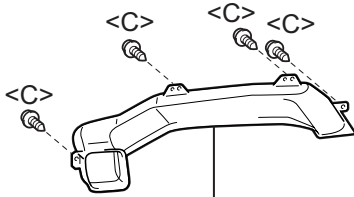

HEATER TO REGISTER NO.1 DUCT

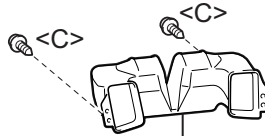


HEATER TO REGISTER CENTER SUB DUCT

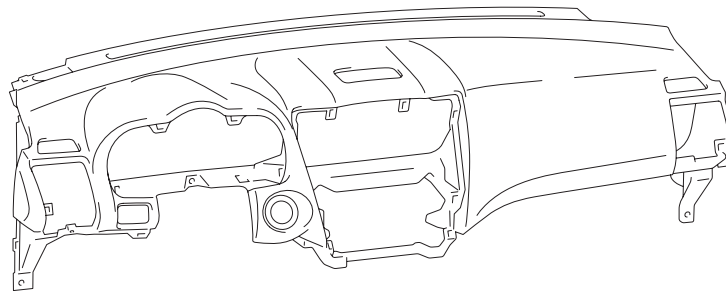


SIDE DEFROSTER NO.2 NOZZLE






SIDE DEFROSTER NO.1 NOZZLE

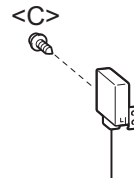

NETWORK GATEWAY ECU

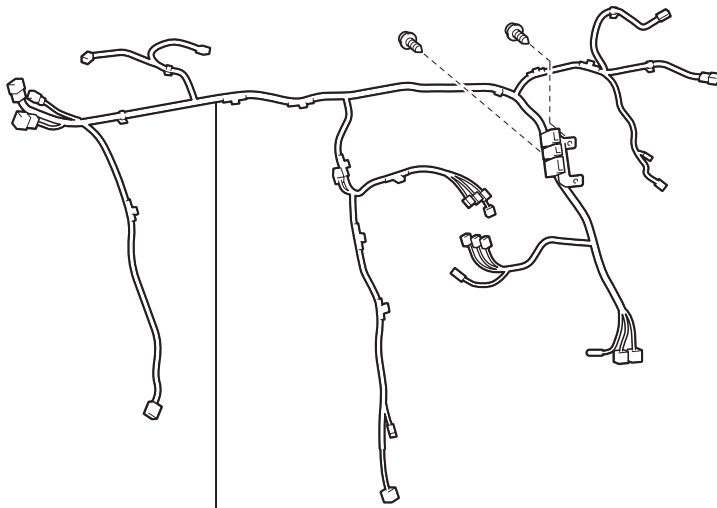

INSTRUMENT PANEL NO.2 WIRE

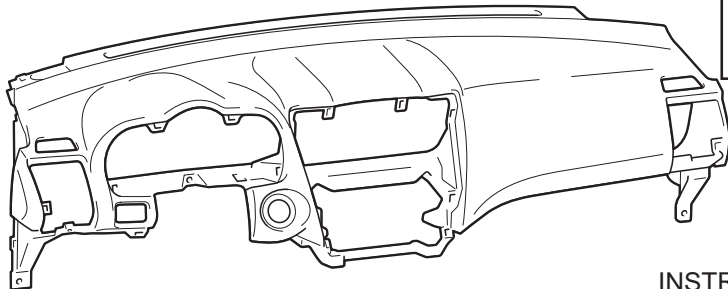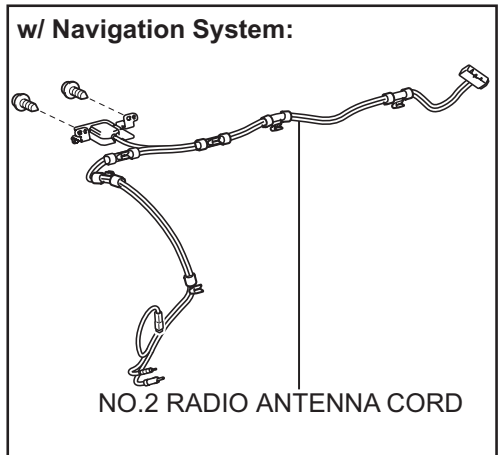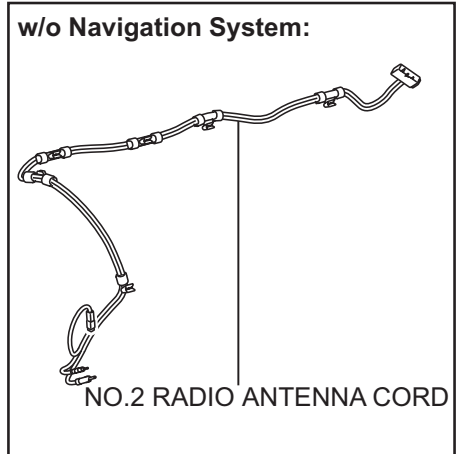

INSTRUMENT PANEL SAFETY PAD

