



AIR CLEANER

INSPECTION

1. INSPECT AIR CLEANER CAP SUB-ASSEMBLY

- (a) Cover port C with your finger, and check that air flows from port B to port A.
- (b) Cover port C with your finger, and check that air does not flow from port A to port B.
- (c) Cover port A and C with your fingers, and apply 60 kPa (450mmHg, 18in.Hg) of vacuum to port B, and check that there is no change of vacuum after one minute.