

## **DISASSEMBLY**

- 1. REMOVE FOG LIGHT BULB**
  - (a) Remove the fog light bulb from the fog light assembly LH.
- 2. REMOVE FOG LIGHT UNIT LH**

## ADJUSTMENT

### 1. PUT VEHICLE THESE CONDITIONS

- (a) Tire inflation pressure is in the specified value. (See page [TW-1](#))
- (b) Start the engine.

### 2. ADJUST FOG LIGHT AIM

- (a) The fog light aim can be adjusted by moving the aiming screw in the vertical direction.

**HINT:**

The optical aim moves upward when turning the screwdriver clockwise, while it moves downward when turning the screwdriver counterclockwise.

