



REAR COMBINATION LIGHT ASSEMBLY

COMPONENTS

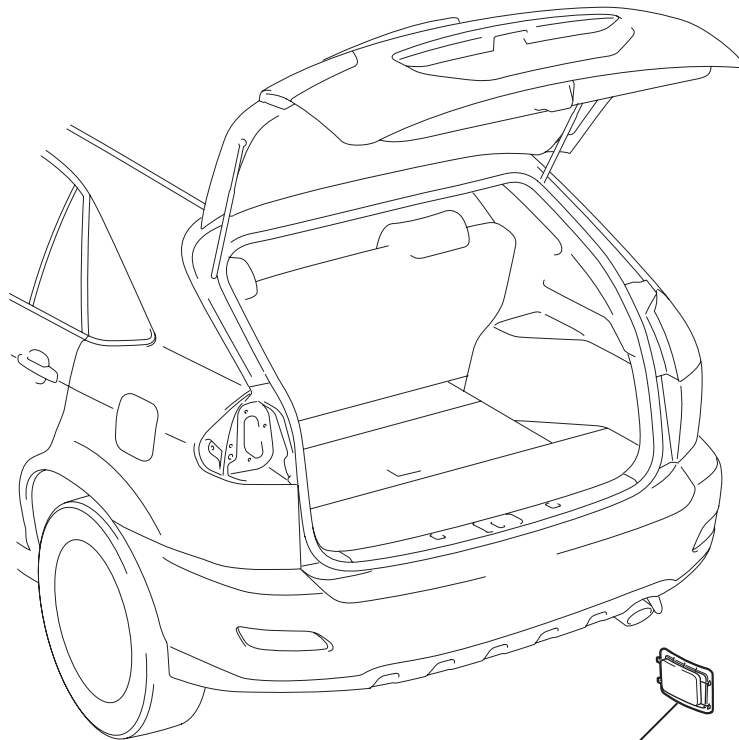

ROOF SIDE INNER GARNISH COVER

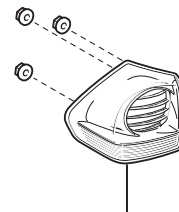


REAR COMBINATION LIGHT ASSEMBLY

REAR COMBINATION LIGHT SOCKET AND WIRE SUB-ASSEMBLY




REAR COMBINATION LIGHT BULB

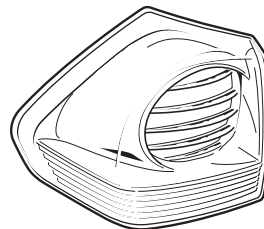

REAR COMBINATION LIGHT LENS AND BODY LH

LI

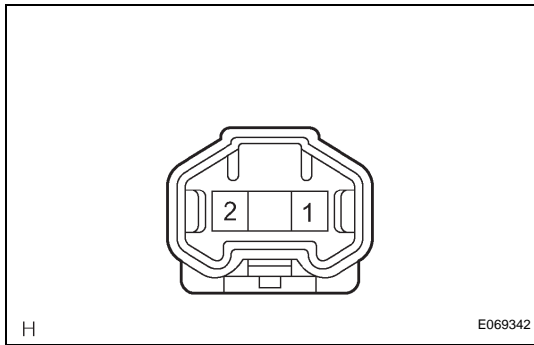

ON-VEHICLE INSPECTION

1. INSPECT REAR COMBINATION LIGHT ASSEMBLY

- (a) Disconnect the rear combination light assembly connector.
- (b) Measure the voltage according to the value(s) in the table below.

Voltage

Tester connection	Condition	Specified condition
1 - 2	Brake pedal released	Below 1 V
1 - 2	Brake pedal depressed	10 to 14 V

- (c) Measure the resistance of the rear combination light according to the value(s) in the table below.

Resistance

Tester connection	Condition	Specified condition
1 - 2	Always	317 to 347 Ω

If the result is not as specified, replace the light.