
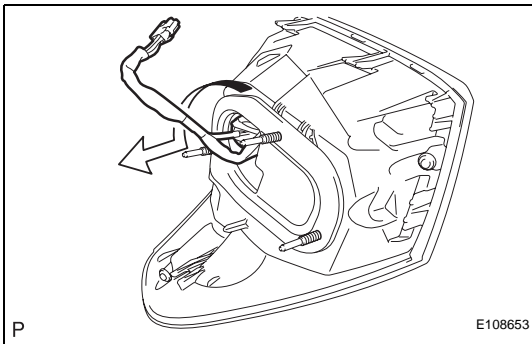



## REMOVAL

1. REMOVE ROOF SIDE INNER GARNISH COVER
2. REMOVE REAR COMBINATION LIGHT ASSEMBLY
  - (a) Disconnect the connector.
  - (b) Remove the 3 nuts.
  - (c) Disengage the 2 pins and remove the rear combination light assembly.

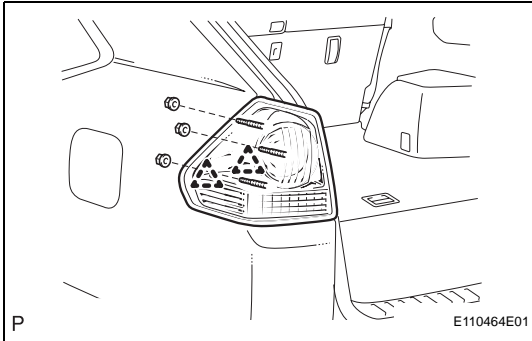


## DISASSEMBLY

1. REMOVE REAR COMBINATION LIGHT BULB
  - (a) Turn in the direction indicated by the arrow and separate the rear combination light bulb and the rear combination light socket and wire sub-assembly as a unit.
  - (b) Remove the rear combination light bulb from the rear combination light socket and wire sub-assembly.

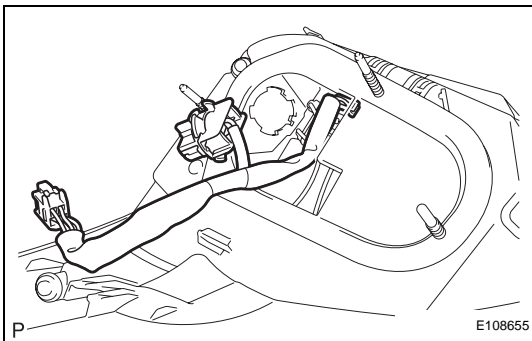


2. REMOVE REAR COMBINATION LIGHT SOCKET AND WIRE SUB-ASSEMBLY
  - (a) Disconnect the connector and remove the rear combination light socket and wire sub-assembly.

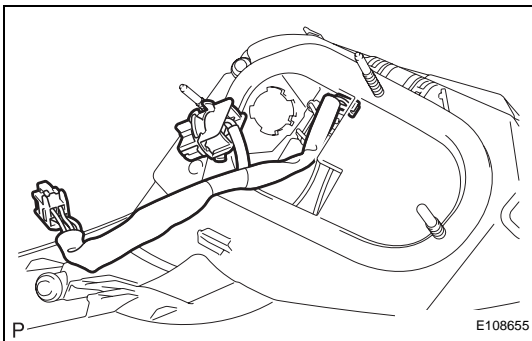

## REASSEMBLY

1. INSTALL REAR COMBINATION LIGHT SOCKET AND WIRE SUB-ASSEMBLY
  - (a) Connect the connector and install the rear combination light socket and wire sub-assembly.
2. INSTALL REAR COMBINATION LIGHT BULB
  - (a) Install the rear combination light bulb.

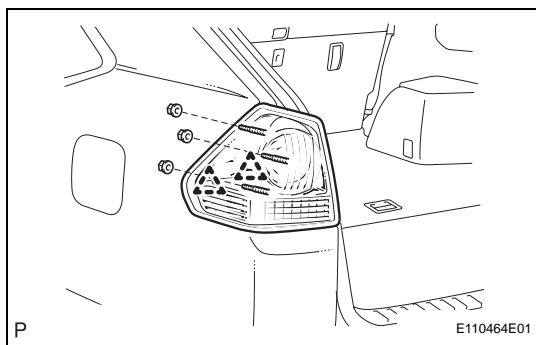

## INSTALLATION

1. **INSTALL REAR COMBINATION LIGHT ASSEMBLY**
  - (a) Install the rear combination light assembly with the 3 nuts and the 2 pins.
2. **INSTALL ROOF SIDE INNER GARNISH COVER**