

# PERSONAL LIGHT ASSEMBLY

## INSPECTION

### 1. INSPECT PERSONAL LIGHT ASSEMBLY

- (a) Remove the personal light assembly.
- (b) Connect the battery positive (+) lead to terminal 17 and negative (-) lead to terminal 6.
- (c) Turn the personal light switch in DOOR position.
- (d) Check that the light comes on.
- (e) Connect the battery positive (+) lead to terminal 17 and negative (-) lead to terminal 5.
- (f) Turn the personal light switch in ON position.
- (g) Check that the light comes on.

#### OK:

#### Comes on

If the light does not come on, replace the personal light assembly.

