

# FRONT ROOM LIGHT ASSEMBLY

## INSPECTION

### 1. INSPECT FRONT ROOM LIGHT ASSEMBLY

- (a) Remove the front room light assembly.
- (b) Connect the battery positive (+) lead to terminal 3 and negative (-) lead to terminal 2.
- (c) Turn the front room light switch in DOOR position.
- (d) Check that the light comes on.
- (e) Connect the battery positive (+) lead to terminal 1 and negative (-) lead to terminal 3.
- (f) Turn the front room light switch in ON position.
- (g) Check that the light comes on.

#### OK:

#### Comes on

If the light does not come on, replace the front room light assembly.

