

REAR ROOM LIGHT ASSEMBLY

INSPECTION

1. INSPECT REAR ROOM LIGHT ASSEMBLY

- (a) Remove the rear room light assembly.
- (b) Connect the battery positive (+) lead to terminal 2 and negative (-) lead to terminal 1.
- (c) Turn on the rear room light switch.
- (d) Check that the light comes on.

OK:

Comes on

If the light does not come on, replace the rear room light assembly.

