

IGNITION KEY CYLINDER LIGHT

INSPECTION

1. INSPECT IGNITION KEY CYLINDER LIGHT

- (a) Remove the transponder key amplifier (ignition key cylinder light).
- (b) Connect the battery positive (+) lead to terminal 2 and negative (-) lead to terminal 6.
- (c) Check that the light comes on.

OK:

Comes on

If the light does not come on, replace the transponder key amplifier (ignition key cylinder light).

