

SCUFF PLATE LIGHT

INSPECTION

1. INSPECT SCUFF PLATE LIGHT

- (a) Remove the scuff plate light.
- (b) Connect the battery positive (+) lead to terminal 2 and negative (-) lead to terminal 1.
- (c) Check that the light comes on.

OK:

Comes on

If the result is not as specified, replace the light.

