

HAZARD WARNING SWITCH

INSPECTION


1. INSPECT HAZARD WARNING SWITCH (w/o Navigation System)

- (a) Remove the center cluster integration switch assembly.
- (b) Measure the resistance according to the value(s) in the table below.

Resistance

| Tester Connection | Condition | Specified Condition |
|-------------------|-----------|---------------------|
| 7 - 11 | OFF | 10 kΩ or higher |
| 7 - 11 | ON | Below 1 Ω |

If the result is not as specified, replace the center cluster integration switch assembly (hazard warning switch).

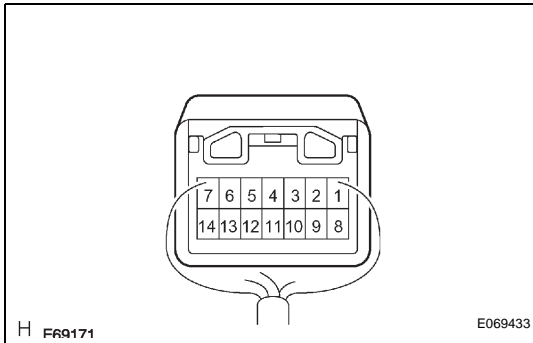

2. INSPECT HAZARD WARNING SWITCH (w/ Navigation System)

- (a) Remove the multi-display assembly.
- (b) Measure the resistance according to the value(s) in the table below.

Resistance

| Tester Connection | Condition | Specified Condition |
|-------------------|-----------|---------------------|
| M5-12 - M6-6 | OFF | 10 kΩ or higher |
| M5-12 - M6-6 | ON | Below 1 Ω |

If the result is not as specified, replace the multi-display assembly (hazard warning switch).

