

STOP LIGHT SWITCH

INSPECTION

1. INSPECT STOP LIGHT SWITCH

- (a) Remove the stop light switch.
- (b) Measure the resistance according to the value(s) in the table below.

Resistance

Tester Connection	Condition	Specified Condition
1 - 2	Switch pin free	10 k Ω or higher
3 - 4	Switch pin free	Below 1 Ω
1 - 2	Switch pin pushed in	Below 1 Ω
3 - 4	Switch pin pushed in	10 k Ω or higher

If the result is not as specified, replace the stop light switch.

