

BACK DOOR COURTESY SWITCH

INSPECTION


1. INSPECT BACK DOOR COURTESY SWITCH

- (a) W/o Power Back Door:
 - (1) Remove the back door lock assembly (back door courtesy switch).
 - (2) Measure the resistance according to the value(s) in the table below.

Resistance

Tester Connection	Condition	Specified Condition
1 - 2	Closed	10 kΩ or higher
1 - 2	Opened	Below 1 Ω

If the result is not as specified, replace the back door lock assembly (back door courtesy switch).

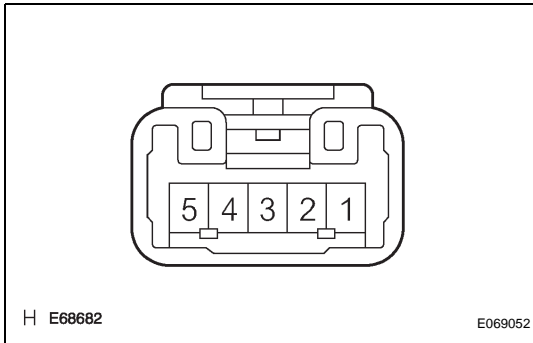

2. INSPECT BACK DOOR COURTESY SWITCH

- (a) W/ Power Back Door:
 - (1) Remove the back door lock assembly (back door courtesy switch).
 - (2) Measure the resistance according to the value(s) in the table below.

Resistance

Tester Connection	Condition	Specified Condition
1 - 6	Closed	10 kΩ or higher
1 - 6	Opened	Below 1 Ω

If the result is not as specified, replace the back door lock assembly (back door courtesy switch).

