



## REMOVAL

### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


(See page [RS-1](#))

### 2. REMOVE HEIGHT CONTROL SENSOR

- (a) Disconnect the connector.
- (b) Remove the nut and separate the height control sensor link.

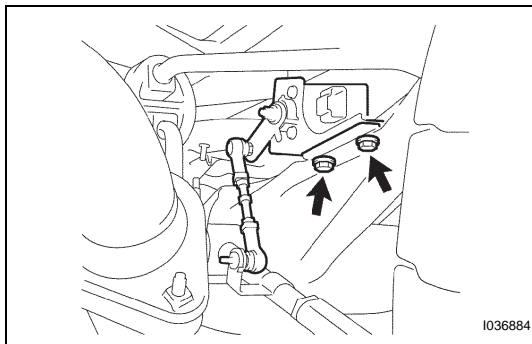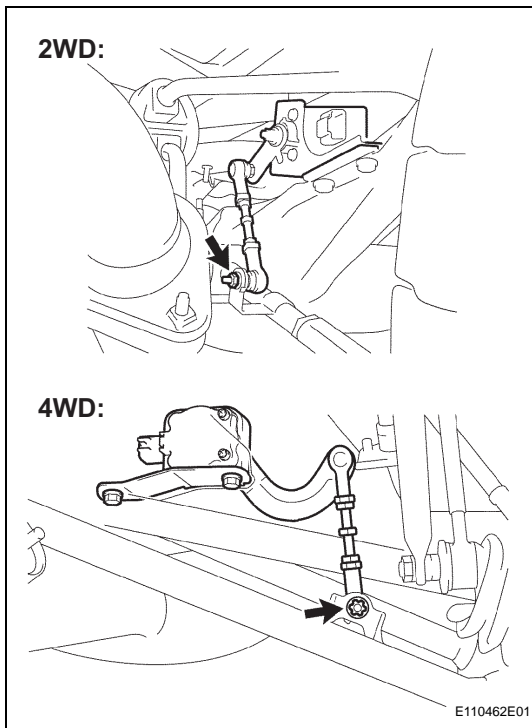

- (c) 2WD:
  - (1) Remove the 2 bolts and the height control sensor.

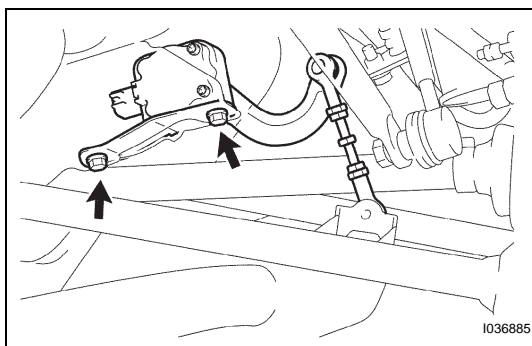


- (d) 4WD:
  - (1) Remove the 2 bolts and the height control sensor.

## INSTALLATION

### 1. INSTALL HEIGHT CONTROL SENSOR


#### (a) 2WD:

- (1) Install the height control sensor with the 2 bolts.

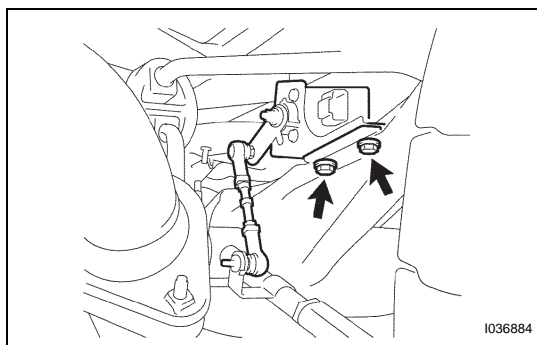

#### (b) 4WD:

- (1) Install the height control sensor with the 2 bolts.

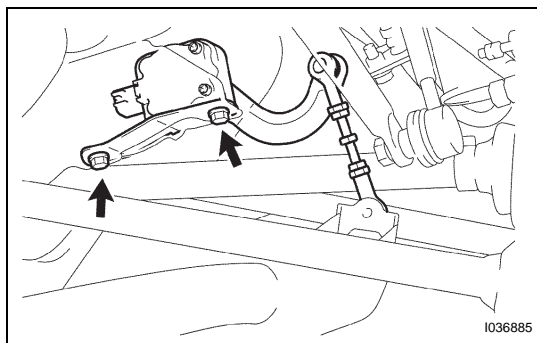

#### (c) Install the height control sensor link with the nut.

**Torque: 5.4 N\*m (55 kgf\*cm, 48 in.\*lbf)**

#### (d) Connect the connector.

### 2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

### 3. PERFORM INITIALIZATION

### 4. VEHICLE PREPARATION FOR HEADLIGHT AIM

### 5. PREPARATION FOR HEADLIGHT AIM (Using a tester)

#### (a) Using a tester:

- (1) Preparation for headlight aim (See page [LI-196](#)).

### 6. PREPARATION FOR HEADLIGHT AIM (Using a screen)

#### (a) Using a screen:

- (1) Preparation for headlight aim (See page [LI-196](#)).

### 7. HEADLIGHT AIMING INSPECTION

### 8. HEADLIGHT AIMING ADJUSTMENT

