

<b>DTC</b>	<b>B2421</b>	<b>Steering Neutral Point Automatic Correction Incompletion</b>
------------	--------------	---

**DESCRIPTION**

This DTC is output when AFS ECU does not finish steering neutral point automatic correction. AFS operation is prohibited while this DTC is being output. This DTC is completed and AFS operation starts when AFS ECU records the steering neutral point correctly. If this DTC is not automatically erased, perform repair or replacement by following the procedures below.

DTC No.	DTC Detecting Condition	Trouble Area
B2421	<ul style="list-style-type: none"> <li>• Steering neutral point correction recording</li> <li>• Steering position sensor circuit</li> </ul>	<ul style="list-style-type: none"> <li>• Steering sensor</li> <li>• Harness or connector</li> <li>• Skid Control ECU</li> <li>• AFS ECU</li> </ul>

<b>1</b>	<b>CHECK DTC</b>
----------	------------------

(a) Check that DTC B2414 and B2415 are not output (See page [LI-56](#)).

**OK:**  
DTC is not output.

NG
GO TO FLOW CHART

OK

<b>2</b>	<b>AFS ECU RE-INITIALIZATION</b>
----------	----------------------------------

(a) Return to normal condition.

**OK:**  
DTC is not output.

NG
REPLACE AFS ECU

OK

<b>END</b>
------------

**DTC****B2423****AFS ECU Installation Error****DESCRIPTION**

This DTC is output if the AFS ECU is not installed properly. (The AFS ECU for vehicles with coil suspension is installed on vehicles with air suspension.)

DTC No.	DTC Detecting Condition	Trouble Area
B2423	<ul style="list-style-type: none"> <li>AFS ECU installation error (AFS ECU for vehicles with coil suspension is installed on vehicles with air suspension.)</li> </ul>	<ul style="list-style-type: none"> <li>AFS ECU</li> </ul>

**1****REPLACE AFS ECU****NEXT****END**