



OIL PUMP

COMPONENTS

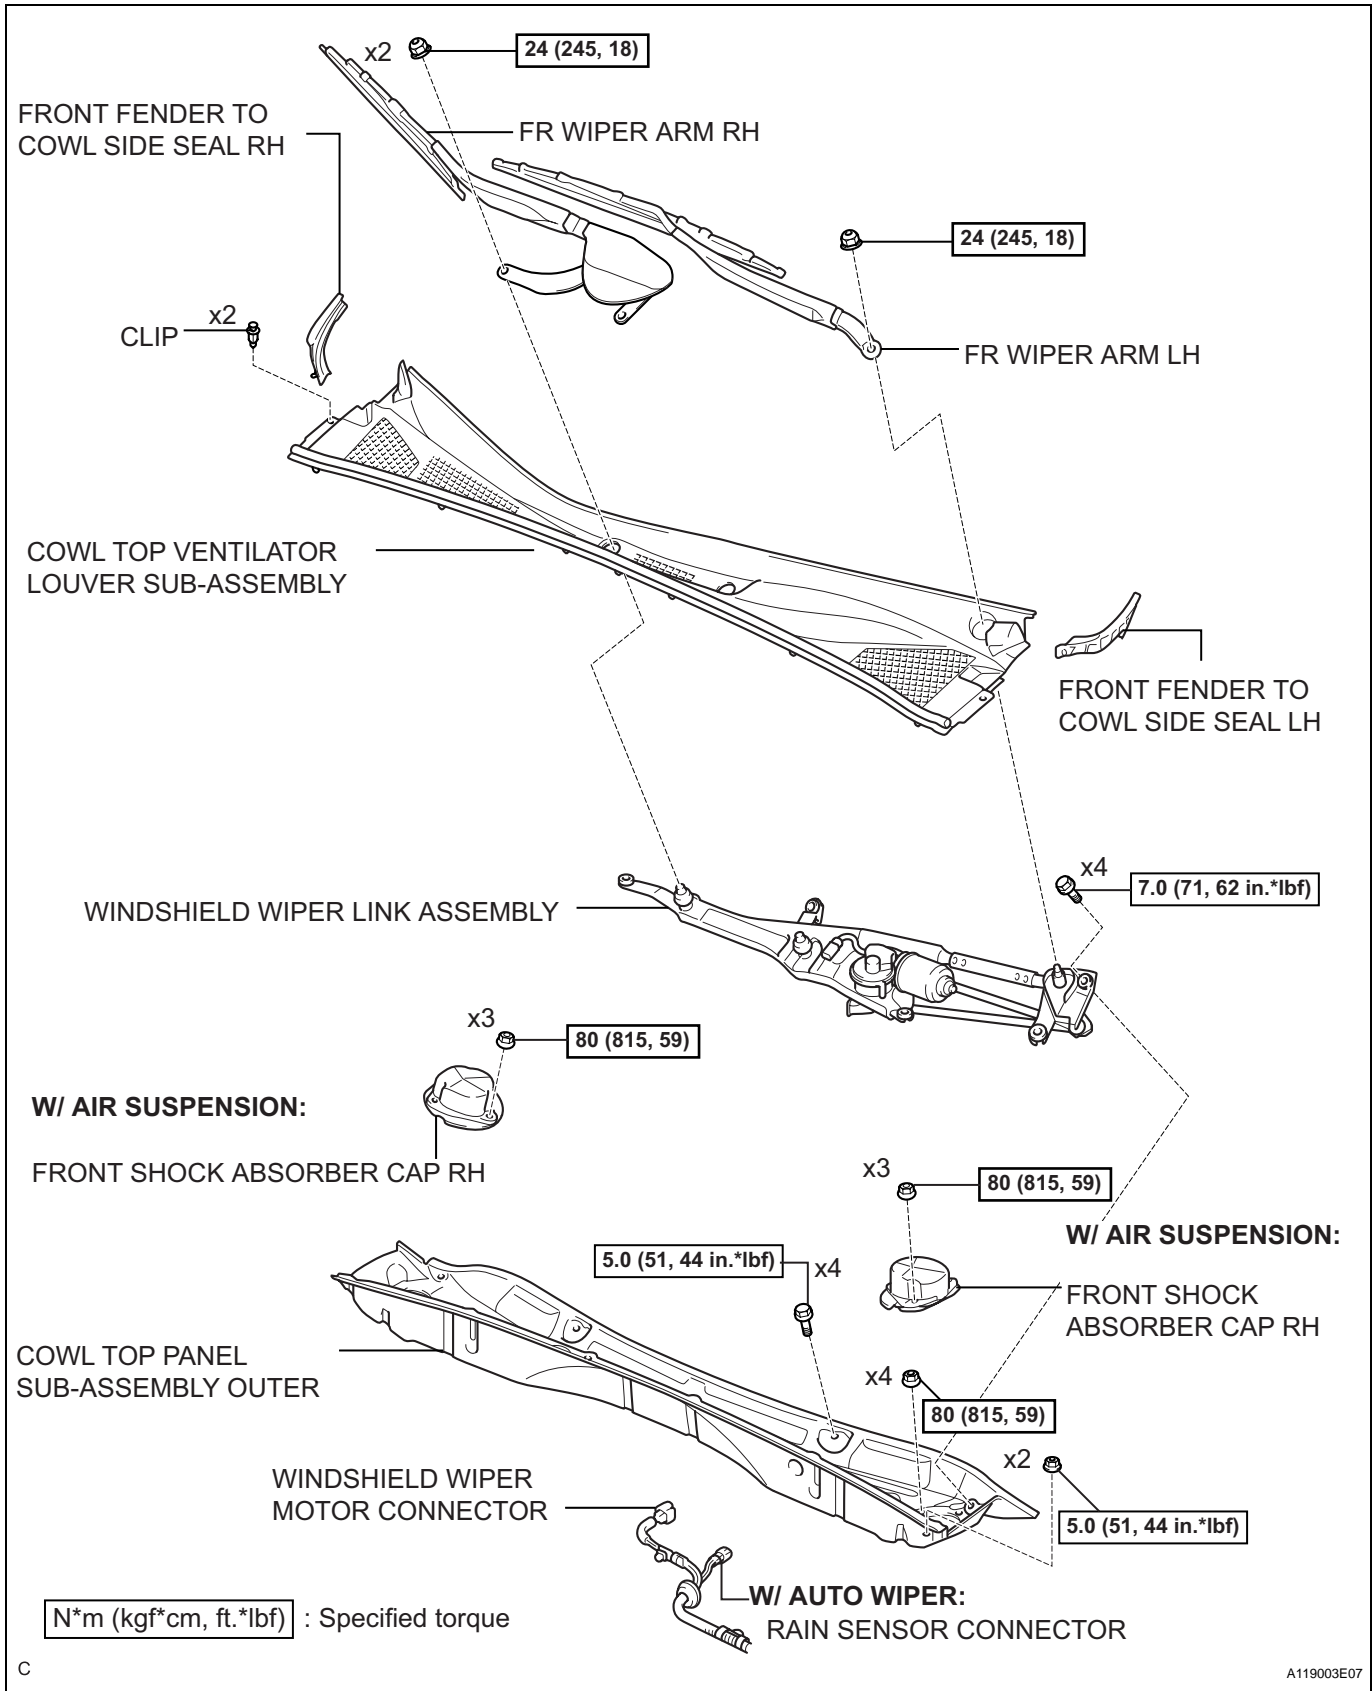




LU

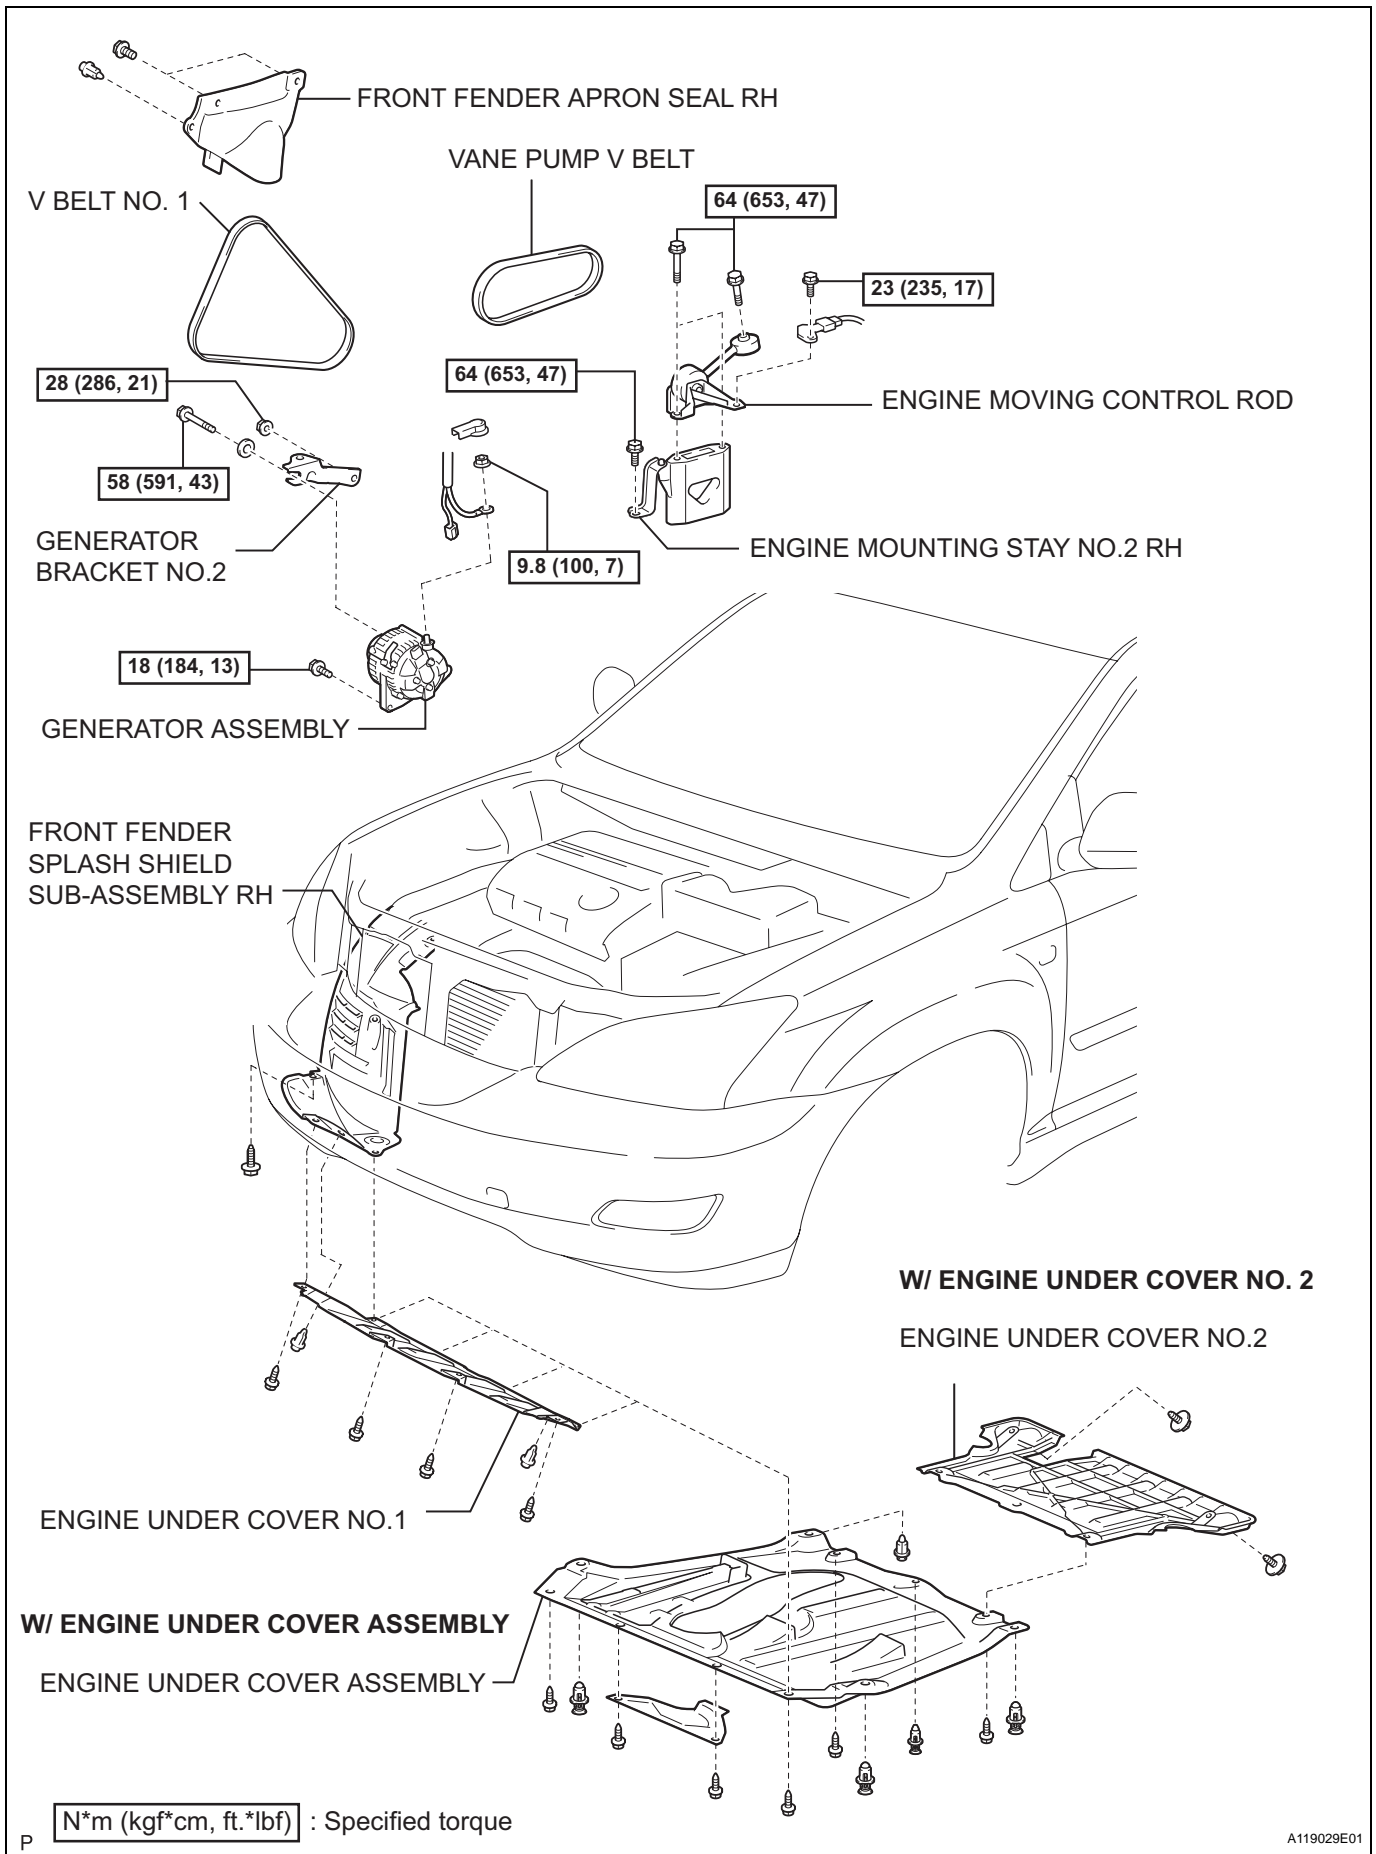

LU


P

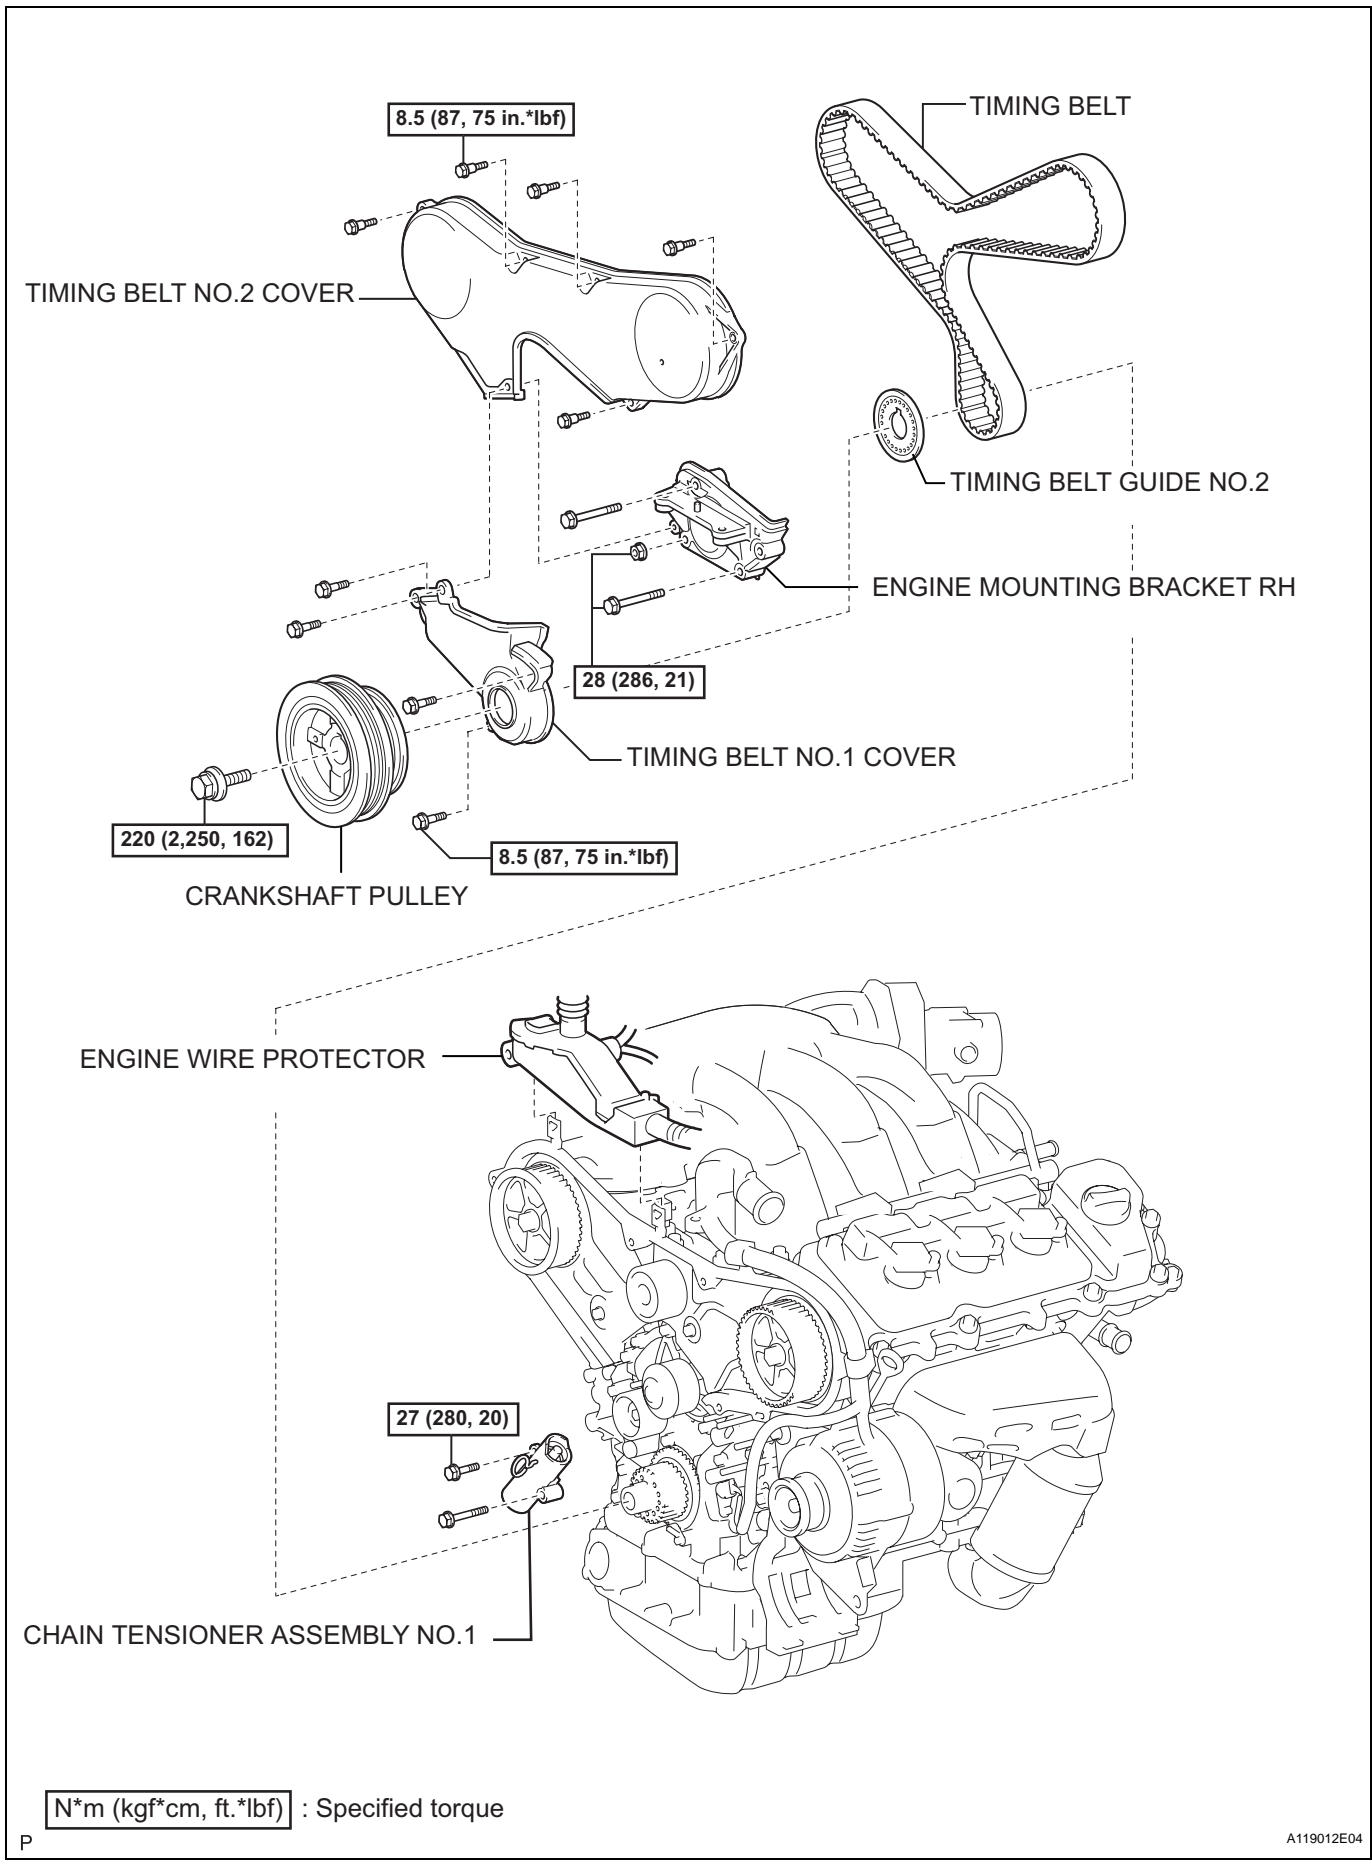

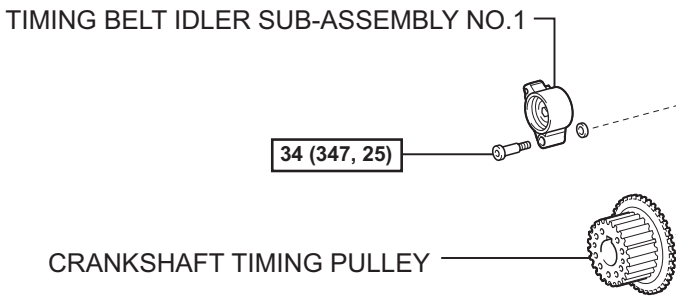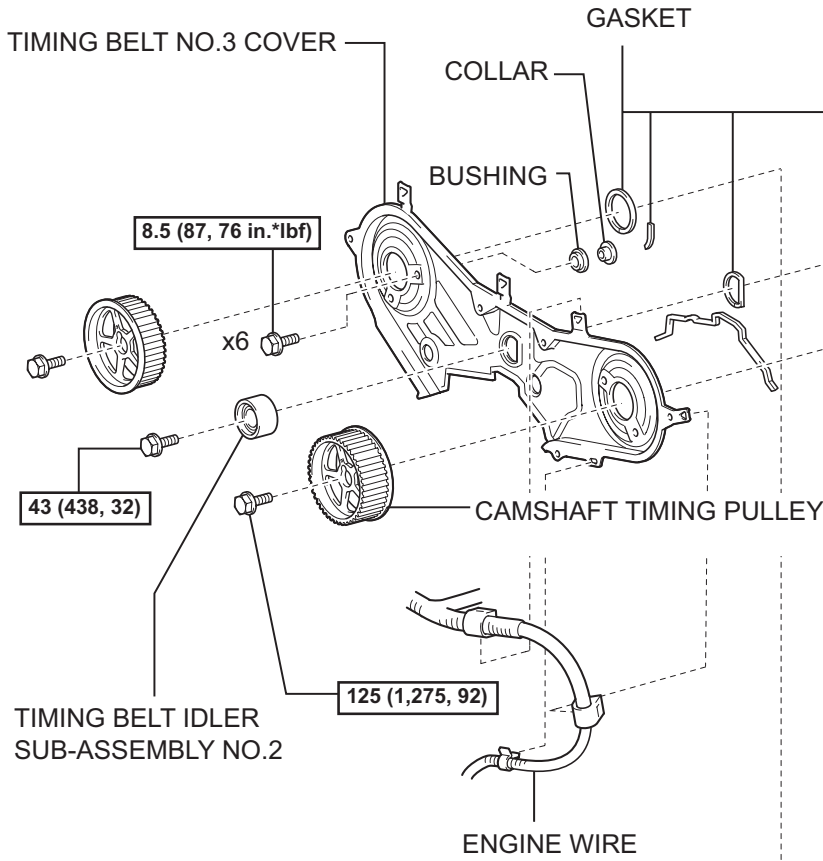

N*m (kgf*cm, ft.*lbf) : Specified torque

LU

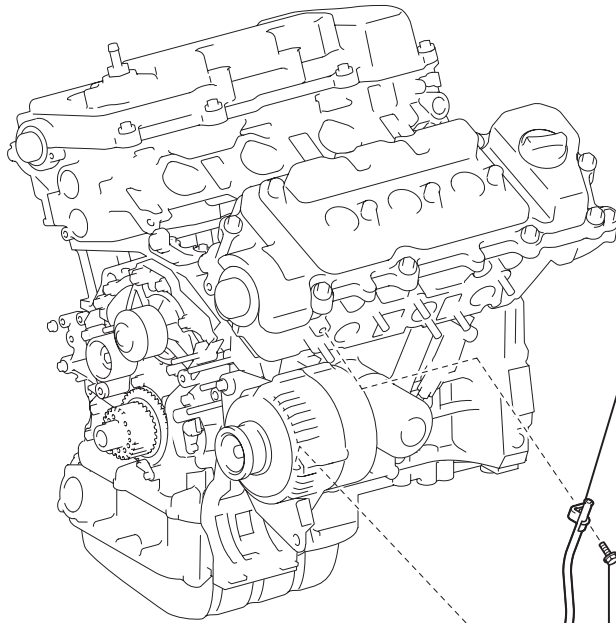

OIL LEVEL GAGE GUIDE

OIL LEVEL GAGE SUB-ASSEMBLY

EXHAUST MANIFOLD HEAT INSULATOR NO.2

8.5 (87, 75 in.*lbf)

● O-RING

EXHAUST PIPE SUB-ASSEMBLY FRONT NO.3

8.0 (82, 71 in.*lbf)

EXHAUST MANIFOLD CONVERTER SUB-ASSEMBLY NO.2

EXHAUST MANIFOLD TO HEAD LH GASKET

● GASKET

● GASKET

56 (571, 41)

49 (500, 36)

EXHAUST PIPE SUPPORT BRACKET NO.1

8.5 (87, 75 in.*lbf)

56 (571, 41)

● GASKET

48 (490, 35)

COMPRESSION SPRING

21 (214, 15)

● GASKET

MANIFOLD CONVERTER INSULATOR NO.3


EXHAUST PIPE ASSEMBLY FRONT

● 56 (571, 41)

N*m (kgf*cm, ft.*lbf) : Specified torque


● Non-reusable part

LU


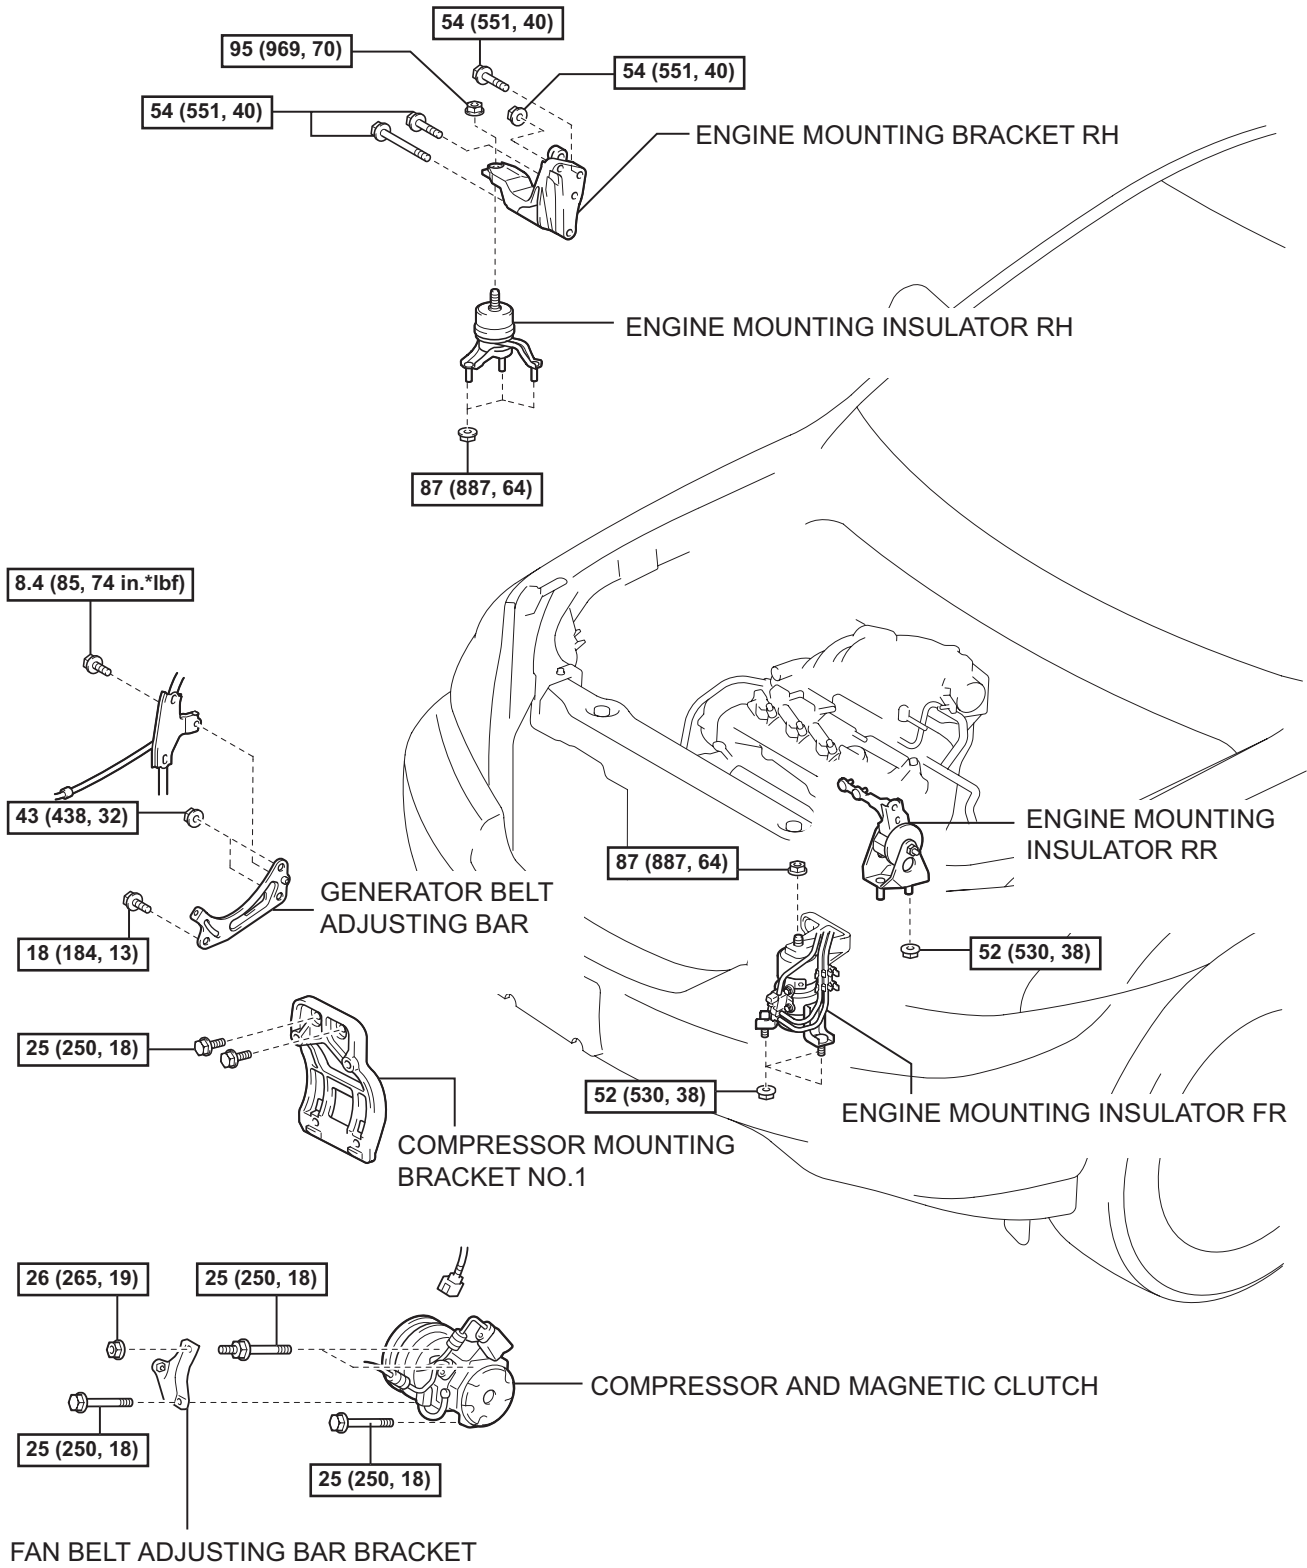


LU

N*m (kgf*cm, ft.*lbf) : Specified torque

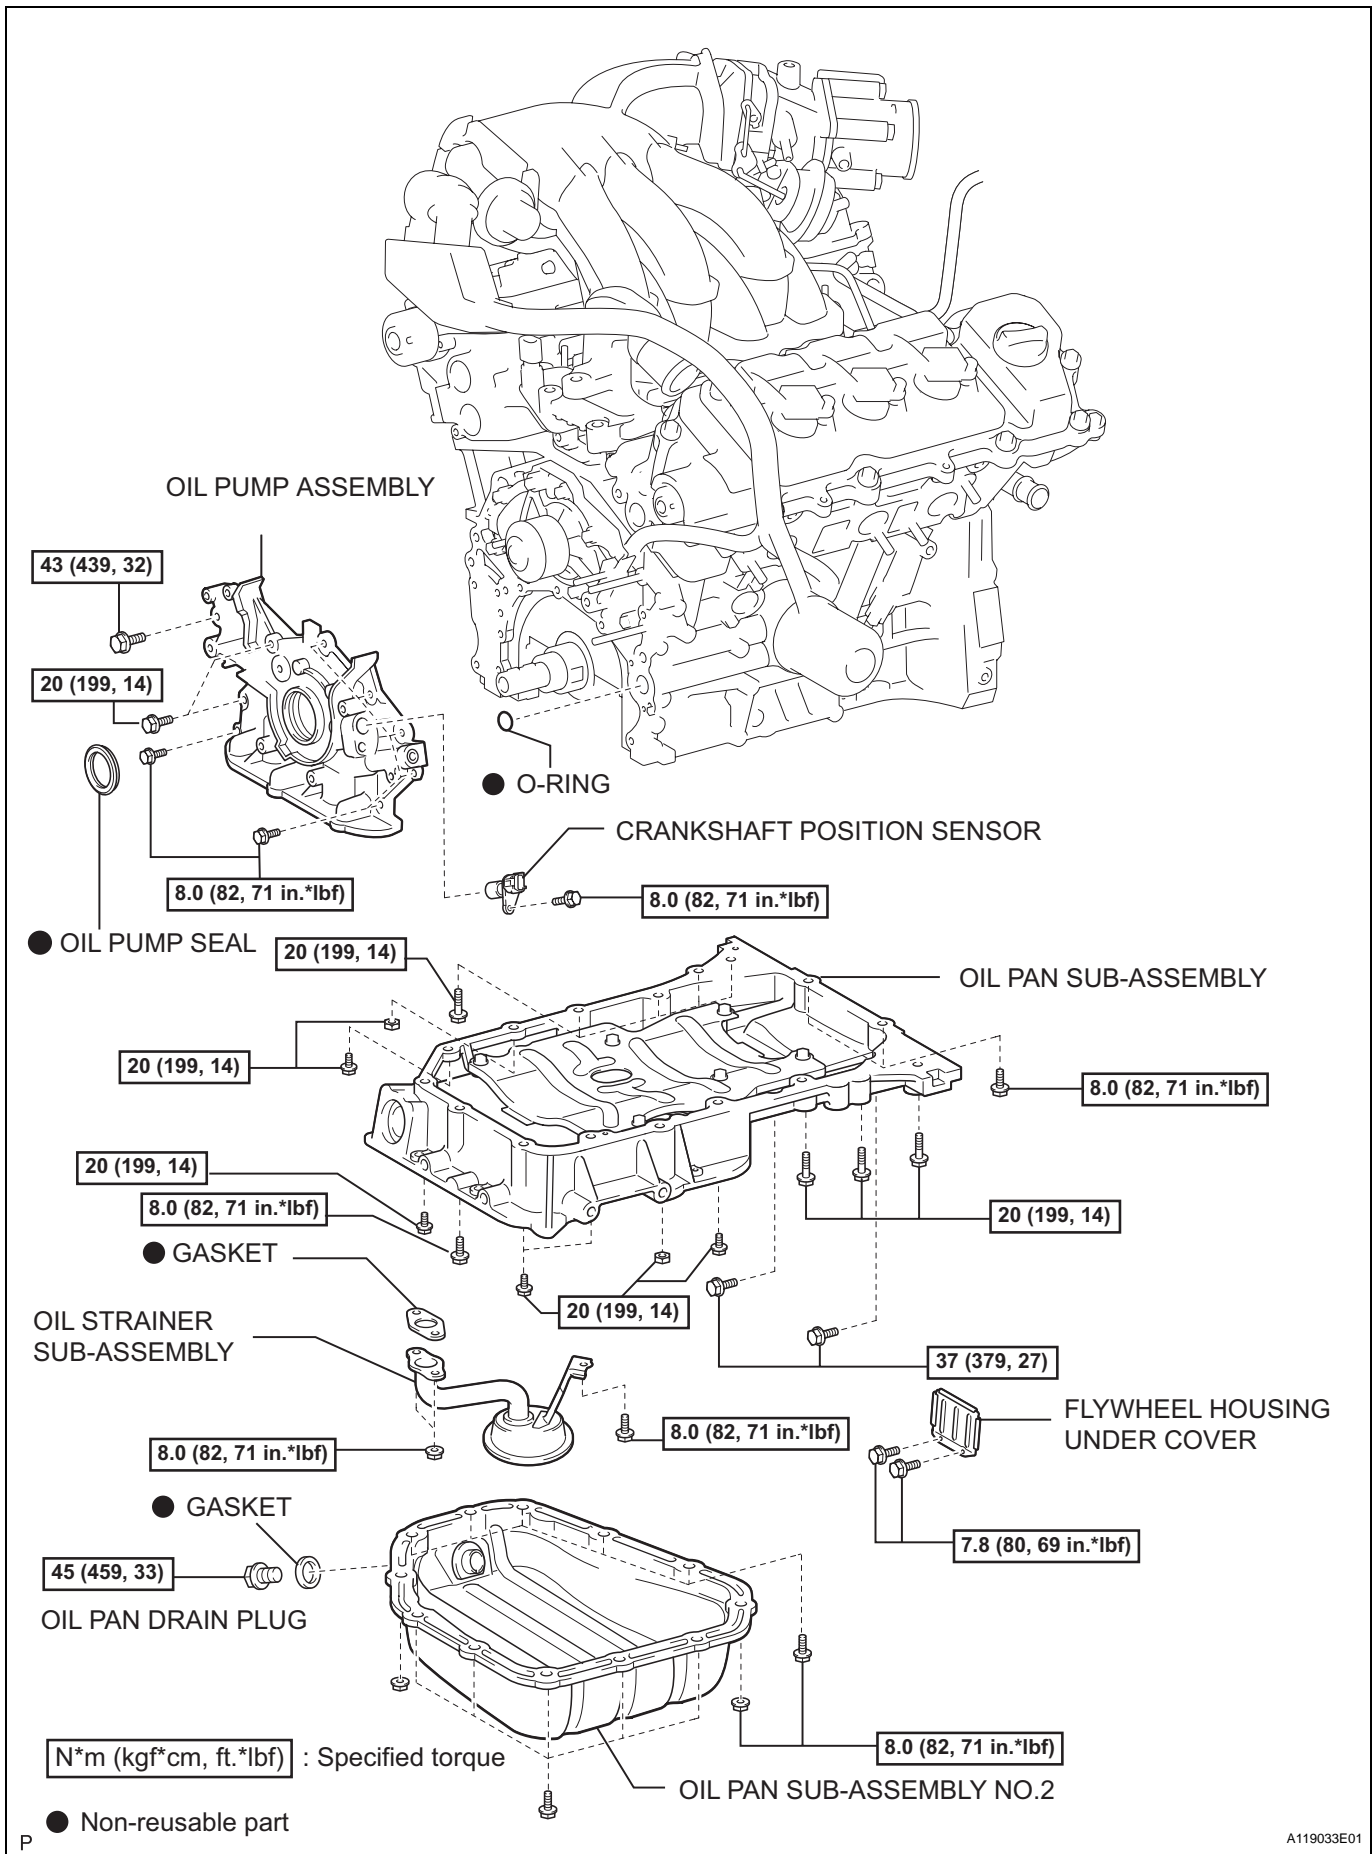

LU

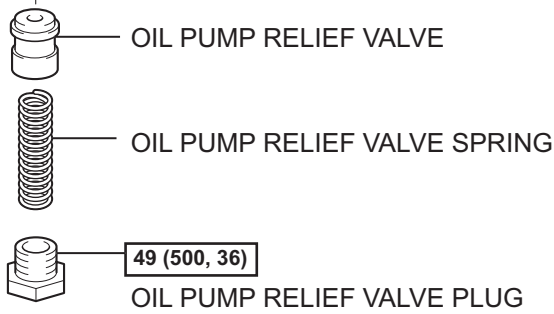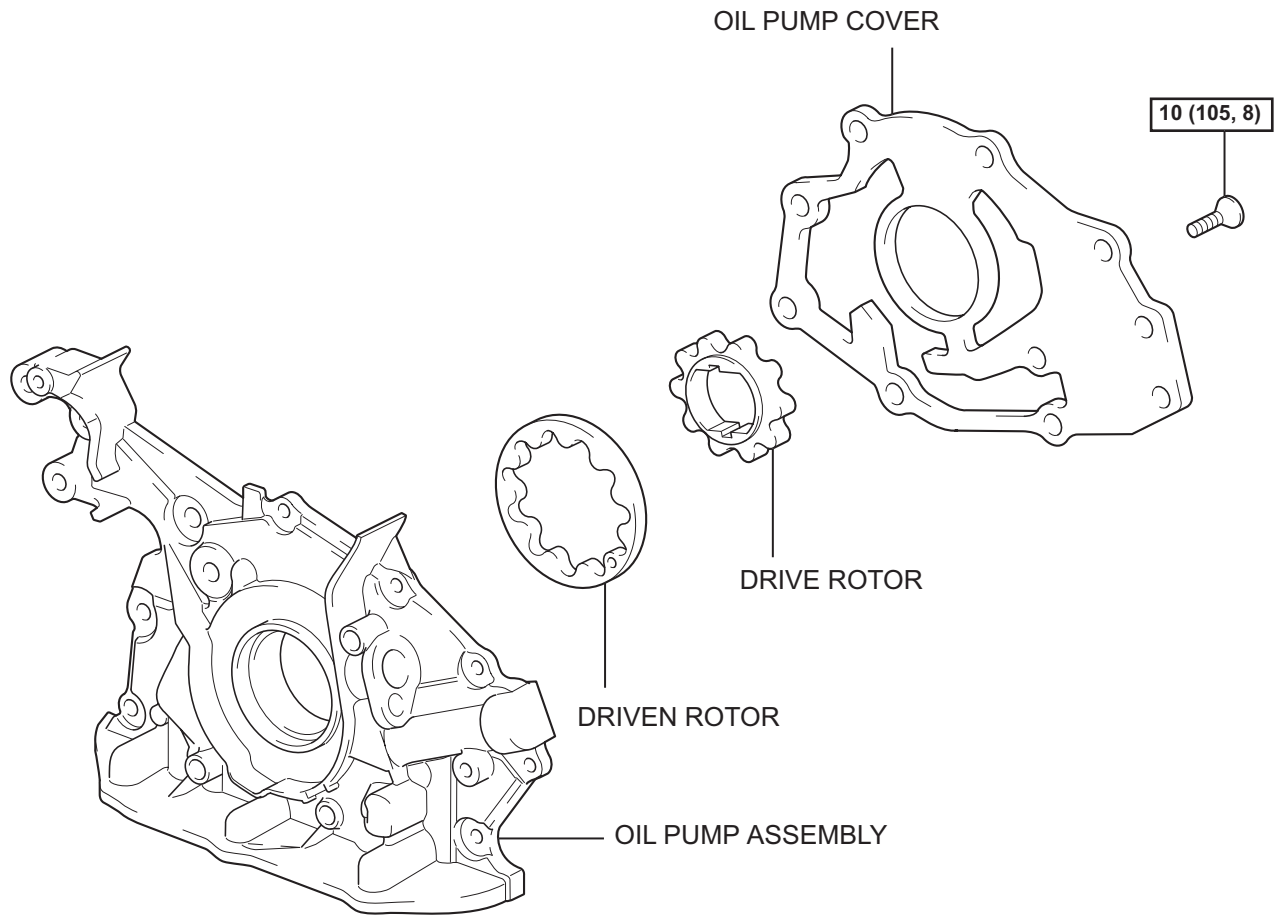

N*m (kgf*cm, ft.*lbf) : Specified torque

LU