


# BEARING RETAINER OIL SEAL

## COMPONENTS

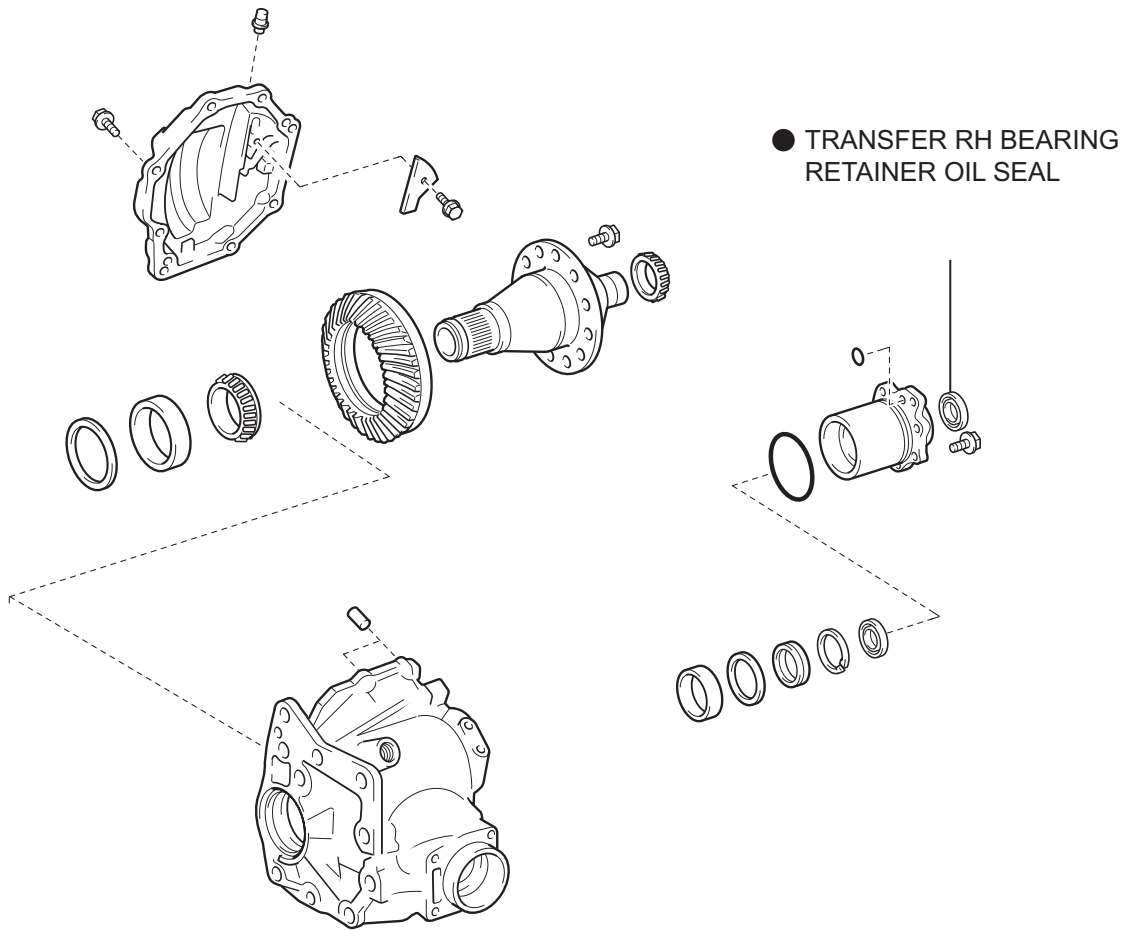

TF

● Non-reusable part

## REMOVAL

1. **DRAIN AUTOMATIC TRANSAXLE FLUID**
  - (a) Remove the automatic drain plug, gasket and bleed the drain automatic transaxle fluid.
2. **REMOVE NO. 1 TRANSFER CASE PLUG (See page TF-14)**
3. **REMOVE TRANSFER DRAIN PLUG**
  - (a) Remove the transfer drain plug, gasket and bleed the drain transfer oil.
4. **REMOVE FRONT WHEEL**
5. **REMOVE FRONT DRIVE SHAFT ASSEMBLY RH**

HINT:  
(See page DS-5)
6. **REMOVE TRANSFER RH BEARING RETAINER OIL SEAL**
  - (a) Using SST(s), remove the transfer RH bearing retainer oil seal.  
**SST 09308-00010**  
**NOTICE:**  
**Do not damage the oil-seal-fitted surface of the case.**

