

ENGINE

GENERAL MAINTENANCE

HINT:

Inspect these items on a cooled down engine.

1. **REPLACE TIMING BELT**
(See page [EM-22](#))
2. **INSPECT DRIVE BELT**
(See page [EM-6](#))
3. **INSPECT SPARK PLUGS**
(See page [IG-1](#))
4. **INSPECT AIR CLEANER FILTER**
 - (a) Remove the air filter.
 - (b) Visually check that the air filter is not excessively damaged, dirt or oily.
 - (c) Clean the filter with compressed air. First blow from the inside throughly, and then blow from the outside of the filter.
 - (d) Reinstall the air filter.
5. **REPLACE AIR CLEANER FILTER**
 - (a) Replace the air filter with a new one.
6. **REPLACE ENGINE OIL AND OIL FILTER**
(See page [LU-1](#))
7. **INSPECT ENGINE COOLANT**
(See page [CO-1](#))
8. **INSPECT GASKET IN FUEL TANK CAP**
(See page [FU-3](#))
9. **INSPECT FUEL LINES AND CONNECTIONS, FUEL TANK VAPOR VENT SYSTEM HOSES AND FUEL TANK BANDS**
 - (a) Visually check the fuel lines for cracks, leakage, loose connections, deformation or tank band looseness.
10. **INSPECT EXHAUST PIPES AND MOUNTINGS**
 - (a) Visually check the pipes, hangers and connections for severe corrosion, leaks or damage.
11. **INSPECT VALVE CLEARANCE**
(See page [EM-151](#))

