

METER / GAUGE SYSTEM

PRECAUTION

1. REMOVAL AND INSTALLATION OF THE BATTERY TERMINAL


- (a) Before performing electrical work, disconnect the battery negative (-) terminal in order to prevent a short in the system.
- (b) When disconnecting and reconnecting the battery cable, turn the ignition switch and lighting switches off and loosen the terminal nut completely. Perform these operations without prying on the terminal.
- (c) When the battery terminal is removed, the memories of the clock, radio, DTCs, etc. are erased. So before removing the terminal, check and make a note of them.

NOTICE:


When disconnecting the battery negative (-) terminal, initialize the following system after the terminal is reconnected.

System Name	See Procedure
Lighting System	LI-17
Sliding Roof Control System	RF-4 and RF-22
Power Window Control System	WS-12
Power Back Door System	ED-33

PARTS LOCATION

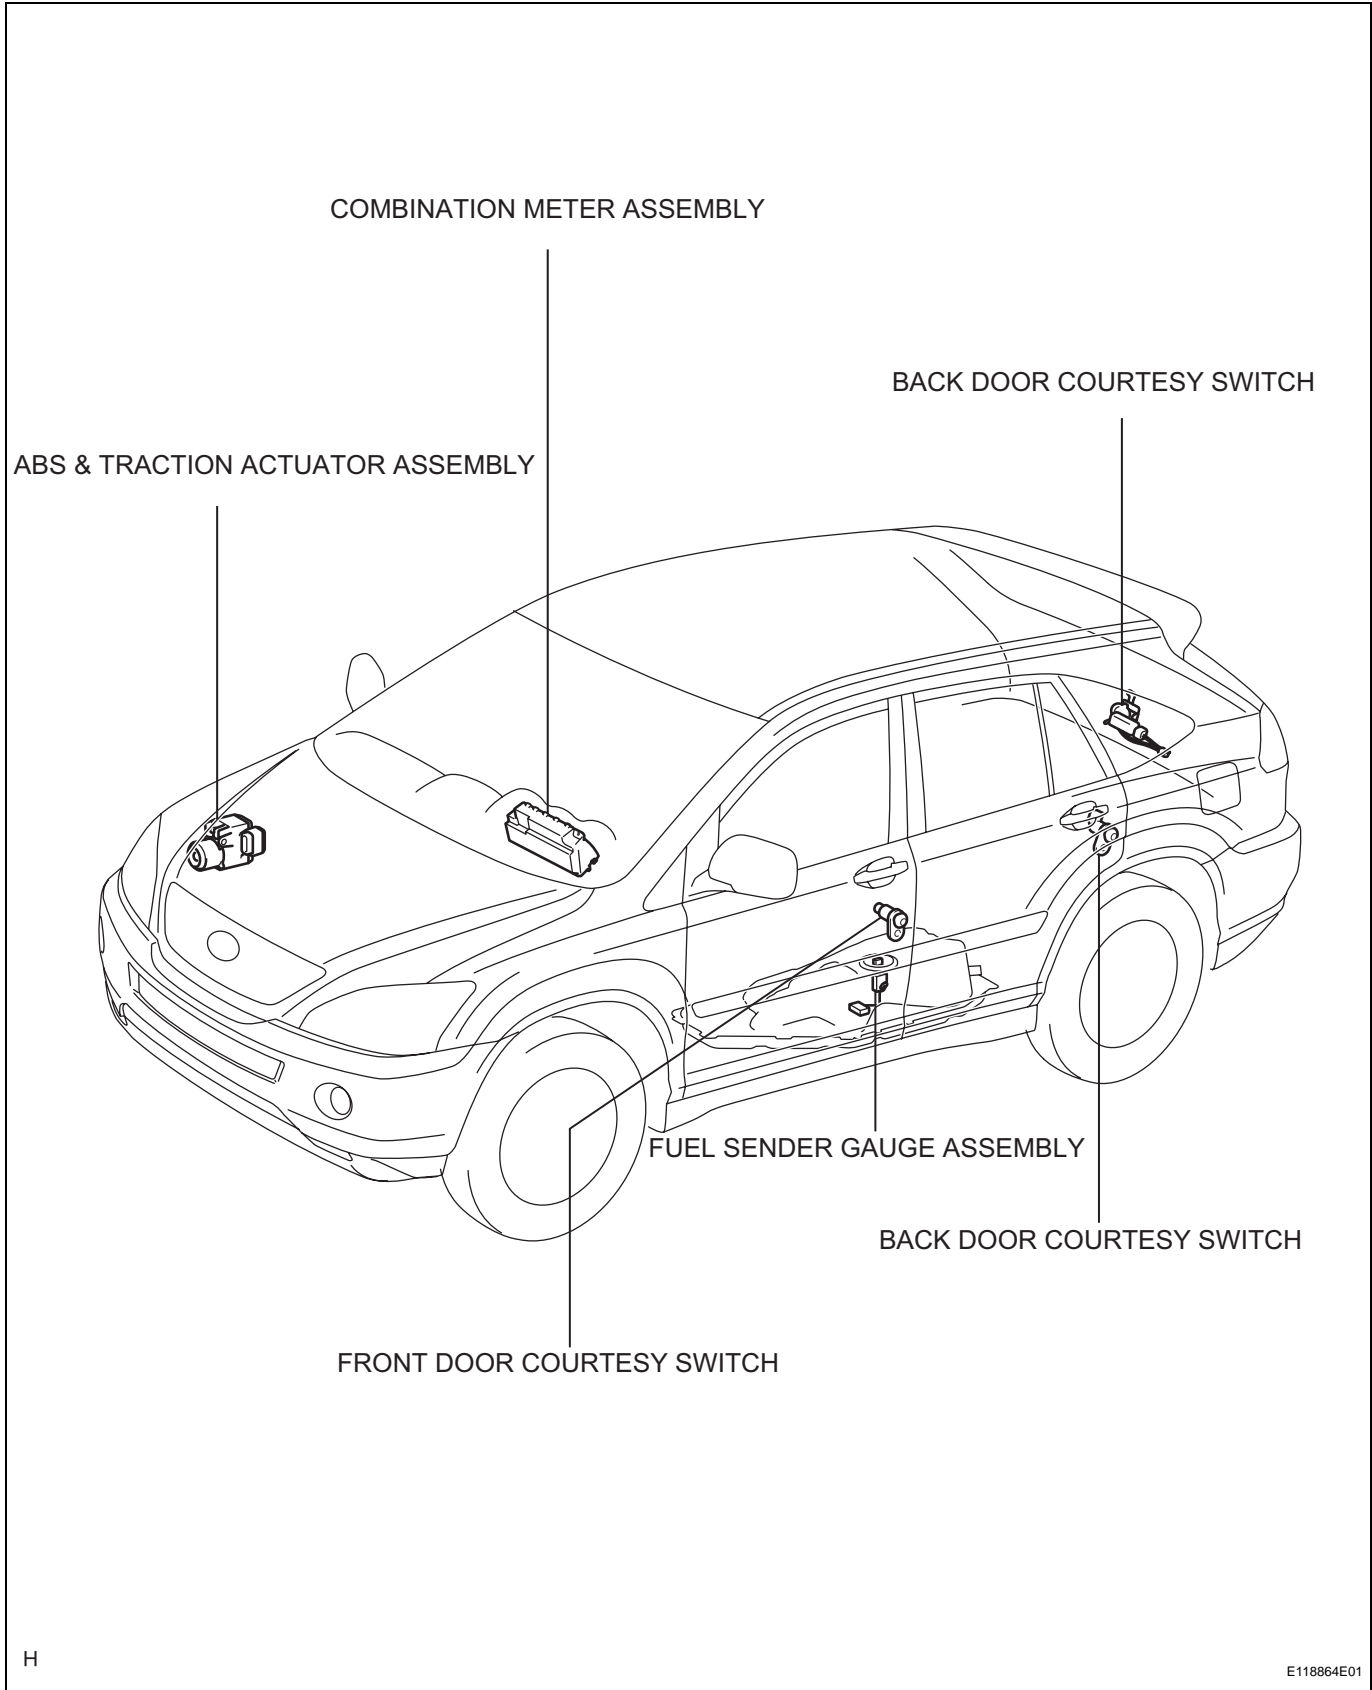


W/ NAVIGATION SYSTEM:

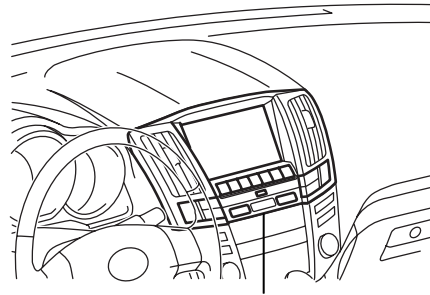

MULTI-DISPLAY ASSEMBLY

LIGHT CONTROL RHEOSTAT

INTEGRATION CONTROL & PANEL ASSEMBLY (*)

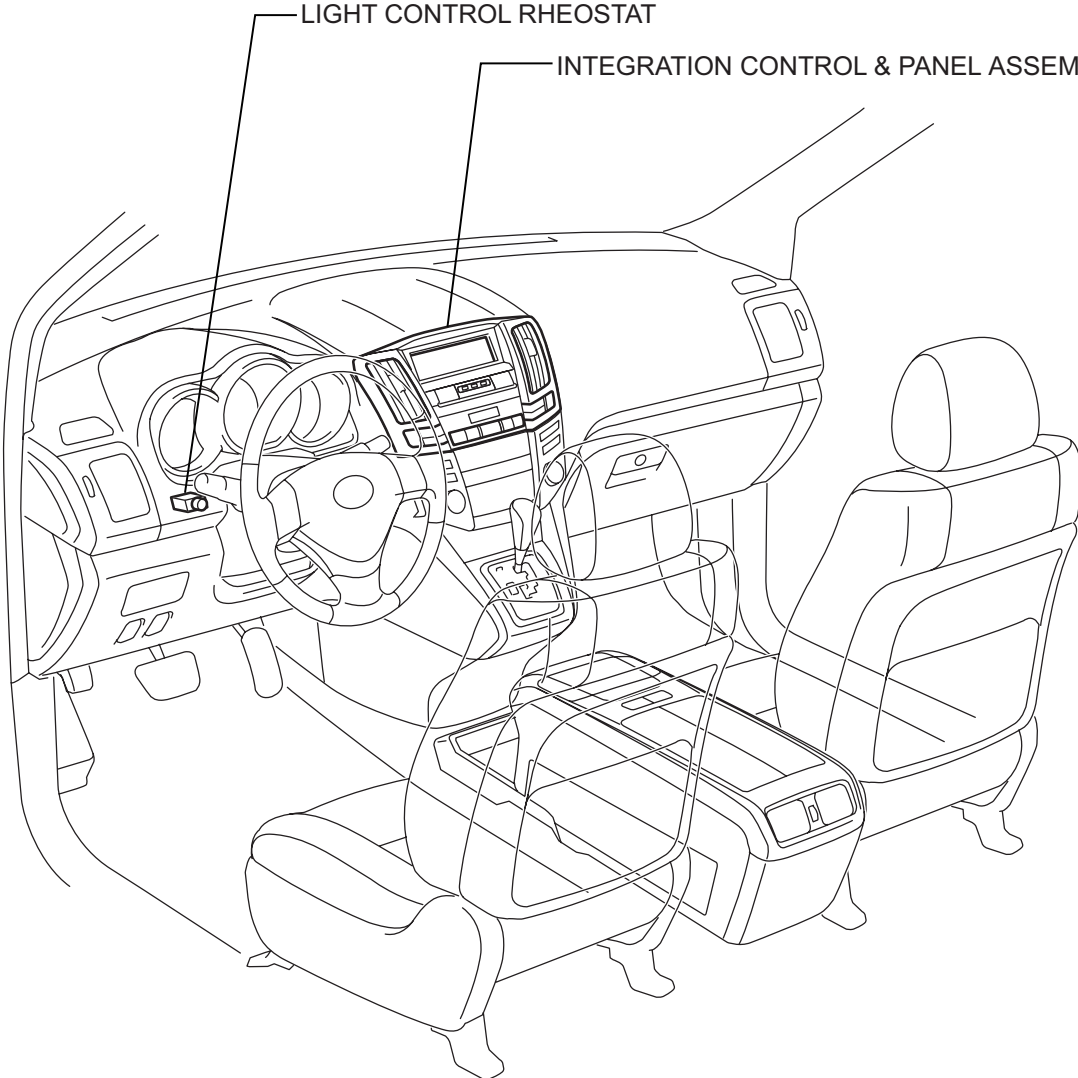

*: W/O NAVIGATION SYSTEM

H

ME