



Entire Combination Meter does not Operate

WIRING DIAGRAM

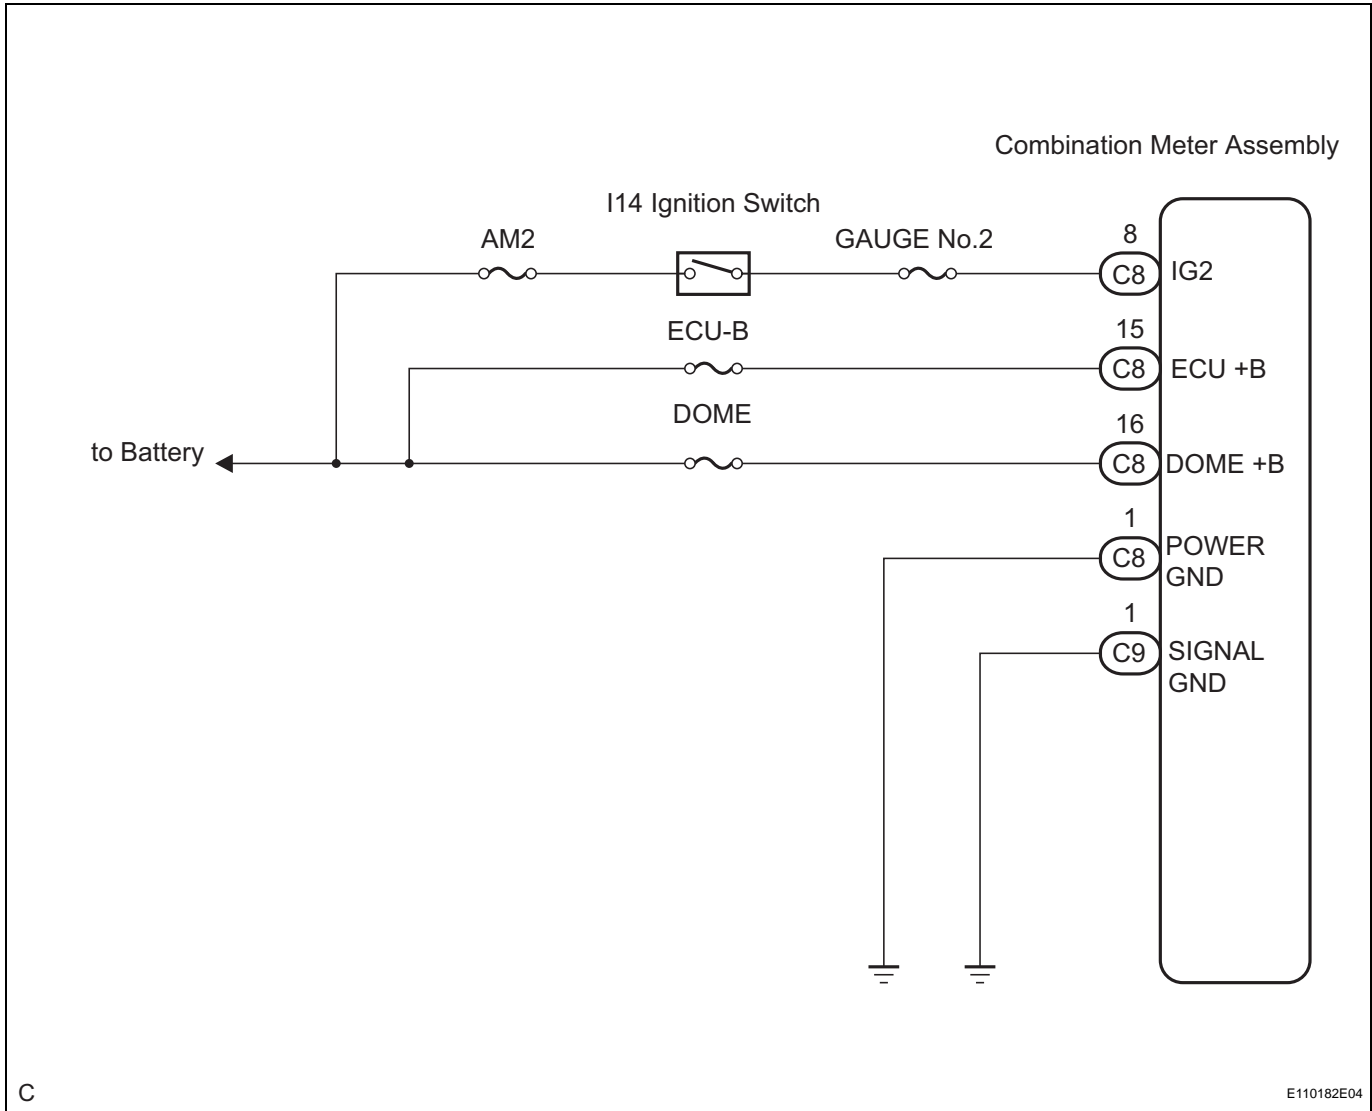

ME

1 INSPECT COMBINATION METER ASSEMBLY

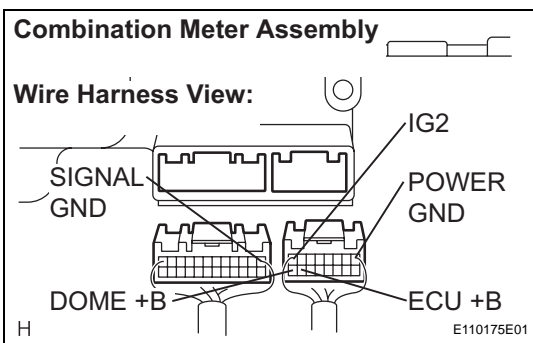

- (a) Disconnect the C8 and C9 connectors.
- (b) Measure the resistance according to the value(s) in the table below.

Standard Resistance

Tester Connection	Condition	Specified Condition
C8-1 (POWER GND) - Body ground	Always	Below 1 Ω
C9-1 (SIGNAL GND) - Body ground	Always	Below 1 Ω

- (c) Measure the voltage according to the value(s) in the table below.

Standard Voltage

Tester Connection	Condition	Specified Condition
C8-8 (IG2) - Body ground	Ignition switch ON	10 to 16 V
C8-15 (ECU +B) - Body ground	Always	10 to 16 V
C8-16 (DOME +B) - Body ground	Always	10 to 16 V

NG

REPAIR OR REPLACE HARNESS OR
CONNECTOR

OK

REPLACE COMBINATION METER ASSEMBLY