



# COMBINATION METER

## COMPONENTS

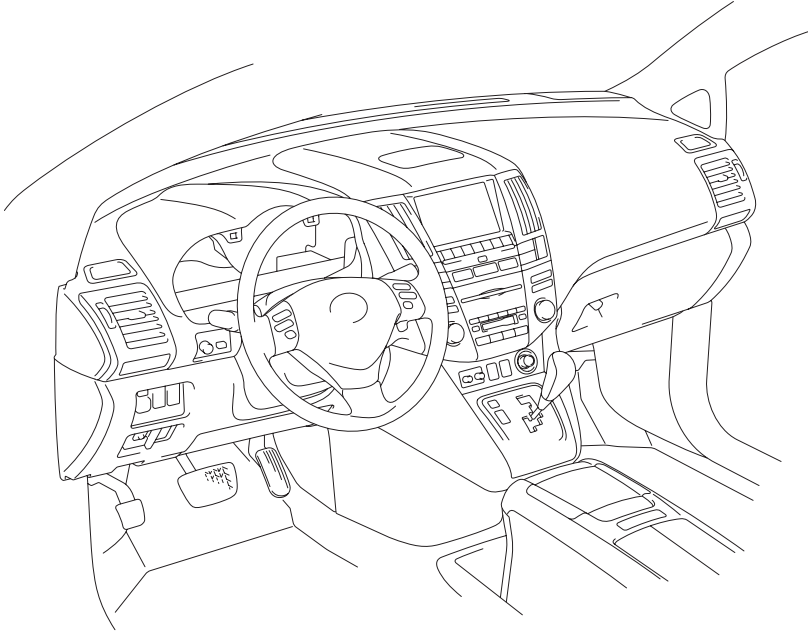


INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

COMBINATION METER ASSEMBLY

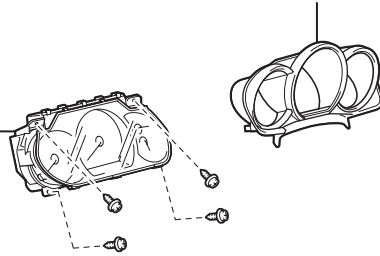

COMBINATION METER GLASS

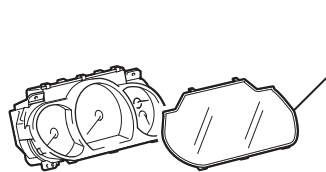

ME

## REMOVAL


1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

**CAUTION:**

Wait for 90 seconds after disconnecting the cable to prevent the airbag working (See page [RS-1](#)).


2. **REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY**

- (a) Disengage the 4 clips and remove the instrument cluster finish panel sub-assembly.

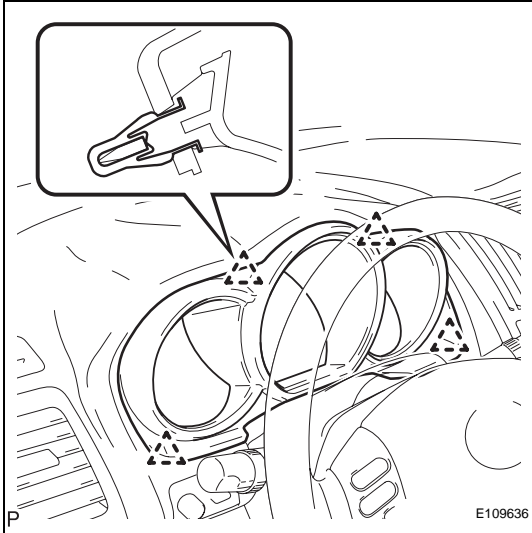

3. **REMOVE COMBINATION METER ASSEMBLY**


- (a) Remove the 4 screws.
- (b) Pull out the combination meter assembly, and disconnect the connectors.

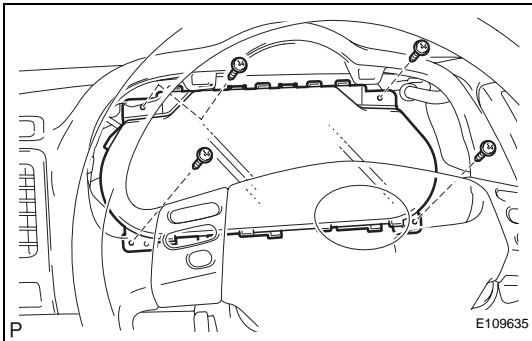

## DISASSEMBLY

### 1. REMOVE COMBINATION METER GLASS

- (a) Disengage the 8 claws and remove the combination meter glass.

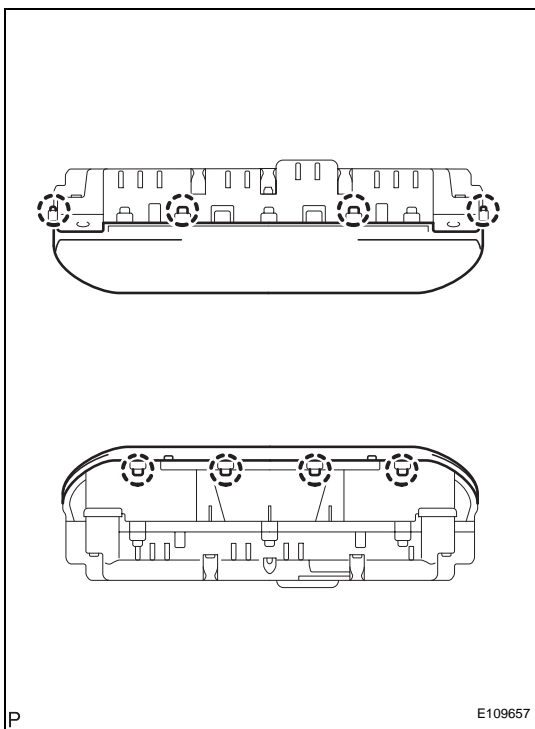

## REASSEMBLY

### 1. INSTALL COMBINATION METER GLASS

- (a) Engage the 8 claws and install the combination meter glass.

