

FUEL SENDER GAUGE ASSEMBLY

INSPECTION

1. INSPECT FUEL SENDER GAUGE ASSEMBLY

- (a) Check the operation of the float moving smoothly between F and E.
- (b) Disconnect the fuel sender gauge connector.
- (c) Remove the fuel sender gauge assembly.
- (d) Measure the resistance between the terminals 2 (FE) and 3 (FS) of connector according to the value(s) in the table below.

OK

Float Level	Resistance (Ω)
F	3.0 to 5.0
E	109.0 to 111.0

HINT:

If the value is not as specified, replace the fuel sender gauge assembly.

