

ENGINE OIL PRESSURE SWITCH

ON-VEHICLE INSPECTION

1. INSPECT ENGINE OIL PRESSURE SWITCH

- (a) Disconnect the connector from the engine oil pressure switch.
- (b) Ground the terminal of wire harness side, then measure the resistance.

Standard Resistance:

Engine idling:

Below 1 Ω

Engine stopped:

10 k Ω or higher

HINT:

If the value is not as specified, replace the engine oil pressure switch.