


STEERING PAD SWITCH

INSPECTION

1. INSPECT STEERING PAD SWITCH

- (a) Remove the steering pad switch LH connector with the steering pad switch RH and spiral cable still connected.

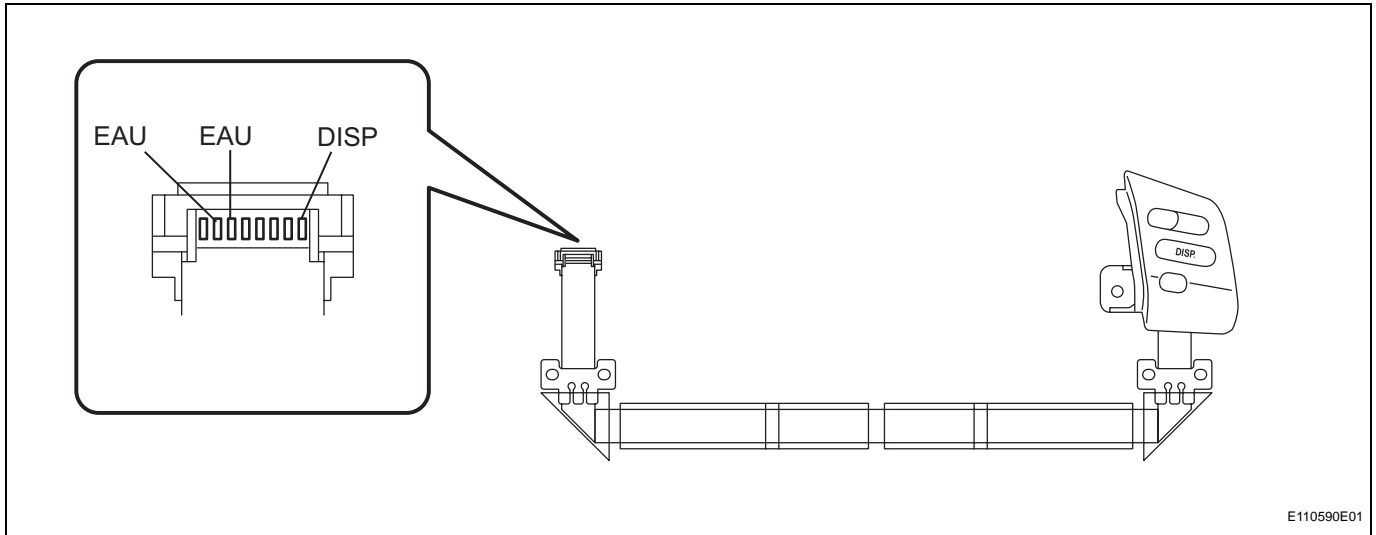

- (b) Measure the resistance according to the value(s) in the table below.

Standard Resistance

Tester Connection	Condition	Specified Condition
DISP - EAU	DISP switch is not pushed in.	10 kΩ or higher
DISP - EAU	DISP switch is pushed in.	Below 1Ω

HINT:

If the value is not as specified, replace the steering pad switch RH.